

HighPoint NVMe G5 Data RAID Installation Guide (Linux)

V1.19– Jan 29, 2024

Copyright 2024 HighPoint Technologies, Inc.

All rights reserved

Contents

Overview	3
Prerequisites for a Data-RAID Configuration	6
UEFI BIOS Settings	6
Driver Installation	9
Installing the Open-Source Driver	9
Updating the Driver	12
Uninstalling the Driver	14
HighPoint RAID Management (WebGUI) Installation	15
Uninstalling the HighPoint RAID Management Software (WEBGUI & CLI)	16
Troubleshooting	17
WebGUI	
Controller and Drive Detection Issues	
Appendix	
How to collect Log information in WEBGUI	
How to collect Log information CLI	25

Overview

This guide includes important hardware/software requirements, installation & upgrade procedures, and troubleshooting tips for using NVMe products with a Linux operating system.

The following is a list of supported NVMe products.

SSD7104SSD7104FSSD7105SSD7105SSD7140ASSD7120SSD7180SSD7184SSD702SSD702SSD7502SSD7505SSD7540SSD7580ASSD7580BSSD7580CSSD7580CSSD7749M2SSD7749M2SSD7749M2RocketAIC 7105HW SeriesRocketAIC 7505HW SeriesRoc	Commente 1 A ICo	CCD7101A 1
SSD7104FSSD7104FSSD7105SSD7140ASSD7120SSD7120SSD7180SSD7184SSD7202SSD7204SSD7505SSD7505SSD7506SSD7580ASSD7580BSSD7580CSSD7580CSSD7580CSSD7580CSSD7580CSSD7580CSSD7580CSSD7580CSSD7580CSSD7580CSSD7749ESSD7749M2RocketAIC 7105HW SeriesRocketAIC 7105HW SeriesRocketAIC 7505HW SeriesRocketAIC 7540HW SeriesRocketAIC 7540HW SeriesRocketAIC 7540HW SeriesRocketAIC 7540HW Series	Supported AICs	SSD7101A-1
SSD7105SSD7140ASSD7120SSD7120SSD7180SSD7184SSD7202SSD7204SSD7505SSD7505SSD7506SSD7580ASSD7580BSSD7580CSSD7580CSSD7580CSSD7749PESSD7749PESSD7749M2RocketAIC 7105HW SeriesRocketAIC 7502HW SeriesRocketAIC 7505HW SeriesRocketAIC 7540HW Series <th></th> <th></th>		
SSD7140A SSD7120 SSD7180 SSD7180 SSD7184 SSD7202 SSD7204 SSD7204 SSD7502 SSD7502 SSD7505 SSD7505 SSD7540 SSD7540 SSD7580A SSD7580A SSD7580B SSD7580B SSD7580B SSD7580B SSD7580B SSD7580B SSD7580B SSD7580B SSD7580B SSD7749H SSD7749H SSD7749H SSD7749H SSD7749H SSD7749M2 RocketAIC 7105HW Series RocketAIC 7105HW Series RocketAIC 7505HW Series		SSD7104F
SSD7120 SSD7180 SSD7184 SSD7202 SSD7202 SSD7204 SSD7204 SSD7505 SSD7505 SSD7505 SSD7505 SSD7580A SSD7580A SSD7580B SSD7580B SSD7580B SSD7580B SSD7580C SSD7580C SSD7580C SSD7749E SSD7749E SSD7749P SSD7749P SSD7749M SSD7749M2 RocketAIC 7105HW Series RocketAIC 7105HW Series RocketAIC 7505HW Series		SSD7105
SSD7180 SSD7184 SSD7202 SSD7204 SSD7204 SSD7505 SSD7505 SSD7505 SSD7540 SSD7580A SSD7580B SSD7580B SSD7580B SSD7580B SSD7580C SSD7580C SSD7749E SSD7749M SSD7749F SSD7749F SSD7749M SSD7749M2 RocketAIC 7105HW Series RocketAIC 7105HW Series RocketAIC 7502HW Series RocketAIC 7502HW Series RocketAIC 7502HW Series		SSD7140A
SSD7184 SSD7202 SSD7204 SSD7204 SSD7502 SSD7505 SSD7505 SSD7505 SSD7580A SSD7580B SSD7580B SSD7580B SSD7580B SSD7580C SSD7749E SSD7749E SSD7749E SSD7749M SSD7749M2 RocketAIC 7105HW Series RocketAIC 7105HW Series RocketAIC 7502HW Series RocketAIC 7502HW Series RocketAIC 7502HW Series		SSD7120
SSD7202 SSD7204 SSD7502 SSD7505 SSD7505 SSD7505 SSD7540 SSD7580A SSD7580B SSD7580B SSD7580C SSD7749E SSD7749E SSD7749E SSD7749M SSD7749M SSD7749M2 RocketAIC 7105HW Series RocketAIC 7105HW Series RocketAIC 7102HW Series RocketAIC 7502HW Series RocketAIC 7502HW Series RocketAIC 7502HW Series		SSD7180
SSD7204 SSD7502 SSD7505 SSD7505 SSD7540 SSD7580A SSD7580B SSD7580B SSD7580C SSD7580C SSD7749E SSD7749E SSD7749E SSD7749M2 RocketAIC 7105HW Series RocketAIC 7105HW Series RocketAIC 7105HW Series RocketAIC 7502HW Series RocketAIC 7502HW Series RocketAIC 7505HW Series		SSD7184
SSD7502SSD7505SSD7505SSD7540SSD7580ASSD7580BSSD7580CSSD7749ESSD7749MSSD7749M2RocketAIC 7105HW SeriesRocketAIC 7140AW SeriesRocketAIC 7502HW SeriesRocketAIC 7505HW SeriesRocketAIC		SSD7202
SSD7505 SSD7540 SSD7580A SSD7580B SSD7580B SSD7580C SSD7580C SSD7749E SSD7749E SSD7749M SSD7749M2 RocketAIC 7105HW Series RocketAIC 7105HW Series RocketAIC 7140AW Series RocketAIC 7502HW Series RocketAIC 7505HW Series RocketAIC 7505HW Series RocketAIC 7505HW Series		SSD7204
SSD7540SSD7580ASSD7580BSSD7580BSSD7580CSSD7749ESSD7749MSSD7749M2RocketAIC 7105HW SeriesRocketAIC 7140AW SeriesRocketAIC 7502HW SeriesRocketAIC 7505HW S		SSD7502
SSD7580A SSD7580B SSD7580C SSD7580C SSD7749E SSD7749M SSD7749M2 RocketAIC 7105HW Series RocketAIC 7140AW Series RocketAIC 7502HW Series RocketAIC 7502HW Series RocketAIC 7505HW Series RocketAIC 7505HW Series RocketAIC 7540HW Series		SSD7505
SSD7580B SSD7580C SSD7749E SSD7749M SSD7749M2 RocketAIC 7105HW Series RocketAIC 7140AW Series RocketAIC 7502HW Series RocketAIC 7505HW Series RocketAIC 7505HW Series RocketAIC 7540HW Series		SSD7540
SSD7580C SSD7749E SSD7749M SSD7749M2 RocketAIC 7105HW Series RocketAIC 7140AW Series RocketAIC 7502HW Series RocketAIC 7505HW Series RocketAIC 7505HW Series RocketAIC 7540HW Series		SSD7580A
SSD7749E SSD7749M SSD7749M2 RocketAIC 7105HW Series RocketAIC 7140AW Series RocketAIC 7502HW Series RocketAIC 7505HW Series RocketAIC 7505HW Series RocketAIC 7540HW Series		SSD7580B
SSD7749M SSD7749M2 RocketAIC 7105HW Series RocketAIC 7140AW Series RocketAIC 7502HW Series RocketAIC 7505HW Series RocketAIC 7505HW Series RocketAIC 7540HW Series		SSD7580C
SSD7749M2 RocketAIC 7105HW Series RocketAIC 7140AW Series RocketAIC 7502HW Series RocketAIC 7505HW Series RocketAIC 7540HW Series RocketAIC 7540HW Series		SSD7749E
RocketAIC 7105HW SeriesRocketAIC 7140AW SeriesRocketAIC 7502HW SeriesRocketAIC 7505HW SeriesRocketAIC 7540HW SeriesRocketAIC 7540HW SeriesRocketAIC 7749EW Series		SSD7749M
RocketAIC 7140AW SeriesRocketAIC 7502HW SeriesRocketAIC 7505HW SeriesRocketAIC 7540HW SeriesRocketAIC 7749EW Series		SSD7749M2
RocketAIC 7502HW SeriesRocketAIC 7505HW SeriesRocketAIC 7540HW SeriesRocketAIC 7749EW Series		RocketAIC 7105HW Series
RocketAIC 7505HW Series RocketAIC 7540HW Series RocketAIC 7749EW Series		RocketAIC 7140AW Series
RocketAIC 7540HW Series RocketAIC 7749EW Series		RocketAIC 7502HW Series
RocketAIC 7749EW Series		RocketAIC 7505HW Series
		RocketAIC 7540HW Series
RocketAIC 7749MW Series		RocketAIC 7749EW Series
		RocketAIC 7749MW Series

	SSD6540
Supported Enclosure	SSD6540M
	SSD6444

Prerequisites

This section describes the base hardware and software requirements for the NVMe products.

UEFI BIOS settings

This section describes how to configure your motherboard UEFI settings for use with NVMe products.

Driver Installation

This section covers driver installation, driver upgrade, and driver uninstallation procedures for NVMe products. in a Linux environment.

Management Software Installation

This section explains how to download and install the HighPoint RAID Management Software Suite for Linux distributions. The download includes both the Web RAID Management Interface (WebGUI) and the CLI (Command Line Interface).

Troubleshooting

Please consult this section if you encounter any difficulties installing or using NVMe products. It includes solutions and descriptions for commonly reported technical issues.

Appendix

This section describes how to collect troubleshooting information for support cases you have submitted via our Online Support Portal.

Prerequisites for a Data-RAID Configuration

In order to configure a non-bootable NVMe RAID array, you will need the following:

 An NVMe SSD must be installed. At least one NVMe SSD must be installed into or connected to the NVMe products.

Note: The RocketAIC series NVMe drives already include pre-configured SSDs.

- 2. A PCIe 5.0 or PCIe 4.0 slot or PCIe3.0 with x8 or x16 lanes. The NVMe products must be installed into a PCIe 5.0 or PCIe 4.0 slot or PCIe3.0 with x8 or x16 lanes.
- **3.** Your motherboard must have a UEFI BIOS with option ROM settings for third-party devices (such a s NVMe products, optical drives, and USB flash drives). If this is not configured correctly, the system will fail to load the NVMe products. Please check the NVMe products's compatibility lists for recommended motherboards.
- 4. Secure Boot must be disabled. HighPoint Linux Driver capability has not been signed and certified. If Secure Boot is enabled, the motherboard will not recognize the NVMe products, and you will be unable to proceed with installation.
- 5. Make sure any non-HighPoint drivers are uninstalled for any SSDs hosted by the NVMe products. Drivers provided by 3rd party software and manufacturers may prevent the NVMe products from functioning properly.

Warnings:

- 1) Failing to remove the NVMe products and SSDs when uninstalling the driver may result in data loss.
- 2) Always make sure the HighPoint Linux driver is installed before moving NVMe products & RAID array to another Linux system.

Linux distributions will always load the default NVMe support after the HighPoint Linux driver has been uninstalled, or if it detects the presence of a card when no driver has been loaded – this driver will only recognize the NVMe SSDs as separate disks.

If the SSDs are recognized separately, any data they contain may be lost – including RAID configuration data.

UEFI BIOS Settings

The following is a list of supported UEFI NVMe products.

Supported AIC	SSD7105
	SSD7202
	SSD7502
	SSD7505
	SSD7540
	SSD7580A
	SSD7580B
	SSD7580C
	SSD7749M
	SSD7749E
	RocketAIC 7105HW Series
	RocketAIC 7502HW Series
	RocketAIC 7505HW Series
	RocketAIC 7540HW Series
	RocketAIC 7749EW Series
	RocketAIC 7749MW Series

Note: Products that do not support UEFI can skip this section.

Different motherboards will provide different UEFI-related BIOS settings. Please consult your motherboard's user manual for more information. This section provides examples using a SuperMicro H12SSL-i motherboard.

- 1. Boot the system and access the motherboard BIOS menu.
- Under "Advanced->PCIe/PCI/PnP Configuration->, change "CPU Slot x PCI-E OPROM" to "EFI". "x" represents the PCIE slot assignment. For this example, the SSD7505 is installed into "CPU Slot 1".

PCI Bus Driver Version	A5.01.19	Enables or disables CPU
PCI Devices Common Settings:		SLOT1 PCI-E 4.0 X16 OPROM option.
Above 4G Decoding	[Enabled]	operon.
SR-IOV Support	[Disabled]	
BME DMA Mitigation	[Disabled]	
PCIe ARI Support	[Auto]	
PCIe Ten Bit Tag Support	[Auto]	
PCIe Spread Spectrum	(Disabled)	
Relaxed Ordering	[Enabled]	
No Shoop	[Enabled]	
VGA Priority	[Onboard]	
NVMe Firmware Source	[Vendor Defined	
	Firmware]	
M.2 (AHCI) Firmware Source	[Vendor Defined	
	Firmware]	
Onboard LAN	[Enabled]	
		++: Select Screen
		11: Select Item
CPU SLOT2 PCT-E 4 0 X8 OPROM	[Ledecu]	Enten: Select

3. Set "Secure Boot" to "Disabled".

HighPoint NVMe G5 Data RAID Installation Guide (Linux)

	Security	
System Mode	Audit	Secure Boot feature is
Vendor Keys	Active	Active if Secure Boot is
Secure Boot	Not Active	Enabled, Platform Key(PK) is
		enrolled and the System is in User mode.
Secure Boot Mode	[Custom]	The mode change requires
CSM Support	[Enabled]	platform reset

 
Driver Installation

Installing the Open-Source Driver

- 1. Power on the system and boot the Linux distribution.
- 2. Open a system terminal with root privileges, and verify that the **NVMe product** is detected by using the following command:

lspci -tvv

Example screenshot



Note: the picture is only for reference, please make the object as the standard.

Additionally, you can verify that the NVMe drives are detected by using the following command:

fdisk -l

Example screenshot

```
Disk /dev/nvme1n1: 931.53 GiB, 1000204886016 bytes, 1953525168 sectors
Disk model: Sabrent Rocket 4.0 1TB
Units: sectors of 1 * 512 = 512 bytes
Sector size (logical/physical): 512 bytes / 512 bytes
I/O size (minimum/optimal): 512 bytes / 512 bytes
Disk /dev/nvme3n1: 1.84 TiB, 2000398934016 bytes, 3907029168 sectors
Disk model: Seagate FireCuda 520 SSD ZP2000GM30002
Units: sectors of 1 * 512 = 512 bytes
Sector size (logical/physical): 512 bytes / 512 bytes
I/O size (minimum/optimal): 512 bytes / 512 bytes
Disklabel type: gpt
Disk identifier: 54C26E76-64FE-4A0A-9047-76A424A679E0
Device
                   Start
                             End Sectors Size Type
/dev/nvme3n1p1 34 32767 32734 16M Microsoft reserved
Disk /dev/nvme0n1: 953.89 GiB, 1024209543168 bytes, 2000409264 sectors
Disk model: KXG60ZNV1T02 TOSHIBA
Units: sectors of 1 * 512 = 512 bytes
Sector size (logical/physical): 512 bytes / 512 bytes
I/O size (minimum/optimal): 512 bytes / 512 bytes
Disk /dev/nvme2n1: 223.58 GiB, 240057409536 bytes, 468862128 sectors
Disk model: WDC WDS240G2G0C-00AJM0
Units: sectors of 1 * 512 = 512 bytes
Sector size (logical/physical): 512 bytes / 512 bytes
I/O size (minimum/optimal): 512 bytes / 512 bytes
```

Note: the picture is only for reference, please make the object as the standard.

3. Download the appropriate driver from the Software Downloads web page.

4. Using the system terminal with root privileges, browse to the directory where the driver download is located, and enter the following commands to extract the Linux Open-source Driver software package:


tar zxvf HighPoint_NVMe_G5_Linux_Src_vx.xxx_xx_xx_tar.gz

root@testlu-Super-Server:/home/testlu/Documents# tar zxvf HighPoint_NVMe_G5_Linux_Src_v1.5.1_2023_02_21.tar.gz hptnvme_g5_linux_src_v1.5.1_2023_02_21.bin README

Note: The driver revision shown in the screenshots may not correspond with current software releases. Please make sure to download the latest driver updates from the product's Software Updates page.

 Install the open-source Driver using the following command. sh hptnvme_g5_linux_src_vx.x.xx_xx_xx_src_vx.s.bin or

./hptnvme_g5_linux_src_vx.x.xx_xx_xx_xx.bin

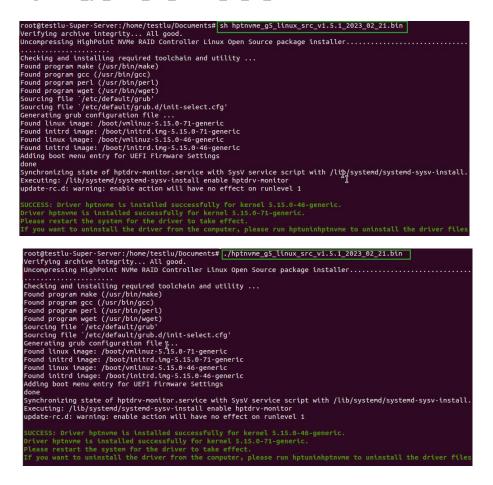

6. After driver installation is complete, the system will prompt you to restart to make the driver take effect. **Manually restart the system.**

7. After the distribution has rebooted, open the system terminal with root privileges and check the driver status using the following command:

dmesg | grep hptnvme

The following screeenshot shows driver v1.5.1.

root@testlu-Super-Server:/home/testlu/Documents#[dmesg | grep hptnvme]
[10.015942] hptnvme: loading out-of-tree module taints kernel.
[10.015942] hptnvme: module license 'Proprietary' taints kernel.
[10.016087] hptnvme: module verification failed: signature and/or required key missing - tainting kernel
[10.9603] hptnvme: HighPoint NVWe RAID controller success (retry:0).
[10.976611] scst host0: hptnvme: [dd] probe controller for [10.976611] scst host0: hptnvme: [dd] probe controller [11.032393] hptnvme: [dd] probe controller [11.032393] hptnvme: [dd] probe controller [11.032355] hptnvme: [dd] hard reset 0 done (timeout 60)
[12.048556] hptnvme: [dd] hard reset 0 done (timeout 20)
[12.048554] hptnvme: [df] hard reset 0 done (timeout 60)
[12.048554] hptnvme: [df] hard reset 0 done (timeout 60)
[12.048554] hptnvme: [df] hard reset 0 done (timeout 60)
[12.048554] hptnvme: [df] hard reset 0 done (timeout 60)
[12.048555] hptnvme: [df] hard reset 0 done (timeout 60)
[12.048555] hptnvme: [df] hard reset 0 done (timeout 60)
[12.048556] hptnvme: [df] hard reset 0 done (timeout 60)
[12.048556] hptnvme: [df] hard reset 0 done (timeout 60)
[12.048556] hptnvme: [df] hard reset 0 done (timeout 60)
[12.048556] hptnvme: [df] hard reset 0 done (timeout 60)
[12.048555] hptnvme: [df] hard reset 0 done (timeout 60)
[12.048555] hptnvme: [df] hard reset 0 done (timeout 60)
[12.048555] hptnvme: [df] hard reset 0 done (timeout 60)
[12.048555] hptnvme: [df] hard reset 0 done (timeout 60)
[12.048555] hptnvme: [df] hard reset 0 done (timeout 60)
[12.048555] hptnvme: [df] hard reset 0 done (timeout 60)
[12.048555] hptnvme: [df] hard reset 0 done (timeout 60)
[12.048555] hptnvme: [df] hard reset 0 done (timeout 60)
[12.048555] hptnvme: [df] hard reset 0 done (timeout 60)
[12.048555] hptnvme: [df] hard reset 0 done (timeout 60)
[12.048555] hptnvme: [df] hard reset 0 done (timeout 60)
[12.048555] hptnvme: [df] hard reset 0 done (timeout 6

Additionally, you can check the NVMe drive using the following command: **fdisk** –**l**

```
Disk /dev/hptblock0n0p: 953 89 GiB, 1024209543168 bytes, 2000409264 sectors
Units: sectors of 1 * 512 = 512 bytes
Sector size (logical/physical): 512 bytes / 512 bytes
I/O size (minimum/optimal): 512 bytes / 512 bytes
Disk /dev/hptblock0n1p: 931.53 GiB, 1000204886016 bytes, 1953525168 sectors
Units: sectors of 1 * 512 = 512 bytes
Sector size (logical/physical): 512 bytes / 512 bytes
Disk /dev/hptblock0n2p: 223.58 GiB, 240057409536 bytes, 468862128 sectors
Units: sectors of 1 * 512 = 512 bytes
Disk /dev/hptblock0n2p: 223.58 GiB, 240057409536 bytes, 468862128 sectors
Units: sectors of 1 * 512 = 512 bytes
Disk /dev/hptblock0n3p: 1.84
Units: sectors of 1 * 512 = 512 bytes
Disk /dev/hptblock0n3p: 1.84
Units: sectors of 1 * 512 = 512 bytes
Disk /dev/hptblock0n3p: 1.84
Units: sectors of 1 * 512 = 512 bytes
Disk /dev/hptblock0n3p: 1.84
Units: sectors of 1 * 512 = 512 bytes
Disk /dev/hptblock0n3p: 1.84
Units: sectors of 1 * 512 = 512 bytes
Disk /dev/hptblock0n3p: 1.84
Units: sectors of 1 * 512 = 512 bytes
Disk /dev/hptblock0n3p: 1.84
Units: sectors of 1 * 512 = 512 bytes
Disk /dev/hptblock0n3p: 1.84
Units: sectors of 1 * 512 = 512 bytes
Disk /dev/hptblock0n3p: 1.84
Disk /dev/hptblock0n3p: 1
```

Updating the Driver

As of May 2022, current open-source driver releases include our Auto-Compile feature – auto-compile checks the kernel version each time the system is booted to ensure compatibility. If a new kernel is detected, Auto Compile will check our online database for required updates and automatically compile a new driver.

The latest open-source driver is available from the Software Downloads web pages. If you want to manually update using this download, please follow the procedure below.

1. Prerequisites

- a. Ensure that NVMe product is installed into the motherboard.
- b. Open the system terminal with root privileges to check the current driver version by using the following command: **dmesg** | **grep hptnvme**.

The screenshot below shows driver version v1.2.13 is installed:

[roo	ot@localhost Downloads]# dmesg grep hptnvme
1	4.431322] hptnvme: loading out-of-tree module taints kernel.
[4.431325] hptnvme: module license 'Proprietary' taints kernel.
L	4,431706] hptnyme: module verification failed: signature and/or required key missing - tainting kernel
E	5.381222] hptnvme: HighPoint NVMe RAID controller driver (65) v1.2.13 block major fc
	5.382480] scsi host6: hptnvme
1	5.382617] hptnvme 0000:03:00.0: irq 145 for MSI/MSI-X
[5.382622] hptnvme 0000:03:00.0: irq 146 for MSI/MSI-X
1	5.382625] hptnvme 0000:03:00.0: irg 147 for MSI/MSI-X
Ĩ	5.382630] hptnyme 0000:03:00.0: irg 148 for MSI/MSI-X
1	5.382633] hptnyme 0000:03:00.0: irg 149 for MSI/MSI-X
1	5.382637] hptnyme 0000:03:00.0: irg 150 for MSI/MSI-X

2. Updating the driver


- a. Open the directory where the latest driver version is located and open the system terminal with root privileges. Execute the following commands to complete the installation. The illustrated driver version is v1.5.1.
- b. Extract the Linux Opensource Driver software package using the following command:

tar zxvf HighPoint_NVMe_G5_Linux_Src_vx.x.xx_xx_xx_tar.gz



c. Make sure the system has an active internet connection. To manually install the latest Open-source Driver, open the system terminal with root privileges and enter the following command:

./hptnvme_g5_linux_src_vx.x.xx_xx_xx_xx.bin

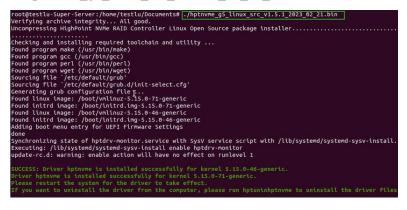

d. After the driver installation is complete, the system will prompt you to restart to allow the new driver to take effect. Please manually restart the system.

Note: for more information about this procedure, please consult the readme file included with each *Openn-source download.*

e. Once the distribution has rebooted, open the system terminal with root privileges and check the current driver version using the following command.

dmesg | grep hptnvme.

The screenshot below shows driver v1.5.1 is installed:

root@testlu-S	uper-Server:/home/testlu/Documents#[dmesg grep hptnvme]
[10.015942]] hptnyme: loading out-of-tree module taints kernel.
[10.015949]	hptnyme: module license 'Proprietary' taints kernel.
[10.016087]] hptnyme: module verification failed: signature and/or required key missing - tainting kernel
[10.896014]	
[10.962603]	
] scsi host 0: hptnyne
[10.991238]	
[11.011390]	
[11.032393]	
[11.052610]	
[12.028555]	
[12.028585]	
[12.044556	
[12.068545]] hptnyme: [df] hard reset 0 done (timeout 60)

- f. Open the WebGUI to make sure it can connect to the NVMe product and recognize the NVMe SSDs/RAID array.
- g. As shown below, the new driver has been successfully installed and loaded at bootup the WebGUI can connect to the NVMe product and recognize the SSDs and RAID array.

	0.000	Help	SHI	Event	Setting	Logical	Physical	Global View
		ties	e Proper	Storag				BA Properties
N.	4264 GB city: 4264 GB	Total Capacity: Configured Capaci		6	Controller	t NVMe RAID	al: HighPoin	lost Adapter mode
	0 GB	Free Capacity:					4	Physical Drive:
							4	egacy Disk:
		jured 100.0%	Config				0	AID Count:

Uninstalling the Driver

1. Prerequisites

a. Power off the system and remove the NVMe product from the motherboard.
 Note: failing to remove the NVMe product and SSDs when uninstalling the driver may result in data loss. The Linux distribution will load the default NVMe support after the HighPoint Linux driver has been uninstalled – this driver will only recognize the NVMe SSDs as separate disks.

2. To uninstall the driver:

a. Open the system terminal with root privileges. Enter the following commands to uninstall the driver:

hptuninhptnvme

b. Press 'Y' to confirm.

```
[root@localhost Downloads]# hptuninhptnvme
Are you sure to uninstall the driver hptnvme from system? (Y/n): y
Removed symlink /etc/systemd/system/default.target.wants/hptdrv-monitor.service.
Removed symlink /etc/systemd/system/sysinit.target.wants/systemd-hptdrv.service.
All files installed have been deleted from the system.
[root@localhost Downloads]#
```

- c. After uninstalling the driver, manually reboot the system.
- d. After the distribution has rebooted, open the system terminal with root privileges. Enter the following command to check the driver status:

lsmod | grep hptnvme

```
Before uninstalling:

[root@localhost test]# lsmod | grep hptnvme

hptnvme 235401 0

After uninstalling:

[root@localhost test]# lsmod | grep hptnvme

[root@localhost test]# ]
```

e. If the system does not display information about "**hptnvme**", the driver has been successfully uninstalled.

HighPoint RAID Management (WebGUI) Installation

The HighPoint RAID Management software is used to configure and monitor the SSDs hosted by the NVMe product.

Download the HighPoint RAID Management software package from the HighPoint website.

1. Using the system terminal with root privileges, browse to the directory where the software is downloaded, and enter the following commands to extract the management software package:

tar zxvf RAID_Manage_Linux_v3.x.x.x_x_x_tgz

root@testlu-Super-Server:/home/testlu/Desktop# tar zxvf RAID_Manage_Linux_v3.1.12_22_11_01.tgz HPT_CLI_Guide.pdf README.txt RAID_Manage_Linux_v3.1.12_22_11_01.bin

Note: The driver revision shown in the screenshots may not correspond with current software releases. *Please make sure to download the latest driver updates from the product's Software Updates page.*

 Install the HighPoint RAID management software (WebGUI & CLI) using the following command: ./ RAID_Manage_Linux_v2.x.x_x_x.bin

root@testlu-Super-Server:/home/testlu/Desktop# ./RAID_Manage_Linux_v3.1.12_22_11_01.bin

- 3. After the software is installed, open the WebGUI to make sure it can connect to the NVMe product.
- 4. You can also check the NVMe product using the CLI (command line interface). Using the system terminal, enter the following command:

hptraidconf

For more information about the CLI, please download the guide: Link.

HPT CLI	>query devi	ces							
ID	Capacity	MaxFree	Flag	Status	ModelNu	nber			
1/E1/1	250.06	0	SINGLE	LEGACY	Samsung	SSD	960	EVO	250GB
1/E1/2	250.06	0	SINGLE	LEGACY	Samsung	SSD	960	EVO	250GB
1/E1/3	250.06	0	SINGLE	LEGACY	Samsung	SSD	960	EV0	250GB
1/E1/4	250.06	0	SINGLE	LEGACY	Samsung	SSD	960	EV0	250GB

5. If the WebGUI/CLI can connect to the NVMe product and recognize the NVMe SSDs, the driver has been installed and is functioning normally.

Example screenshot

Event SHI Help	Setting	Logical	Physical	Global View
Storage Properties			S	BA Properties
Total Capacity: 4	Controller	NVMe RAID	del: HighPoint	ost Adapter mod
			1	nclosure count:
Configured Capacity: 4				
Configured Capacity: 4 Free Capacity: 0			4	hysical Drive:

Uninstalling the HighPoint RAID Management Software (WEBGUI & CLI)

Open the system terminal with root privileges. Enter the following commands to uninstall the RAID Management:

dpkg -r hptsvr (or rpm -e hptsvr-https)

root@testlu-Super-Server:/home/testlu/Desktop# dpkg -r hptsvr (Reading database ... 183888 files and directories currently installed.) Removing hptsvr (3.1.12) ...

Enter the following command to check if the RAID Management has been removed successfully:

hptraidconf

after uninstall:

root@testlu-Super-Server:/home/testlu/Desktop# hptraidconf bash: /usr/bin/hptraidconf: No such file or directory

Troubleshooting

WebGUI

1. The WebGUI fails to install

If you use an Ubuntu system, the system may prompt you about the lack of a **readline5** package when installing the WebGUI – this will interrupt the installation process.




Solution:

- a. With root permissions enabled, you can use the following command to load readline5 using a terminal, and will be allowed to install the WebGUI:
 apt-get install libreadline5
- b. Once complete, restart the WebGUI installation procedure.

2. The WebGUI cannot connect to the NVMe product

If you are unable to access the NVMe product using the WebGUI:

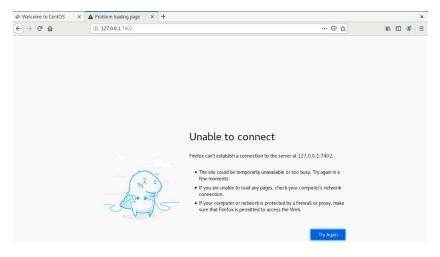

a. WebGUI service did not start successfully.

Solution:

Start the WebGUI by opening the system terminal with root privileges and entering the following command: **hptsvr**

b. The driver cannot be compiled.



Solution:

- 01. Make sure at least one NVMe SSD has been installed into the NVMe product.
- 02. Make sure the motherboard can recognize the NVMe product and display NVMe information during the BIOS post.
- 03. If you use a CentOS system, open the system terminal with root privileges and enter the following command to install "elfutils-libelf-devel":

yum install elfutils-libelf-devel

Once complete, install the HighPoint NVMe Linux driver once more.

04. If you use an Ubuntu/Debian system, open the system terminal with root privileges and enter the following command to install "libelf-dev":

yum install libelf-dev


Once complete, install the HighPoint NVMe Linux driver once more.

 
3. Fail to compile gcc, make and other driver files.

For Ubuntu

When installing the driver, due to various factors, driver files such as gcc and make cannot be compiled,

thus interrupting the driver installation process:

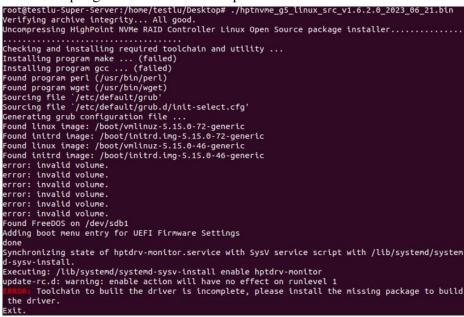



- a. The system is not connected to a network (internet connection) Solution:
 - Double-check the system's internet connection
 - Once confirmed, reinstall the driver.

b. System process is occupied/busy

Solution:

Open the system terminal with root privileges and enter the following command:

apt-get update


This will prompt the system to release the process and update the download source. **Install the driver again** after the system process has been released.

For Redhat

When installing the driver, due to various factors, driver files such as **gcc** and **make** cannot be compiled, thus interrupting the driver installation process:



Or a prompt with 'subscription-manager repos':

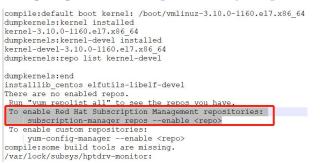

Solution:


a. Go to the Red Hat website and register an account:

Register for | Red Hat IDP

b. Open the system terminal with root privileges.

Enter the following command to log in:

 subscription-manager register --username=*** --password=*** --auto-attach



Reinstall the driver



For Debian

When installing the driver, due to various factors, driver files such as gcc and make cannot be compiled,

thus interrupting the driver installation process:



This problem can be caused by: The system is not connected to a network (internet connection)

Solution:

- a. Double check the system's internet connection
- b. Once confirmed, reinstall the driver.

If the following occurs after the network connection and reinstall driver :

```
root@debian:/home/test/Documents# dhclient
root@debian:/home/test/Documents# ./hptnvme_g5_linux_src_v1.4.4_2022_06_13.bin
Verifying archive integrity... All good.
Uncompressing HighPoint NVMe RAID Controller Linux Open Source package installer......
Checking and installing required toolchain and utility ...
Installing program make ...
Media change: please insert the disc labeled
'Debian GNU/Linux 11.5.0 _Bullseye_ - Official amd64 DVD Binary-1 20220910-10:40'
in the drive '/media/cdrom/' and press [Enter]
```

This problem can be caused by a lack of dependency packages:

Solution:

- a. To install using the CD-ROM: insert the CD-ROM back and press Enter
- b. Use USB startup disk to install:

01. The system needs to be resourced

For details, please refer to the official website file:

https://www.debian.org/doc/manuals/debian-faq/uptodate.en.html

Solution(Here is the process of changing the source of Debian 11.5):

Open the system terminal with root privileges and enter the following command:

nano /etc/apt/sources.list

Replace the contents of the file with the following illustration

deb https://mirrors.tuna.tsinghua.edu.cn/debian/ bullseye main contrib non-free deb-src https://mirrors.tuna.tsinghua.edu.cn/debian/ bullseye-updates main contrib non-free deb https://mirrors.tuna.tsinghua.edu.cn/debian/ bullseye-updates main contrib non-free deb-src https://mirrors.tuna.tsinghua.edu.cn/debian/ bullseye-updates main contrib non-free deb https://mirrors.tuna.tsinghua.edu.cn/debian/ bullseye-backports main contrib non-free deb-src https://mirrors.tuna.tsinghua.edu.cn/debian/ bullseye-backports main contrib non-free deb-src https://mirrors.tuna.tsinghua.edu.cn/debian/ bullseye-backports main contrib non-free deb-src https://mirrors.tuna.tsinghua.edu.cn/debian/ bullseye-security main contrib non-free deb-src https://mirrors.tuna.tsinghua.edu.cn/debian/ bullseye-security main contrib non-free Methys://mirrors.tuna.tsinghua.edu.cn/debian/ bullseye-security main contrib non-free Debian mirror near you. See the mirror list at <u>https://www.debian.org/mirror/list</u> for more information.


02. apt-get update

root@test:/home/test/Documents# nano /etc/apt/sources.list
root@test:/home/test/Documents# apt-get update
Get:1 https://mirrors.tuna.tsinghua.edu.cn/debian bullseye InRelease [116 kB]
Get:2 https://mirrors.tuna.tsinghua.edu.cn/debian bullseye-updates InRelease [44.1 kB]
Get:3 https://mirrors.tuna.tsinghua.edu.cn/debian bullseve-backports InRelease [49.0 kB]
Get:4 https://mirrors.tuna.tsinghua.edu.cn/debian-security bullseye-security InRelease [48.4 kB]
Get:5 https://mirrors.tuna.tsinghua.edu.cn/debian bullseve/non-free Sources [81.2 kB]
Get:6 https://mirrors.tuna.tsinghua.edu.cn/debian bullseye/main Sources [8,633 kB]
Get:7 https://mirrors.tuna.tsinghua.edu.cn/debian bullseve/contrib Sources [43.2 kB]
Get:8 https://mirrors.tuna.tsinghua.edu.cn/debian bullseye/main amd64 Packages [8,184 kB]
Get:9 https://mirrors.tuna.tsinghua.edu.cn/debian bullseve/main Translation-en [6.239 kB]
Get:10 https://mirrors.tuna.tsinghua.edu.cn/debian bullseve/main amd64 DEP-11 Metadata [4.049 kB]
Get:11 https://mirrors.tuna.tsinghua.edu.cn/debian bullseve/main DEP-11 48x48 Icons [3.478 kB]
Get:12 https://mirrors.tuna.tsinghua.edu.cn/debian bullseve/main DEP-11 64x64 Icons [7.315 kB]
Get:13 https://mirrors.tuna.tsinghua.edu.cn/debian bullseve/contrib amd64 Packages [50.6 kB]
Get:14 https://mirrors.tuna.tsinghua.edu.cn/debian bullseve/contrib Translation-en [46.9 kB]
Get:15 https://mirrors.tuna.tsinghua.edu.cn/debian bullseye/contrib amd64 DEP-11 Metadata [13.6 kB]
Get:16 https://mirrors.tuna.tsinghua.edu.cn/debian bullseve/contrib DEP-11 48x48 Icons [47.2 kB]
Get:17 https://mirrors.tuna.tsinghua.edu.cn/debian bullseve/contrib DEP-11 64x64 Icons [93.3 kB]
Get:18 https://mirrors.tuna.tsinghua.edu.cn/debian bullseve/non-free amd64 Packages [97.7 kB]
Get:19 https://mirrors.tuna.tsinghua.edu.cn/debian bullseve/non-free Translation-en [92.4 KB]
Get:20 https://mirrors.tuna.tsinghua.edu.cn/debian bullseve/non-free amd64 DEP-11 Metadata [17.9 kB]
Get:21 https://mirrors.tuna.tsinghua.edu.cn/debian bullseve/non-free DEP-11 48x48 Icons [741 B]
Get:22 https://mirrors.tuna.tsinghua.edu.cn/debian bullseve/non-free DEP-11 64x64 Icons [27.7 kB]
Get:23 https://mirrors.tuna.tsinghua.edu.cn/debian bullseve-updates/main Sources [3,588 B]
Get:24 https://mirrors.tuna.tsinghua.edu.cn/debian bullseve-updates/main amd64 Packages [6.344 B]
Get:25 https://mirrors.tuna.tsinghua.edu.cn/debian bullseve-updates/main Translation-en [5,890 B]
Get:26 https://mirrors.tuna.tsinghua.edu.cn/debian bullseye-backports/main Sources [314 kB]
Get:27 https://mirrors.tuna.tsinghua.edu.cn/debian bullseye-backports/non-free Sources [3,996 B]
Get:28 https://mirrors.tuna.tsinghua.edu.cn/debian bullseye-backports/contrib Sources [2,712 B]
Get:29 https://mirrors.tuna.tsinghua.edu.cn/debian bullseye-backports/main amd64 Packages [341 kB]
Get:30 https://mirrors.tuna.tsinghua.edu.cn/debian bullseye-backports/main Translation-en [281 kB]
Get:31 https://mirrors.tuna.tsinghua.edu.cn/debian bullseye-backports/contrib amd64 Packages [4,400 B]
Get:32 https://mirrors.tuna.tsinghua.edu.cn/debian bullseye-backports/contrib Translation-en [4,320 B]
Get:33 https://mirrors.tuna.tsinghua.edu.cn/debian bullseye-backports/non-free amd64 Packages [11.5 kB]
Get:34 https://mirrors.tuna.tsinghua.edu.cn/debian bullseye-backports/non-free Translation-en [8,960 B]
Get:35 https://mirrors.tuna.tsinghua.edu.cn/debian-security bullseye-security/main Sources [160 kB]
Get:36 https://mirrors.tuna.tsinghua.edu.cn/debian-security bullseye-security/non-free Sources [632 B]
Get:37 https://mirrors.tuna.tsinghua.edu.cn/debian-security bullseye-security/main amd64 Packages [189 kB]
Get:38 https://mirrors.tuna.tsinghua.edu.cn/debian-security bullseye-security/main Translation-en [119 kB]
Get:39 https://mirrors.tuna.tsinghua.edu.cn/debian-security bullseye-security/non-free amd64 Packages [528 B]
Get:40 https://mirrors.tuna.tsinghua.edu.cn/debian-security bullseye-security/non-free Translation-en [344 B]
Fetched 40.2 MB in 3min 13s (208 kB/s)
Reading package lists Done
root@test:/home/test/Documents#

03. Reinstall the driver.

For Proxmox

When installing the driver, due to various factors, driver files such as **gcc** and **make** cannot be compiled, thus interrupting the driver installation process:

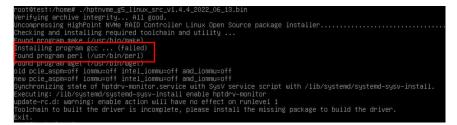

This problem can be caused by:

- a. The system is not connected to a network (internet connection) Solution:
 - 01. Double-check the system's internet connection
 - 02. Once confirmed, reinstall the driver.

b. System process is occupied/busy

Solution:

Open the system terminal with root privileges and enter the following command: **apt-get update**

This will prompt the system to release the process and update the download source. Install the driver again after the system process has been released.

If you are using a completely new system, the following error occurs when installing the driver or

apt-get update:

<pre>root@test:/home# /dhclient root@test:/home# ./hptnvmeg5_linux_src_v1.4.4_2022_06_13.bin Verifying archive integrity All good. Uncompressing HighPoint NVMe RAID Controller Linux Open Source package Checking and installing required toolchain and utility Found program make (/usr/bin/make) Installing program gcc (falled) Found program per1 (/usr/bin/per1) Found program wget (/usr/bin/per1) Found program wget (/usr/bin/wget) old pcle_aspm=off ionmu=off intel_lommu=off amd_lommu=off</pre>	installer
new pcie_aspm=off ionmu=off intel_ionmu=off amd_ionmu=off Synchronizing state of hptdrv-monitor.service with SysV service script Executing: /ib/Systemd/Systemd-SysV-Install enable hptdrv-monitor update-rc.d: warning: enable action will have no effect on runlevel 1 Toolchain to built the driver is incomplete, please install the missin Exit. oot@test:/home# apt-get update prr:1 http://fto.debian.org/debian bullseye InRelease	
Temporary failure resolving 'ftp.debian.org' rr:2 http://ftp.debian.org/debian bullseye-updates InRelease Temporary failure resolving 'ftp.debian.org' rr:3 http://security.debian.org bullseye-security InRelease Temporary failure resolving 'security.debian.org' rr:4 https://enterprise.proxmox.com/debian/pve bullseye InRelease Temporary failure resolving 'enterprise.proxmox.com' Reading package lists Done	
AT Failed to fetch http://ftp.deblan.org/deblan/dists/bullseye/inKelea W: Failed to fetch http://ftp.deblan.org/deblan/dists/bullseye-updates W: Failed to fetch http://security.deblan.org/dists/bullseye-security/ W: Failed to fetch https://enterprise.proxmox.com/deblan/pve/dists/bul W: Some index files failed to download. They have been ignored or old	/InRelease Temporary failure resolving 'ttp.deblan.org' InRelease Temporary failure resolving 'security.deblan.org' Iseye/InRelease Temporary failure resolving 'enterprise.proxmox.com'

This problem can be caused by:

01. The system needs to be resourced

This article is a proxmox7.2 feeding.

The previous version of the source can refer to the official website:

https://pve.proxmox.com/wiki/Downloads#Update_a_running_Proxmox_Virtual_Environment_7. x to latest 7.2

• Open the system terminal with root privileges and enter the following command to delete the source that comes with it

rm /etc/apt/sources.list.d/pve-enterprise.list

• Add a domestic source:

echo 'deb http://mirrors.ustc.edu.cn/proxmox/debian/pve bullseye pve-nosubscription' >> /etc/apt/sources.list.d/pve-no-subscription.list

• Edit the source file: /etc/apt/sources.list

nano /etc/apt/sources.list

• Replace the contents of the file with the following illustration

```
# debian aliyun source
deb https://mirrors.aliyun.com/debian bullseye main contrib
deb https://mirrors.aliyun.com/debian bullseye-updates main contrib
# security updates
deb https://mirrors.aliyun.com/debian-security bullseye-security main contrib
```

Note: You can replace https://mirrors.aliyun.com/debian with the name of a faster

Debian mirror near you. See the mirror list at <u>https://www.debian.org/mirror/list</u> for more information.

02. apt-get update

1	oot@test:∕etc# apt−get update
G	et:1 http://mirrors.ustc.edu.cn/proxmox/debian/pve bullseye InRelease [2,661 B]
G	et:2 https://mirrors.aliyun.com/debian bullseye InRelease [116 kB]
6	et:3 http://mirrors.ustc.edu.cn/proxmox/debian/pve bullseye/pve-no-subscription amd64 Packages [322 kB]
G	et:4 https://mirrors.aliyun.com/debian bullseye–updates InRelease [44.1 kB]
G	et:5 https://mirrors.aliyun.com/debian-security bullseye-security InRelease [48.4 kB]
C	et:6 https://mirrors.aliyun.com/debian bullseye/main amd64 Packages [8,184 kB]
G	et:7 https://mirrors.aliyun.com/debian bullseye/main Translation-en [6,239 kB]
G	et:8 https://mirrors.aliyun.com/debian bullseye/contrib amd64 Packages [50.6 kB]
G	et:9 https://mirrors.aliyun.com/debian bullseye/contrib Translation—en [46.9 kB]
G	et:10 https://mirrors.aliyun.com/debian bullseye–updates/main amd64 Packages [6,344 B]
G	et:11 https://mirrors.aliyun.com/debian bullseye–updates/main Translation–en [5,890 B]
G	et:12 https://mirrors.aliyun.com/debian–security bullseye–security/main amd64 Packages [189 kB]
	et:13 https://mirrors.aliyun.com/debian–security bullseye–security/main Translation–en [119 kB]
	etched 15.4 MB in 19s (814 kB/s)
F	eading package lists Done

- 03. Reinstall the driver.
- 4. If you experience any other WebGUI or CLI related problems, please submit a support ticket using our <u>Online Support Portal</u>, which includes a description of the problem in as much detail as possible, and upload the following:

Please click the following <u>Appendix</u> for more information about locating and collecting these logs.

Controller and Drive Detection Issues

If the system is unable to detect the NVMe product or SSDs, make sure to remove all NVMe devices from the system that are not related to the NVMe product during the troubleshooting process. The presence of other NVMe devices may interfere with the detection of the NVMe product.

If you experience any other AIC related problems, please submit a support ticket using our <u>Online</u> <u>Support Portal</u>, which includes a description of the problem in as much detail as possible.

Please check the <u>Appendix</u> – providing system logs, screenshots and other information about your system will enable our Support Department to resolve your support issue as quickly and efficiently as possible.


Appendix

When submitting s support ticket via our Online Support Portal, the following information will help our Support Department diagnose and resolve your issue as quickly and efficiently as possible. For information collection methods, please refer to the following steps and video links


How to collect Log information in WEBGUI

We have provided a detailed video on log collection methods: link

1. **1-Click Self-Diagnostic Solution**: Diagnostic View provides a "1-click" information collection system for troubleshooting. It will gather all necessary hardware, software, and storage configuration data and compile it into a single file, which can be transmitted directly to our FAE Team via our Online Support Portal;

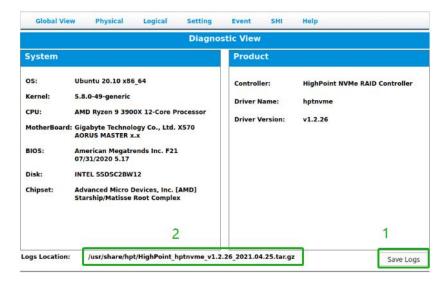

2. You can also click 'Help'→'Diagnostic' to enter the diagnostic view.

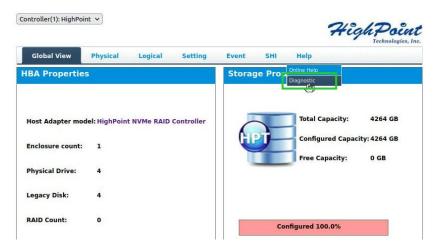

3. Click the "Save Logs" button to create the diagnostic file.

Note: this process may take several minutes to complete.

Diagnostic View				
System		Product		
OS: Kernel: CPU: MotherBoard: BIOS: Disk: Chipset:	Ubuntu 20.10 x86_64 5.8.0-49-generic AMD Ryzen 9 3900X 12-Core Processo Gigabyte Technology Co., Ltd. X570 AORUS MASTER x.x American Megatrends Inc. F21 07/31/2020 5.17 INTEL SSDSC2BW12 Advanced Micro Devices, Inc. [AMD] Starship/Matisse Root Complex	Controller: Driver Name: Driver Version:	HighPoint NVMe RAID Controller hptnvme v1.2.26	
	2		1	

How to collect Log information CLI

- 1. Execute the command 'hptraidconf' to enter the CLI;
- 2. Execute the command 'diag' in CLI, your log information will be collected.



Please submit the log file to our Support Department using our online services: Link.