

SSD7580C Software Guide



V1.01-Feb 20, 2024

Copyright 2024 HighPoint Technologies, Inc.
All rights reserved

1. Overview	6
1.1. HighPoint Software	6
1.1.1. Web RAID Management Interface (WebGUI)	6
1.1.2. CLI (command line interface)	6
1.1.3. UEFI Utility	6
1.1.4. UEFI HII	6
1.1.5. SafeStorage	7
1.2. Key Features of the SSD7580C	8
1.3. HighPoint RAID Technology	9
1.3.1. RAID Technology	9
1.3.2. RAID Levels	10
1.3.3. RAID Configuration Strategies	11
1.3.4. Data Redundancy	11
2. Web RAID Management Interface (WebGUI)	13
2.1. Starting the Web RAID Management Interface (WebGUI)	13
2.1.1. For Windows Users	13
2.1.2. For Linux Users	13
2.2. Using the Web RAID Management Interface (WebGUI)	14
2.3. Global View	15
2.3.1. HBA Properties	15
2.3.2. Storage Properties	15
2.4. Physical	16
2.4.1. Controller Information	16
2.4.2. Devices Information	17
2.5. Logical	18
2.5.1. Create an Array	19
2.5.2. Adding a Spare Disk	22
2.5.3. Removing a Spare Disk	23
2.5.4. Device Information	24
2.5.5. Rescan	27
2.5.6. Delete an Array	28
2.6. Setting	29
2.6.1. System Setting	30
2.6.2. Password Setting	32
2.6.3. Email Setting	33
2.7. Event	37
2.7.1. View the Event Log	37
2.7.2. Download the Event Log	37
2.7.3. Event Log Icon Guide	38
2.8. SHI	39
2.8.1. Start SMART Monitor	40
2.8.2. Set Temperature Threshold	41
2.8.3. Using Health Inspector Scheduler	42
2.8.4. Create a New Verify Task	43
2.9. Help	44
2.9.1. Online Help	44
2.9.2. Diagnostic View	45
2.9.3. Saving the Log	46
3. CLI (command line interface)	47
3.1. Starting the CLI	47
3.1.1. For Windows Users	47
3.1.2. For Linux Users	47
3.2. Using the CLI	48
3.3. Query Command	49
3.3.1. Syntax	49
3.3.2. query controller	50
3.3.3. query enclosure	50

3.3.4. query device	50
3.3.5. query array	54
3.4. Init Command	57
3.4.1. Syntax	57
3.4.2. init disk	58
3.5. Create Command	59
3.5.1. Syntax	59
3.5.2. Create an array	62
3.5.3. Add Spare Disks	63
3.6. Delete Command	64
3.6.1. Syntax	64
3.6.2. Delete an array	64
3.6.3. Delete Spare Disks	65
3.7. Unplug Command	66
3.7.1. Syntax	66
3.7.2. Unplug disk	66
3.7.3. Unplug array	67
3.8. Rebuild Command	68
3.8.1. Syntax	68
3.8.2. Rebuild array	68
3.9. Verify Command	70
3.9.1. Syntax	70
3.9.2. Verify array	70
3.10. Rescan Command	71
3.10.1. Syntax	71
3.11. Lscard Command	72
3.11.1. Syntax	72
3.12. Events Command	73
3.12.1. Syntax	73
3.12.2. View events	73
3.12.3. Save events	74
3.13. Mail Command	75
3.13.1. Syntax	75
3.13.2. View mail recipient	76
3.13.3. Add mail recipient	76
3.13.4. Delete mail recipient	77
3.13.5. Set mail recipient	77
3.13.6. View mail server	78
3.13.7. Add mail server	78
3.13.8. Set mail server	79
3.14. Task Command	81
3.14.1. Syntax	81
3.14.2. View task	82
3.14.3. Create a New Rebuild task	82
3.14.4. Create a New Verify Task	82
3.14.5. Delete a task	83
3.15. Set Command	84
3.15.1. Syntax	84
3.15.2. set	84
3.16. Diag Command	86
3.16.1. Syntax	86
3.16.2. diag	86
3.17. Help Command	87
3.17.1. Syntax	87
3.17.2. help	88
3.17.3. help command	88
3.18. Exit Command	89

3.18.1. Syntax	89
3.19. Clear Command	90
3.19.1. Syntax	90
4. UEFI Command Line Utility	91
4.1. Starting the UEFI Command Line Utility	91
4.1.1. Prerequisites	91
4.1.2. Step 1 Prepare UEFI Package	91
4.1.3. Step 2 Adjust System EFI Settings	92
4.1.4. Step 3 Entering the UEFI Command Line Utility	93
4.2. Using the UEFI Command Line Utility	94
4.3. Help Command	95
4.3.1. Syntax	95
4.3.2. help	95
4.4. Info Command	96
4.4.1. Syntax	96
4.4.2. Physical Device Information	96
4.4.3. Logical Device Information	97
4.5. Quit Command	98
4.5.1. Syntax	98
4.5.2. quit	98
4.6. Exit Command	99
4.6.1. Syntax	99
4.6.2. exit	99
4.7. Create Command	100
4.7.1. Syntax	100
4.7.2. Create an array	100
4.8. Delete Command	102
4.8.1. Syntax	102
4.8.2. Delete an array	102
4.9. Flashing the UEFI ROM	103
5. UEFI HII	104
5.1. Starting the UEFI HII	104
5.1.1. Step 1 Adjust System EFI Settings	104
5.1.2. Step 2 Enter the UEFI HII	105
5.2. Using the UEFI HII	106
5.2.1. Keys	106
5.3. Information	107
5.3.1. Controller Information	107
5.3.2. Physical Device Information	107
5.3.3. Logical Device Information	108
5.4. Create RAID	109
5.4.1. Create an array	109
5.5. Delete RAID	112
5.5.1. Delete an array	112
6. SafeStorage	113
6.1. Overview	113
6.2. Workflow	114
6.2.1. Enable Enclosure Security	115
6.2.2. Enable Disk Security	115
6.2.3. Change Enclosure Security key	115
6.2.4. Change Disk Security key	116
6.2.5. Disable Disk Security	116
6.2.6. Disable Enclosure Security	116
6.3. Using SafeStorage with the WebGUI	117
6.3.1. Enable Enclosure Security	117
6.3.2. Enable Disk Security	118
6.3.3. Change Enclosure Security key	121

6.3.4. Change Disk Security key	122
6.3.5. Disable Disk Security	123
6.3.6. Disable Enclosure Security	125
6.4. Using SafeStorage with the CLI	126
6.4.1. Secure command reference	126
6.4.2. Enable Enclosure Security	126
6.4.3. Enable Disk Security	127
6.4.4. Change Enclosure Security key	129
6.4.5. Change Disk Security key	130
6.4.6. Disable Disk Security	131
6.4.7. Disable Enclosure Security	132
7. Glossary	133
8. Revision History	136
8.1. Version 1.00, January 11, 2024	136
8.2. Version 1.01, February 20, 2024	136
9. Documentation Legal Notice	137

1. Overview

This guide describes how to use the HighPoint Web RAID Management Interface (WebGUI), CLI (command line interface) utility, UEFI utility, UEFI HII, and SafeStorage SED Solution.

This section provides an overview of this guide. It documents the utilities configuring, monitoring, and maintaining SSD7580C NVMe RAID AICs with RAID control capabilities and their storage-related devices.

1.1. HighPoint Software

1.1.1. Web RAID Management Interface (WebGUI)

The Web RAID Management Interface (WebGUI) is a simple and intuitive web-based management tool available for Windows /Linux operating systems. It is an ideal interface for customers unfamiliar with RAID technology. The Wizard-like Quick Configuration menu allows even the most novice user to get everything up and running with a few simple clicks. Experienced users can fine tune configurations for specific applications using the Setting Options menu.

1.1.2. CLI (command line interface)

The CLI (command line interface) is a powerful, text-only management interface designed for advanced users and professional administrators. The universal command lines work with any platform and are shared across our entire product line. Comprehensive user guides are available for the CLI and include the most recent product updates from the Software Updates section of the product category webpages.

1.1.3. UEFI Utility

The UEFI (Unified Extensible Firmware Interface) command line utility is provided in a binary format; no separate installation is required.

1.1.4. UEFI HII

The Human Interface Infrastructure (HII) Configuration Application confers controllers and physical and virtual disks and performs other configuration tasks in a preboot environment.

BIOS provides some of the HII graphical user interface (GUI) keys. Independent hardware vendors tightly control HII RAID management screens. Contact your system vendor if the keys shown in the preceding

figure do not work as expected.

1.1.5. SafeStorage

HighPoint's SafeStorage solution was developed to work in conjunction with industry-standard SED (Self-encrypted drive) technology supported by OPAL v2.0 compliant M.2 and U.2/U.3 NVMe media and is based on the OPAL SSC TCG (Trusted Computing Group) specifications. It is designed to protect data assets when physical disks are misplaced or stolen by preventing unauthorized access to stored data.

SafeStorage can be applied to single-disk and RAID configurations and is activated via a service known as Drive Security, which can be administered via our software management.

1.2. Key Features of the SSD7580C

- RAID levels 0, 1, 10, Single
- Fast initialization for quick array setup
- Check Consistency for background data integrity
- Self-monitoring, Analysis, and Reporting Technology (S.M.A.R.T) support
- Storage Health Inspector
- SMTP Email Alert Notification
- Automatic and configurable RAID Rebuilding Priority
- Auto resume incomplete rebuilding after power on or reboot system
- Single-RAID or Multi-RAID Arrays per Controller
- Cross-Sync RAID Solution Across Controllers
- Flash ROM for Upgradeable UEFI
- Bootable RAID Array
- Multiple RAID Partitions supported
- Online Array Roaming
- Global Hot Spare Drive support
- RAID Management software for SafeStorage

1.3. HighPoint RAID Technology

This section discusses HighPoint NVMe RAID Technology and the RAID Levels supported by the SSD7580C AIC.

1.3.1. RAID Technology

RAID is an array or group of multiple independent physical disks that provide high performance and fault tolerance. RAID disk groups improve I/O (input/output) performance and reliability. RAID disk groups appear to the host computer as a single storage unit or multiple virtual units. RAID disk groups appear to the host as one storage unit or multiple virtual units, which speeds up I/O transactions because multiple disks can be accessed simultaneously.

1.3.1.1. NVMe RAID technology

It's no surprise that NVMe media is ideal for RAID applications. NAND flash media is exponentially faster and far more reliable than platter-based storage media, and HighPoint's proven NVMe RAID stack was developed to build on these strengths. Customers can employ our RAID technology to exploit the full potential of their NVMe storage investments and fine-tune RAID configurations to deliver mind-blowing transfer performance!

HighPoint's NVMe RAID technology was engineered to fully leverage the Broadcom PCIe Switch technology employed by our NVMe RAID AICs and Enclosures to maximize the performance and reliability of NVMe storage configurations for x86 Intel/AMD computing platforms. The technology is unique to our SSD7xxx product lines (RAID AICs and Enclosures), requiring a HighPoint RAID Stack solution for the host operating system.

1.3.1.2. Core NVMe RAID Technology

HighPoint's NVMe RAID Stack solution is available for various hardware platforms and operating systems. It comprises our RAID and Storage technology, Product Specific Host & Device driver, and RAID Storage management and monitoring suite.

Our NVMe RAID stack was designed to leverage Broadcom's industry-leading PCIe Switch chipsets to optimize x16 lanes of upstream bandwidth, minimize latency, maximize port density, and allocate dedicated x4 lanes of downstream bandwidth to each device channel at all times. These characteristics are ideal for

industrial and business applications requiring storage solutions that maximize I/O transfer performance.

1.3.2. RAID Levels

The SSD7580C NVMe RAID AIC supports the following RAID levels:

- RAID0
- RAID1
- RAID10

The following table provides an overview of RAID level reference:

Table 1: RAID Level Reference Guide

Type	Description	Min disks	Usable space	Advantage	Disadvantage	Application
RAID0	Disk Striping	1	100%	Offers the highest performance	No fault tolerance - failure of one disk results in complete data loss	Temporary file, performance-driven application
RAID1	Disk Mirroring	2	50%	Provides convenient, low-cost data redundancy for smaller systems and servers	Useable storage space is 50% of the available capacity and can handle 1 disk failure.	Operating system, backup, and transaction database
RAID10	Striping with Mirroring	4	100%	High read performance and medium write performance with data protection for up to 2-disk failures	Useable storage capacity equals the total capacity of all disks in the array minus two.	Fast database and application servers that need performance and data protection

1.3.3. RAID Configuration Strategies

Select the optimal RAID level when you create a system disk. The optimal RAID level for your disk group depends on several factors:

- The number of disks in the RAID group
- The capacity of the disks in the RAID group
- The need for data redundancy
- The disk performance requirements

Please [refer here](#) to choose the RAID level that best suits your needs.

1.3.4. Data Redundancy

Data integrity and availability are critical for many data processing and storage systems. Businesses want to avoid data loss and financial loss due to server failures. RAID can help you maintain data integrity and availability by preventing the servers that provide the data from going down.

RAID provides various features, such as spare disks and rebuilds, that can be used to repair any disk problems while keeping the servers running and the data available. These features are described in the following subsections.

1.3.4.1. Spare Disks

You can use spare disks to replace failed or defective disks in a disk group. A replacement disk must be at least as large as its replacement. Spare disks include hot swaps, hot spares, and cold swaps support.

If a disk used in a RAID group fails, the spare disk automatically takes its place, and the data on the failed disk is rebuilt on the spare disk.

Notes:

The backplane and chassis must support the hot-swap feature to work properly.

A cold swap requires powering down the system before replacing a defective disk.

Available for RAID1 and RAID10.

1.3.4.2. Rebuilding

If a disk fails in a RAID group configured as a RAID1/ RAID10, you can recover the lost data by rebuilding the disk. If you have configured spare disks, the NVMe RAID AIC automatically attempts to use them to rebuild failed disks.

If there is no spare disk with sufficient capacity or a spare disk is not configured to rebuild the failed disk, you must rebuild it manually. A disk with sufficient storage must be inserted into the system before the failed disk can be rebuilt manually.

***Note:** When a disk fails, the NVMe RAID AIC will take the disk offline. Once you have configured spare disks or replaced the disk, the NVMe RAID AIC will not automatically rebuild the array unless this “Enable auto rebuild option” is enabled.*

2. Web RAID Management Interface (WebGUI)

This section describes how to use the Web RAID Management Interface.

2.1. Starting the Web RAID Management Interface (WebGUI)

2.1.1. For Windows Users

1. Double-click the Desktop ICON to start the software using the system's default web browser. It will automatically log in to the WebGUI.



2. The password can be set after the first login. To change the password, select [Setting→Password Setting](#) from the menu bar.

2.1.2. For Linux Users

1. Enter <http://127.0.0.1:7402> or localhost:7402 into the browser to log into the WebGUI; 7402 is the WebGUI's Port Number, which can be modified.



2. The password can be set after the first login. To change the password, select [Setting→Password Setting](#) from the menu bar.

2.2. Using the Web RAID Management Interface (WebGUI)



In the WebGUI view, if it detects any new events, it checks and updates the controller status, disk counts, disk group counts, virtual disk counts, and so on.

You can hot-plug physical disks in the WebGUI view and monitor these counts. The WebGUI also displays the number of virtual and physical disk operations in progress.

- Select **Global View** to view the status of the SSD7580C NVMe RAID AIC. For more information, see [Global View](#).
- Select **Physical** to view the general and extended information about the SSD7580C NVMe RAID AIC you use. The SSD7580C Hardware base information is all located here. Information about the connected disk is also displayed. For more information, see [Physical](#).
- Select **Logical** to create, delete, and maintain your RAID configurations and add disks to the spare pool. It also enables the disk or SSD7580C NVMe RAID AIC security. For more information, see [Logical and SafeStorage](#).
- Select **Setting** to change the port number that the HighPoint HRM listens on, temperature unit, rebuild priority, and whether or not to enable auto-rebuilding, rebuilding on error, restrict to localhost, and collecting system log. For more information, see [Setting](#).
- Select **Event** to monitor the activity and performance of all AICs in the workstation and the attached disks. When an event occurs, an event message appears in this window. For more information, see [Event](#).
- Select **SHI** to view information about hosted NVMe SSDs via SMART (Self-Monitoring Analysis and Reporting Technology) Technology. The data provided by this tab helps you anticipate any disk failures based on various monitored disk properties. For more information, see [SHI](#).
- Select **Help** to access our Online Support Portal and Diagnostic View. The Diagnostics view includes all the necessary hardware and software information. You can compile and save this information and store configuration data as a log file. For more information, see [Help](#).

2.3. Global View

The Global view provides an overview of what each AIC connected to your computer detects. It is also the first page you see when logging in.



Note: the picture is only for reference; please make the object the standard.

A drop-down menu on the top left of the page allows you to select which controller you want to manage (if you have multiple HighPoint products connected).

2.3.1. HBA Properties

- **Host Adapter model** — The name of the HighPoint product or solution.
- **Controller Count** — The number of the AICs detected.
- **Enclosure Count** — The number of external enclosures detected.
- **Physical Drives** — The number of disks hosted by the AIC.
- **Legacy Disk** — The number of Legacy disks connected. Legacy disks are physical disks that have previous partitions stored on them.
- **RAID Count** — The number of RAID arrays.

2.3.2. Storage Properties

- **Total capacity:** the combined capacity of each disk connected to the AIC.
- **Configured capacity:** the amount of space used for creating RAID arrays.
- **Free Capacity:** the total amount of space unused.

2.4. Physical


The **Physical** tab shows general and extended information about the SSD7580C and any hosted NVMe SSDs.



The screenshot shows a web interface with a navigation bar containing 'Global View', 'Physical', 'Logical', 'Setting', 'Event', 'SHI', and 'Help'. The 'Physical' tab is selected. On the left, there is a sidebar with 'Controller 1', 'Enclosure 1', 'Devices', and 'Rescan'. The main content area is titled 'Controller Information' and displays the following details:

Model Name:	HighPoint NVMe RAID Controller
Vendor:	HighPoint Technologies, Inc.

2.4.1. Controller Information

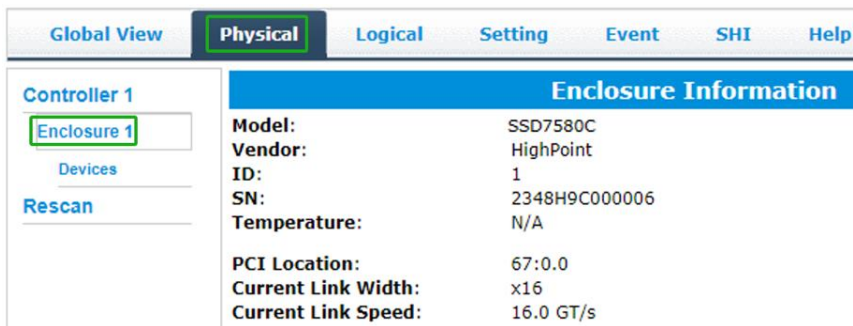

The screenshot shows the same web interface as above, but with the 'Enclosure 1' sub-tab selected in the sidebar. The main content area is titled 'Enclosure Information' and displays the following details:

Model:	SSD7580C
Vendor:	HighPoint
ID:	1
SN:	2348H9C000006
Temperature:	N/A
PCI Location:	67:0.0
Current Link Width:	x16
Current Link Speed:	16.0 GT/s

- **Model** — The name of the HighPoint AIC.
- **Vendor** — The Manufacturer of the AIC.
- **SN** — The AIC Serial Number
- **Temperature** — Temperature of the controller's sensor
- **PCI Location** — The Location of AIC in the system
- **Current Link Width** — The PCIe width occupied by the current AIC.
- **Current Link Speed** — The Rate of current bandwidth.


2.4.2. Devices Information

Global View		Physical	Logical	Setting	Event	SHI	Help
Controller 1		Physical Devices Information					
Enclosure 1							
Devices							
Rescan							
		Device 1_E1_1 Model	KIOXIA KCDY1RUG7T68	Capacity	7.68 TB		
		Device 1_E1_2 Model	KIOXIA KCDY1RUG7T68	Capacity	7.68 TB		
		Device 1_E1_3 Model	KIOXIA KCDY1RUG7T68	Capacity	7.68 TB		
		Device 1_E1_4 Model	Samsung SSD 983 DCT 960GB	Capacity	960.19 GB		
		Unplug	Revision	EDA5102Q	PCIe Width	x4	
			Location	1/E1/4	PCIe Speed	Gen 3	
			Max Free	0.00 GB			
			Status	Normal			
			Serial Num	S48CNW0K400027K	Type	SSD	
			Interface	NVME	SED Type	OPAL	
			SED Capable	Yes	Cryptographic Erase Capable	Yes	
			Secured	Yes(Locked)			

- **Model** – Model number of the physical disk
- **Capacity** – Total capacity of the physical disk
- **Revision** – Disk firmware revision number
- **Location** – Disk location (example: 1/2 states controller 1, slot 2)
- **Max Free** – Space on disk that is not configured in an array
- **Status** – (Normal, disabled, critical) Status of the disk
- **Serial Number** – Serial number of the physical disk
- **Interface** – Interface of the physical disk
- **Type** – Type of the physical disk
- **PCIe Width** – PCIe width of the current disk
- **PCIe Speed** – PCIe speed of the current disk
- **SED Capable** – Whether the disk supports the SED feature
- **SED Type** – SED type of the disk
- **Secured** – Whether the disk is secured
- **Cryptographic Erase Capable** – Whether the disk supports the Cryptographic Erase feature
- **Unplug** – Safely eject the selected disk. Other methods of disk removal will trigger an alarm if enabled.

2.5. Logical

The **Logical** tab is where you can create, delete, and maintain your RAID configurations and add disks to your spare pool.

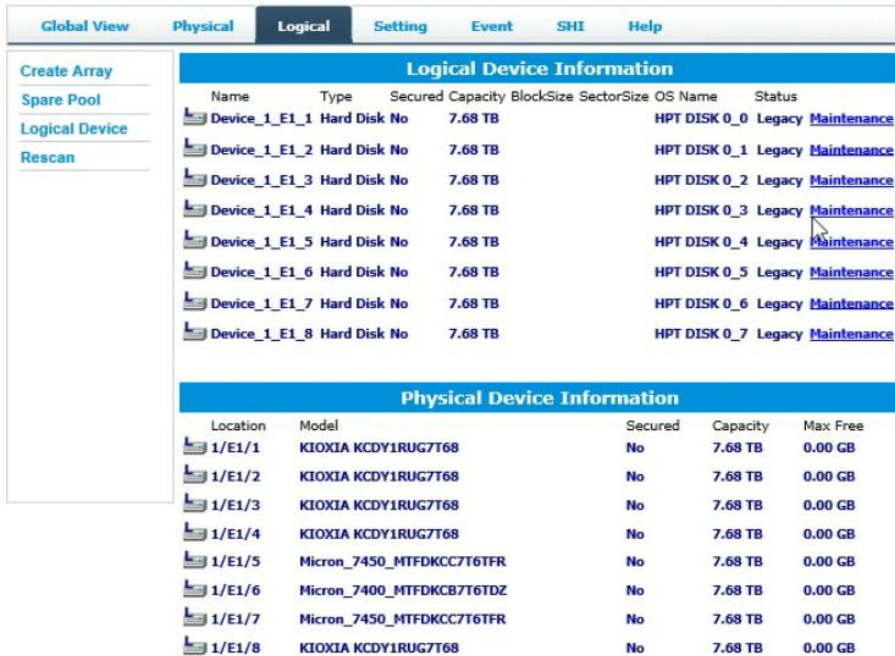

Logical Device Information							
Name	Type	Secured	Capacity	BlockSize	SectorSize	OS Name	Status
Device_1_E1_1	Hard Disk No	No	7.68 TB			HPT DISK 0_0	Legacy Maintenance
Device_1_E1_2	Hard Disk No	No	7.68 TB			HPT DISK 0_1	Legacy Maintenance
Device_1_E1_3	Hard Disk No	No	7.68 TB			HPT DISK 0_2	Legacy Maintenance
Device_1_E1_4	Hard Disk No	No	7.68 TB			HPT DISK 0_3	Legacy Maintenance
Device_1_E1_5	Hard Disk No	No	7.68 TB			HPT DISK 0_4	Legacy Maintenance
Device_1_E1_6	Hard Disk No	No	7.68 TB			HPT DISK 0_5	Legacy Maintenance
Device_1_E1_7	Hard Disk No	No	7.68 TB			HPT DISK 0_6	Legacy Maintenance
Device_1_E1_8	Hard Disk No	No	7.68 TB			HPT DISK 0_7	Legacy Maintenance

Physical Device Information				
Location	Model	Secured	Capacity	Max Free
1/E1/1	KIOXIA KCDY1RUG7T68	No	7.68 TB	0.00 GB
1/E1/2	KIOXIA KCDY1RUG7T68	No	7.68 TB	0.00 GB
1/E1/3	KIOXIA KCDY1RUG7T68	No	7.68 TB	0.00 GB
1/E1/4	KIOXIA KCDY1RUG7T68	No	7.68 TB	0.00 GB
1/E1/5	Micron_7450_MTFDKCC7T6TFR	No	7.68 TB	0.00 GB
1/E1/6	Micron_7400_MTFDKCB7T6TDZ	No	7.68 TB	0.00 GB
1/E1/7	Micron_7450_MTFDKCC7T6TFR	No	7.68 TB	0.00 GB
1/E1/8	KIOXIA KCDY1RUG7T68	No	7.68 TB	0.00 GB

The logical tab has the following settings:

- [Creating an Array](#)
- [Adding a Spare Disk](#)
- [Removing a Spare Disk](#)
- [Logical Device Information](#)
- [Physical Device Information](#)
- [Rescan](#)
- [Deleting an Array](#)

The following sections describe the Logical Tab.

2.5.1. Create an Array

An array is a collection of physical disks that will be one virtual disk by your Operating System (OS). You need to follow the steps below to create an array.

1. Open the **WebGUI**.
2. Select the proper **AIC** from the drop-down on the top left.
3. Click the **Logical** tab.
4. Click **Create Array**.

Example screenshot

The screenshot shows the 'Create Array' interface in a web GUI. The 'Logical' tab is active. The form includes the following fields:

- Array Type: RAID 0
- Array Name: Default
- Secure:
- Initialization Method: Keep Old Data
- Cache Policy: (Default)
- Block Size: 512K

Below the form is a table of available disks:

	Location	Model	Capacity	Max Free
<input type="checkbox"/>	1/E1/1	KIOXIA KCDY1RUG7T68	7.68 TB	0.00 GB
<input type="checkbox"/>	1/E1/2	KIOXIA KCDY1RUG7T68	7.68 TB	0.00 GB
<input type="checkbox"/>	1/E1/3	KIOXIA KCDY1RUG7T68	7.68 TB	0.00 GB
<input type="checkbox"/>	1/E1/4	KIOXIA KCDY1RUG7T68	7.68 TB	0.00 GB
<input type="checkbox"/>	1/E1/5	Micron_7450_MTFDKCC7T6TFR	7.68 TB	0.00 GB
<input type="checkbox"/>	1/E1/6	Micron_7400_MTFDKCB7T6TDZ	7.68 TB	0.00 GB
<input type="checkbox"/>	1/E1/7	Micron_7450_MTFDKCC7T6TFR	7.68 TB	0.00 GB
<input type="checkbox"/>	1/E1/8	KIOXIA KCDY1RUG7T68	7.68 TB	0.00 GB

At the bottom, there is a 'Capacity:' field set to 'Maximum' (MB) and a 'Create' button.

2.5.1.1. Array Creation Profile Options

- **Array Type**

This drop-down menu allows you to specify the RAID level.

- RAID0
- RAID1
- RAID10

Note: The newly accessed disks are not used to create a RAID array and are defaulted to single disks.

- **Array Name:**

The name that will be displayed in the Logical Device.

- Information (Default: RAID_<level>_<array number>)

- **Secure:**

Be able to use the disk/array's SED capabilities. (for more information, see [SafeStorage](#)).

- **Initialization Method:**

Initialization of a disk sets all data bits to 0, clearing all the data on the disk. It is important to initialize disks as previous data physically stored on the disk may interfere with new data.

- **Keep Old Data:** This option skips the initialization process, and all data on each physical disk of the array will be untouched.

- **Quick Init:** This option grants immediate access to the RAID array by skipping the initialization process, but it will delete all data. This method is recommended for NVMe storage.

- **Foreground:** The array initialization process will be set at high priority. During this time, the array is not accessible, but the initialization process will complete much faster. (Not Recommended)

Foreground initializing the array will completely zero out the data on the disks, meaning the disk will be completely wiped, and every bit on the disk will be set to 0.

- **Background:** The array initialization process will have a lower priority. During this time, the array will be accessible, but the initialization process will take much longer to complete. (Not Recommended)

Background initialization means the array will still be created, and you can still write new data onto the array. But when your array requires rebuilding, residual data left behind may interfere with the process.

Important Note: *The foreground and Background Initialization options were intended for use with hard disk drives and are not recommended for NVMe storage. These options will cause NVMe media to result in TBW degradation and performance loss. Initialization of a disk sets all data bits to 0, clearing all the data on the disk. It is important to initialize disks as previous data physically stored on the disk may interfere with new data.*

- **Block Size (default: 512K)**

- **128K**

- **256K**

- **512K**

Adjusting the block size towards your disk usage can result in some performance gain.

In a typical RAID configuration, virtual disk data is striped (or spread across) the physical disks. A smaller array block size will increase the likelihood of accessing all physical disks when processing large I/O requests. Multiple physical disks working in parallel increase the throughput, meaning better performance.

For smaller I/O requests (512 bytes to 4 kilobytes), it is better to have each disk handle its own I/O request,

improving the IOPS (I/O per second), rather than having one tiny I/O request being handled by multiple disks.

- **Capacity (Default: Maximum)**

This section allows you to set the total space you want the RAID array to use. When creating RAID levels, disk capacities are limited by the smallest disk.

An example of how the smallest disk limits disk capacities:

- You have 2 disks connected to the SSD7580C.
- The first disk is 6 TB, the second is 4 TB.
- After creating a RAID level 1 using both disks and maximum capacity, the first disk will have 2 TB, and the second will have 0 TB free capacity.
- The free capacity on the second disk can be used to create a separate array with other disks.

2.5.2. Adding a Spare Disk

You can use spare disks to replace failed or defective disks in a disk group. A replacement disk must be at least as large as its replacement. Spare disks include hot swaps, hot spares, and cold swaps.


If a disk used in a RAID group fails, the spare disk automatically takes its place, and the data on the failed disk is rebuilt on the spare disk.

This feature minimizes the chances of data loss by reducing the time an array is in critical status.


Example screenshot



1. Open the **WebGUI**.
2. Click **Logical**.
3. Click **Spare Pool**.
4. Check the box for the disk you want as a spare under **Available Disks**.
5. Click **Add Spare** and confirm by selecting **OK** from the pop-up window.

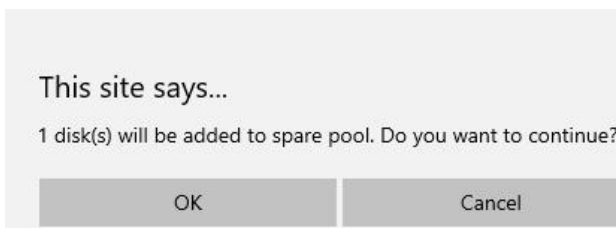


6. The disk has now been assigned as a spare. Click **OK** to confirm.

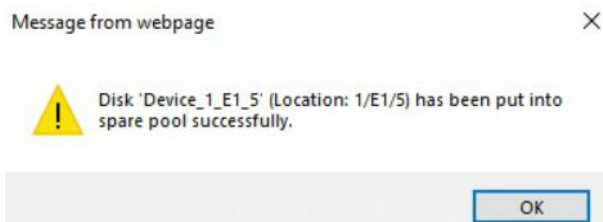

2.5.3. Removing a Spare Disk

Disks added to the spare pool will be displayed under the **Spare Pool**. You can also remove disks from the Spare Pool.

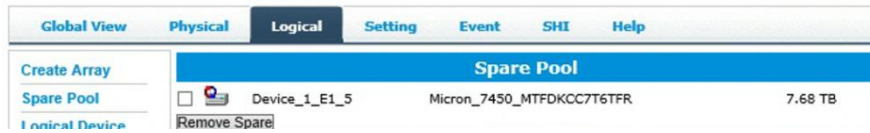


1. Open the **WebGUI**.
2. Click **Logical**.
3. Click **Spare Pool**.
4. Select the spare disk from the Spare Pool.
5. Click **Remove Spare**.

2.5.4. Device Information

Logical device tab is the default page upon clicking the Logical tab of the WebGUI. This page contains information about your RAID arrays and individual disks your system detects.

2.5.4.1. Logical Device Information

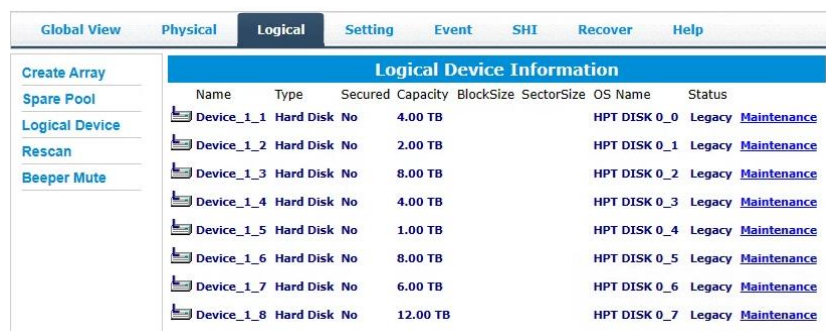

Name	Type	Secured	Capacity	BlockSize	SectorSize	OS Name	Status
Device_1_1	Hard Disk	No	4.00 TB			HPT DISK 0_0	Legacy Maintenance
Device_1_2	Hard Disk	No	2.00 TB			HPT DISK 0_1	Legacy Maintenance
Device_1_3	Hard Disk	No	8.00 TB			HPT DISK 0_2	Legacy Maintenance
Device_1_4	Hard Disk	No	4.00 TB			HPT DISK 0_3	Legacy Maintenance
Device_1_5	Hard Disk	No	1.00 TB			HPT DISK 0_4	Legacy Maintenance
Device_1_6	Hard Disk	No	8.00 TB			HPT DISK 0_5	Legacy Maintenance
Device_1_7	Hard Disk	No	6.00 TB			HPT DISK 0_6	Legacy Maintenance
Device_1_8	Hard Disk	No	12.00 TB			HPT DISK 0_7	Legacy Maintenance

Arrays you create and the properties associated with them will appear here.

- **Maintenance**


Once an array has been created, click maintenance for options to manage your array.

- **Array Information**

Clicking on the maintenance button will show you the Array information box. Different array statuses (Normal, critical, disabled) will have different maintenance options.

2.5.4.2. Array Information & Maintenance Options

- **Normal Status**

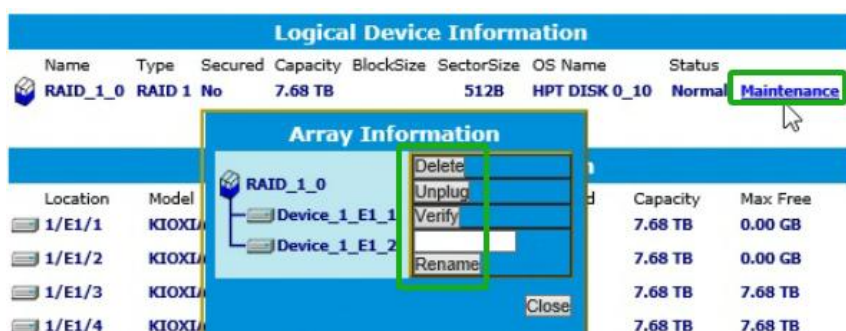

Name	Type	Secured	Capacity	BlockSize	SectorSize	OS Name	Status
RAID_1_0	RAID 1	No	7.68 TB		512B	HPT DISK 0_10	Normal Maintenance


Location	Model	Capacity	Max Free
1/E1/1	KIOXIA	7.68 TB	0.00 GB
1/E1/2	KIOXIA	7.68 TB	0.00 GB
1/E1/3	KIOXIA	7.68 TB	7.68 TB
1/E1/4	KIOXIA	7.68 TB	7.68 TB

Arrays with the **Normal** status are healthy and functioning properly and have the following options:

- **Delete** – deletes the selected RAID array.
- **Unplug** – to ensure data security, if you want to unplug NVMe while the system works, click unplug first and then unplug NVMe.

- **Verify** – verifies the integrity of the RAID array (**only support RAID1/10**)
- **Rename** – renames the RAID array.

- **Critical Status**

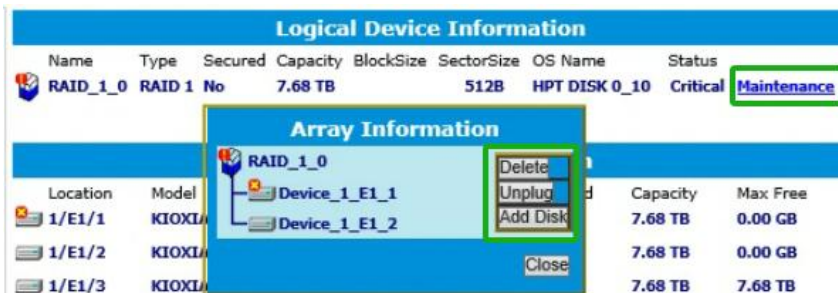

Arrays with the **Critical** status can be accessed and utilized but are no longer fault tolerant. A Critical array should be rebuilt as soon as possible to restore redundancy.

A critical status array has all the normal status options except the following:

- The Array can no longer be renamed
- **Add Disk** replaces the **Verify Disk** option

Once the array status changes to critical, the faulty disk will be taken offline, and you can either:

- Reinsert the same disk
- Insert a new disk

Reinserting the same disk should trigger the rebuilding status since data on the disk would be recognized.

If you insert a new disk, clicking **Add Disk** will allow you to select and add it to the array.

- **Disabled Status**



An array with the **Disabled** status means that the RAID level does not have enough disks to function.

- Your data will be inaccessible.

- Rebuilding will not trigger since the RAID array does not have enough parity data to rebuild.

Your option in Maintenance is:

- **Delete** – will delete the array.

2.5.4.3. Physical Device Information

Physical Device Information				
Location	Model	Secured	Capacity	Max Free
1/E1/1	KIOXIA KCDY1RUG7T68	No	7.68 TB	0.00 GB
1/E1/2	KIOXIA KCDY1RUG7T68	No	7.68 TB	0.00 GB
1/E1/3	KIOXIA KCDY1RUG7T68	No	7.68 TB	0.00 GB
1/E1/4	KIOXIA KCDY1RUG7T68	No	7.68 TB	0.00 GB
1/E1/5	Micron_7450_MTFDKCC7T6TFR	No	7.68 TB	7.68 TB
1/E1/6	Micron_7400_MTFDKCB7T6TDZ	No	7.68 TB	7.68 TB
1/E1/7	Micron_7450_MTFDKCC7T6TFR	No	7.68 TB	7.68 TB
1/E1/8	KIOXIA KCDY1RUG7T68	No	7.68 TB	7.68 TB

The disks hosted by the AIC will appear here.

- **Location** – which AIC and port the disk is located in.
- **Model** – model number of the disk connected.
- **Capacity** – total capacity of the disk.
- **Max Free** – total capacity that is not configured.

2.5.5. Rescan


Clicking **Rescan** will ask the driver to recheck and report the array status.

When **Rescan** is initiated by the WebGUI, the driver will immediately check and see whether the status of any disk has changed. If any changes occur, the disks and RAID array status will be updated to reflect this.

- **Disk Status** – if any disks were added or removed, or if a disk is no longer responding, the status will change.
- **RAID status** – the RAID array's status may change depending on the status of the disks.

2.5.6. Delete an Array

1. Open the **WebGUI**.
2. Click the **Logical → Maintenance**.
3. Click **Delete** to delete the RAID array.

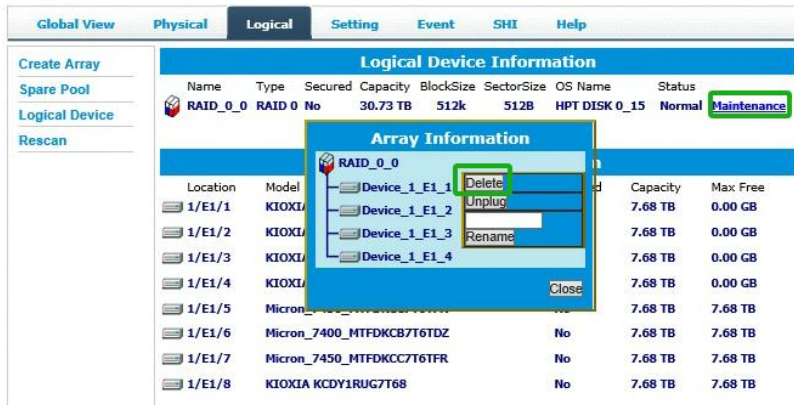

4. A pop-up box on the page. Click **OK** to confirm the RAID array deletion.

localhost:7402 says

All data on the array you selected will be deleted. Do you want to continue?



5. There is no deleted RAID array information at Logical Device Information, indicating that the RAID array deletion operation is complete.

Notes:

When the RAID array is in the rebuild, verify foreground/background init status or be mounted; deleting the RAID array will prompt in use.

When the RAID array is rebuilt, verify the foreground and background init status. If you want to delete the RAID array, you can choose to stop the current operation and continue to delete the RAID array.

When the RAID array is mounted, if you want to delete the RAID array, you can unmount the RAID array and continue to delete it.

If you want to use a single disk after deleting the RAID, please restart the system after deleting the RAID.

When the single disk status shows the Legacy status in WebGUI, it can be used normally.

2.6. Setting

●Windows WebGUI Setting Tab:

System Setting	
Enable auto rebuild.	Enabled ▾
Enable Continue Rebuilding on error.	Enabled ▾
Restrict to localhost access.	Enabled ▾
Set Rebuild Priority:	Medium ▾
Set Enclosure Fan Speed:	Auto ▾
Port Number:	7402
Enable collecting system logs.	Disabled ▾
Temperature Unit:	°F ▾
<input type="button" value="Submit"/>	

Password Setting	
Password:	<input type="text"/>
Confirm:	<input type="text"/>
<input type="button" value="Submit"/>	

●Linux WebGUI Setting Tab:

System Setting	
Enable auto rebuild.	Enabled ▾
Enable Continue Rebuilding on error.	Enabled ▾
Restrict to localhost access.	Disabled ▾
Set Rebuild Priority:	Medium ▾
Port Number:	7402
<input type="button" value="Submit"/>	

Password Setting	
Password:	<input type="text"/>
Confirm:	<input type="text"/>
<input type="button" value="Submit"/>	

You can change the WebGUI settings in the **Setting** tab according to your preferred behavior and requirements.

Using this tab, you can change the following:

- Enable auto-rebuilding
- Enable rebuilding on error
- Restrict to localhost
- Set rebuild priority
- Set Enclosure Fan Speed¹
- Change port number
- Collecting system log¹
- Change Temperature Unit¹

- Change HRM password
- Adding Recipients to receive notification mail

Note:¹ This setting is only supported by the Windows HighPoint RAID Management Software.

2.6.1. System Setting

System Setting	
Enable auto rebuild.	Enabled ▾
Enable Continue Rebuilding on error.	Enabled ▾
Restrict to localhost access.	Enabled ▾
Set Rebuild Priority:	Medium ▾
Set Enclosure Fan Speed:	Auto ▾
Port Number:	7402
Enable collecting system logs.	Disabled ▾
Temperature Unit:	°F ▾
<input type="button" value="Submit"/>	

- **Enable auto rebuild**

(default: Enabled)

When a physical disk fails, the controller will take the disk offline. Once you re-insert or replace the disk, the controller will only automatically rebuild the array if this option is enabled.

- **Enable continue rebuilding on error**

(default: Enabled)

When enabled, the rebuilding process will ignore bad disk sectors and continue rebuilding until completion. When the rebuild is finished, the data may be accessible but also inconsistent due to any bad sectors that were ignored during the procedure. HighPoint recommends checking the event log periodically for bad sector warnings if this option is enabled.

- **Restrict to localhost access**

(default: Enabled)

Remote access to the controller will be restricted when enabled; other users in your network cannot log in to the HRM remotely.

- **Rebuild Priority**

(default: Medium)

You can specify the amount of system resources you want to dedicate to rebuilding the array. There are 5 levels of priority [Lowest, Low, Medium, High, Highest]

- **Set Enclosure Fan Speed**

(default: Auto)

The default fan speed is Auto. You can adjust the speed of the fan. There are 5 levels [Auto, Off, Low, Medium, High]

- **Port Number**

(default: 7402)

The default port that the HighPoint HRM listens on is 7402. You may change it to any open port.

- **Enable collecting system logs**

(default: Disabled)

You can set it to enable the collection of system logs at any time. The collected system logs are stored on the **C:/Windows/hpt_diagdriver**. The maximum capacity of the collected system log is 800MB, and parts exceeding 800MB will be overwritten forward.

- **Temperature Unit**

(default: °F)

The default temperature unit is Fahrenheit. You can change it to Celsius.

Note: *The temperature unit function is only supported by windows.*

2.6.2. Password Setting



The screenshot shows a web form titled "Password Setting" with a blue header. Below the header, there are two input fields: "Password:" and "Confirm:". Below the "Confirm:" field is a "Submit" button.

2.6.2.1. Changing your HRM (HighPoint RAID Management) password

Under **Password Setting**, type your new password, confirm it, then click **Submit**.

2.6.2.2. Recovering your HRM (HighPoint RAID Management) password

If you forget your password, you can delete the file `hptuser.dat`. Then, restart the computer and open the WebGUI to set a new password.

- **For Windows Users:**

1. Open **File Explorer**.
2. Navigate to **C:/Windows/**
3. Delete **hptuser.dat**.
4. Reboot.

- **For Linux Users:**

If you forget your password, you can't recover it; you can only uninstall the HighPoint RAID Management software and then reinstall it.

2.6.3. Email Setting

The screenshot shows a web interface with a navigation bar at the top containing 'Global View', 'Physical', 'Logical', 'Setting' (selected), 'Event', 'SHI', and 'Help'. On the left, there is a 'System' menu with 'Email' selected. The main content area is titled 'SMTP Setting' and includes the following elements:

- Enable Event Notification
- Server Address (name or IP): [text input]
- Mail From (E-mail address): [text input]
- Login Name: [text input]
- Password: [text input]
- SMTP Port: [text input with value '25']
- Support SSL:
- [Change Setting] button

Below this is a 'Recipients' section with a table header:

E-mail	Name	Event Level
--------	------	-------------

Under the table is an 'Add Recipient' section with the following fields:

- E-mail: [text input]
- Name: [text input]
- Event Level: Information Warning Error
- [Add Test] button

You can instruct the controller to send an email to the recipients of your choosing when certain events trigger.

2.6.3.1. SMTP Setting

This is a close-up of the 'SMTP Setting' section from the previous screenshot. It shows the following configuration options:

- Enable Event Notification
- Server Address (name or IP): [text input]
- Mail From (E-mail address): [text input]
- Login Name: [text input]
- Password: [text input]
- SMTP Port: [text input with value '25']
- Support SSL:
- [Change Setting] button

To set up email alerts:

1. Check the **Enable Event Notification** box.
2. Enter the ISP (Internet service provider) **Server Address** name or SMTP name.
3. Type in the **email address** of the **sender**. (email account that is going to **send** the alert)
4. Type in the account **name and password** of the **sender**.
5. Type in the **SMTP port** (default: **25**).
6. Check the **Support SSL** box if SSL is supported by your ISP (port value will change to **465**, refer to your ISP if you have a specific SMTP port).

Note: After you click 'Change Setting' the password box will become blank.

2.6.3.2. Email Precautions

If you want to receive notification mail using a Webmail account, you may need to modify the mailbox's permissions. The following example is for a Yahoo and Outlook webmail account.

● Yahoo Setting


To change permission settings, please refer to the following link:

<https://help.yahoo.com/kb/account/SLN27791.html?impressions=true>

1. Log in to Yahoo email; click "**Sign in**" to log in: <https://www.yahoo.com>




2. After a successful login, click "**Account Info**" under the user name:

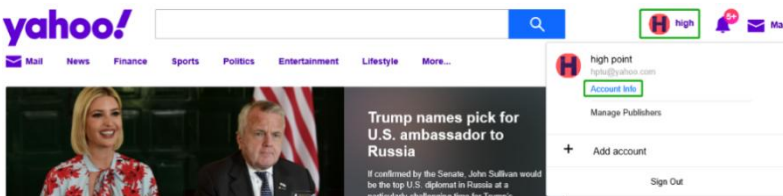


3. Go to the "**Account Info**" page and click "**Account Security**".

On the "Account Security" page, click the "**Allow apps that use less secure sign-in**" button:

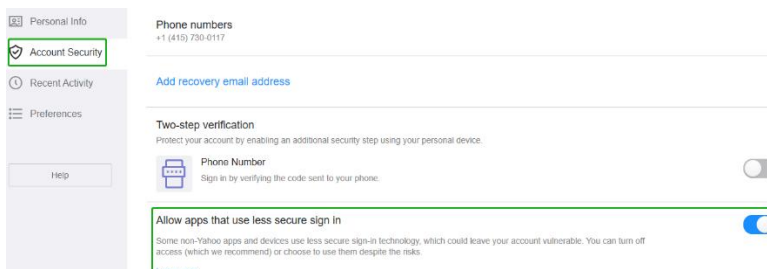


● Outlook Setting


1. Sign in to mail and set it up. Login email address link: <https://outlook.live.com/mail/inbox>

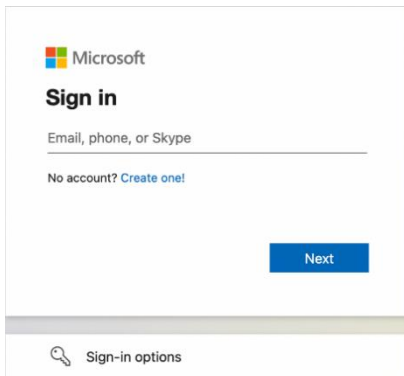

2. Click **Settings** in the upper right corner and select the lower left corner: **View all outlook settings**.

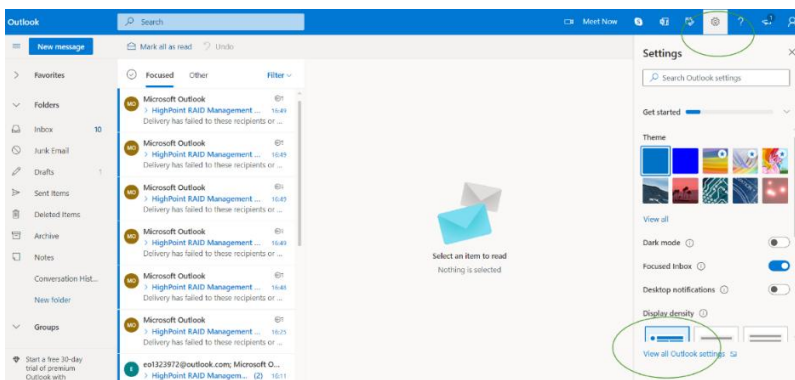


3. Enter the redirect page, select **mail**, then click **Sync email**.

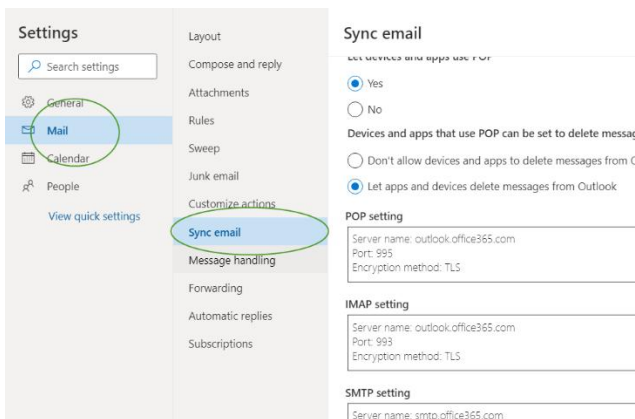

4. Let devices and apps use pop select "yes".

5. Choose “Let app and devices delete messages from Outlook”.

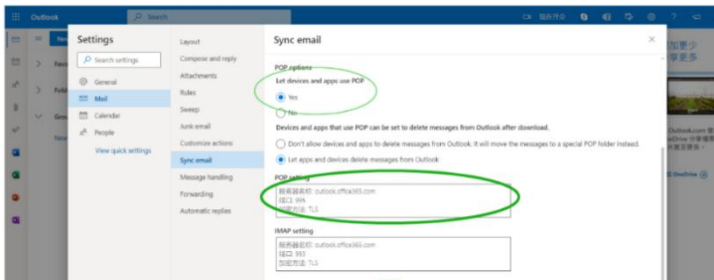

Note: If you are having trouble configuring notifications for your Email account, please contact our [Technical Support Department](#)


2.6.3.3. Adding Recipients

A screenshot of the 'Add Recipient' form. It features a blue header with the text 'Add Recipient'. Below the header, there are three input fields: 'E-mail:', 'Name:', and 'Event Level:'. The 'Event Level:' field has three checkboxes: 'Information', 'Warning', and 'Error'. At the bottom left, there are two buttons: 'Add' and 'Test'.

You can add multiple email addresses as receivers of a notice.

1. Type the email of the recipient in the **E-mail** text box.
2. Type the name of the recipient in the **Name** text box.
3. Check which type(s) of events will trigger an email in the respective **Event Level** check boxes.
4. **(Optional)** Click **test** to confirm settings are correct by sending a test email.
5. Click **add** to add the recipient list.
6. The added recipient will be displayed under **Recipients**.
7. The email will send your recipients the output recorded in the event log.

2.7. Event

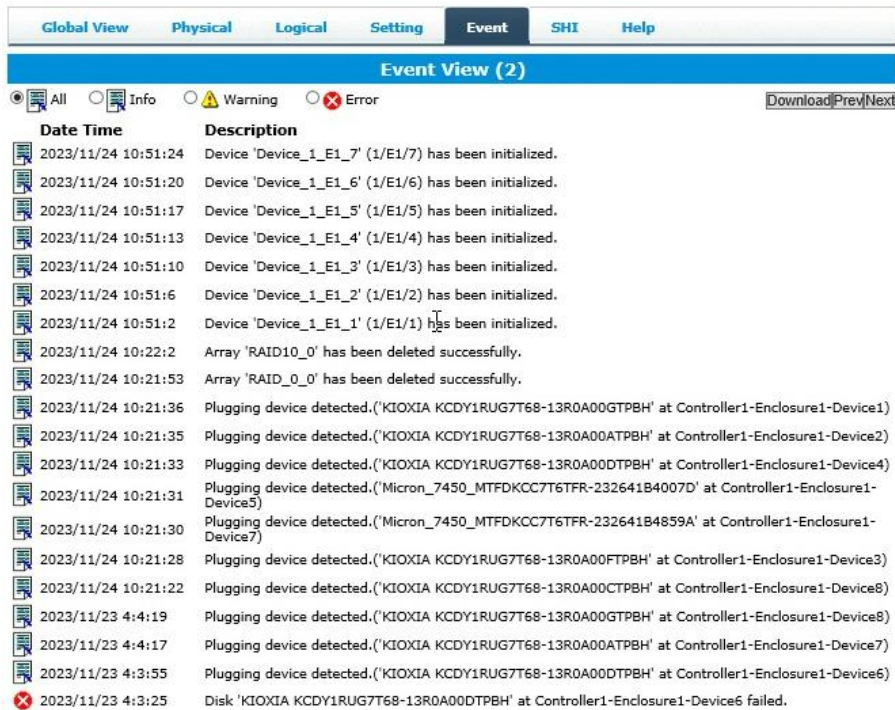

Date Time	Description
2023/11/24 10:51:24	Device 'Device_1_E1_7' (1/E1/7) has been initialized.
2023/11/24 10:51:20	Device 'Device_1_E1_6' (1/E1/6) has been initialized.
2023/11/24 10:51:17	Device 'Device_1_E1_5' (1/E1/5) has been initialized.
2023/11/24 10:51:13	Device 'Device_1_E1_4' (1/E1/4) has been initialized.
2023/11/24 10:51:10	Device 'Device_1_E1_3' (1/E1/3) has been initialized.
2023/11/24 10:51:6	Device 'Device_1_E1_2' (1/E1/2) has been initialized.
2023/11/24 10:51:2	Device 'Device_1_E1_1' (1/E1/1) has been initialized.
2023/11/24 10:22:2	Array 'RAID10_0' has been deleted successfully.
2023/11/24 10:21:53	Array 'RAID_0_0' has been deleted successfully.
2023/11/24 10:21:36	Plugging device detected.('KIOXIA KCDY1RUG7T68-13R0A00GTPBH' at Controller1-Enclosure1-Device1)
2023/11/24 10:21:35	Plugging device detected.('KIOXIA KCDY1RUG7T68-13R0A00ATPBH' at Controller1-Enclosure1-Device2)
2023/11/24 10:21:33	Plugging device detected.('KIOXIA KCDY1RUG7T68-13R0A00DTPBH' at Controller1-Enclosure1-Device4)
2023/11/24 10:21:31	Plugging device detected.('Micron_7450_MTFDKCC7T6TFR-232641B4007D' at Controller1-Enclosure1-Device5)
2023/11/24 10:21:30	Plugging device detected.('Micron_7450_MTFDKCC7T6TFR-232641B4859A' at Controller1-Enclosure1-Device7)
2023/11/24 10:21:28	Plugging device detected.('KIOXIA KCDY1RUG7T68-13R0A00FTPBH' at Controller1-Enclosure1-Device3)
2023/11/24 10:21:22	Plugging device detected.('KIOXIA KCDY1RUG7T68-13R0A00CTPBH' at Controller1-Enclosure1-Device8)
2023/11/23 4:4:19	Plugging device detected.('KIOXIA KCDY1RUG7T68-13R0A00GTPBH' at Controller1-Enclosure1-Device8)
2023/11/23 4:4:17	Plugging device detected.('KIOXIA KCDY1RUG7T68-13R0A00ATPBH' at Controller1-Enclosure1-Device7)
2023/11/23 4:3:55	Plugging device detected.('KIOXIA KCDY1RUG7T68-13R0A00DTPBH' at Controller1-Enclosure1-Device6)
2023/11/23 4:3:25	Disk 'KIOXIA KCDY1RUG7T68-13R0A00DTPBH' at Controller1-Enclosure1-Device6 failed.

The event view is a basic error-logging tool built into the HighPoint WebGUI.

Log entries associated with the HighPoint device are in the event tab. The event log provides useful information when troubleshooting your setup.

2.7.1. View the Event Log

On this page, you can view the event log of RAID creation, RAID deletion, disk drop, disk up, etc..

You can switch between event view by clicking on **Prev** and **Next**.




- **Prev** – View the previous log page
- **Next** – View the next log page

2.7.2. Download the Event Log

You can click **Download** to save the log file on your system.

2.7.3. Event Log Icon Guide

The following table describes the Event Log Icon.

Icon	Name	Definition
	Information	Includes general administrative tasks: <ul style="list-style-type: none">• Create/delete arrays• Configuring spares• Rebuilding arrays• Configuring event notifications• Configuring maintenance
	Warning	Alerts issued by the HostAdapter: <ul style="list-style-type: none">• High temperatures• Sector errors• Communication errors• Verification errors
	Error	Hardware related problems <ul style="list-style-type: none">• Disk failure• Broken errors• Memory failure

2.8. SHI

SHI outputs information collected using SMART (Self-Monitoring Analysis and Reporting Technology) Disk Technology. The data provided on this tab helps you anticipate any disk failures based on various monitored disk properties.

Global View	Physical	Logical	Setting	Event	SHI	Help
						Schedule
Storage Health Inspector(SHI)						
Controller ID	Location#	Device Serial Number	RAID	°F	Total Bytes Written	S.M.A.R.T
1	E1_1	13R0A00GTPBH	None	105	210.39 TB	Detail
1	E1_2	13R0A00ATPBH	None	105	240.24 TB	Detail
1	E1_3	13R0A00FTPBH	None	105	251.34 TB	Detail
1	E1_4	13R0A00DTPBH	None	107	131.31 TB	Detail
1	E1_5	232641B4007D	None	95	104.13 TB	Detail
1	E1_6	2316423C35A4	None	105	60.84 TB	Detail
1	E1_7	232641B4859A	None	96	123.61 TB	Detail
1	E1_8	13R0A00CTPBH	None	107	84.15 TB	Detail
HDD Temperature Threshold						
Set harddisk temperature threshold : <input type="text" value="149"/> °F <input type="button" value="Set"/>						

2.8.1. Start SMART Monitor

To access the SMART attributes of an individual disk:

1. Log in to the **WebGUI**.
2. Select the proper AIC using the drop-down menu on the top left.
3. Click the **SHI** tab.
4. Click **Detail** on the desired disk.

Controller ID	Location#	Device Serial Number	RAID	%F	Total Bytes Written	S.M.A.R.T.
1	E1_1	13R0A00GTPBH	None	105	210.39 TB	Detail
1	E1_2	13R0A00ATPBH	None	105	240.24 TB	Detail
1	E1_3	13R0A00FTPBH	None	105	251.34 TB	Detail
1	E1_4	13R0A00DTPBH	None	107	131.31 TB	Detail
1	E1_5	232641B4007D	None	95	104.13 TB	Detail
1	E1_6	2316423C35A4	None	105	60.84 TB	Detail
1	E1_7	232641B4859A	None	96	123.61 TB	Detail
1	E1_8	13R0A00CTPBH	None	107	84.15 TB	Detail

Name	Value
Critical Warning	0x0
Composite Temperature (C)	41
Available Spare	100%
Available Spare Threshold	8%
Percentage Used	0%
Data Units Read	0x482ccab1
Data Units Written	0x1aee2d37
Host Read Commands	0x164045cb1
Host Write Commands	0x68bb630a
Controller Busy Time	0x1356
Power Cycles	0x31d
Power On Hours	0x228
Unsafe Shutdowns	0x208
Media and Data Integrity Errors	0x0
Number of Error Information Log Entries	0x0
Warning Temperature Time	0x50
Critical Composite Temperature Time	0x0
Temperature Sensor 1 (C)	0
Temperature Sensor 2 (C)	0
Temperature Sensor 3 (C)	0
Temperature Sensor 4 (C)	0
Temperature Sensor 5 (C)	0
Temperature Sensor 6 (C)	0
Temperature Sensor 7 (C)	0
Temperature Sensor 8 (C)	0

Note: The **TBW** (Total Bytes Written) information can be used to monitor the lifespan of the NVMe disks.

Controller ID	Location#	Device Serial Number	RAID	%F	Total Bytes Written	S.M.A.R.T.
1	E1_1	S463NF0K409595F	None	96	1023.91 TB	Detail
1	E1_2	S5JYNS0N602754T	None	102	75.45 TB	Detail

Set harddisk temperature threshold : °F

2.8.2. Set Temperature Threshold

Note: 65°C is the default. This setting can be adjusted to correspond with the manufacturer's official specifications.

1. Log in to the **WebGUI**.
2. Select the proper AIC using the drop-down menu on the top left.
3. Click the **SHI** tab.
4. Input temperature value.

HDD Temperature Threshold

Set harddisk temperature threshold : °F

5. If the temperature exceeds 149°F, it will display “**Red**”.

Global View	Physical	Logical	Setting	Event	SHI	Help
Storage Health Inspector(SHI)						Schedule
Controller ID	Location#	Device Serial Number	RAID	°F	Total Bytes Written	S.M.A.R.T
1	E1_1	S463NF0K409595F	None	150	1023.91 TB	Detail
1	E1_2	S5JYNS0N602754T	None	111	75.45 TB	Detail
HDD Temperature Threshold						
Set harddisk temperature threshold : <input type="text" value="149"/> °F <input type="button" value="Set"/>						

2.8.3. Using Health Inspector Scheduler

The screenshot shows the 'SHI' menu item selected in the top navigation bar. Below it, the 'Tasks List' section is visible. The 'New Verify Task' form is active, showing options for task name, schedule, and time. The 'Occurs one time on' option is selected with a date of 2023-11-24 at 12:00:00. The 'Occurs every' option is also visible with a dropdown set to 'Day(s)' and 'on Sunday'. A 'Submit' button is located at the bottom of the form.

The **Health Inspector Scheduler (HIS)** enables you to schedule the disk/ RAID array checkups to ensure the disk/ RAID array functions optimally.

If you want to check the disk status on a daily, weekly, or monthly basis, you can enable this using the **HIS** function.

1. Set the **Task Name** to **t1**, select the schedule as **Weekly**, and set the time to **10:10**.
2. After clicking **Submit**, your task will be shown under the **Task List**.

The screenshot shows the 'SHI' menu item selected in the top navigation bar. Below it, the 'Tasks List' section is visible. A table with two columns, 'Name' and 'Description', is shown. The first row contains 't1' and 'Check all disks every day at 10:10:0'. A 'Delete' button is located next to the 't1' entry. Below the table, the 'Health Inspector Scheduler' form is visible, showing options for task name, schedule, and time. The 'Weekly' option is selected, and the time is set to Sunday at 10:00:00. A 'Submit' button is located at the bottom of the form.

3. When the operating temperature of the disk exceeds 65°C, a **Warning** event will appear in **Events**.

2.8.4. Create a New Verify Task

The Scheduler enables you to schedule disk/array checkups to ensure arrays are functioning optimally.

All redundant RAID arrays (RAID1/ RAID10) will appear under the New Verify Task.

1. Log into the **WebGUI**.
2. Select the proper controller from the top left drop-down.
3. Click **SHI**.
4. Click **Schedule**.
5. Select the array you want to schedule the verify task.
6. Type the name in the **Task Name** entry box.
7. Choose whether you want to schedule.
8. One-time verify task on a specific date (YYYY-MM-DD) at (HH:MM:SS, 24-hr clock).
9. Or a specific schedule you can adjust based on Daily, Weekly, or Monthly options.
10. Click **Submit**.

New Verify Task

Member 1 of "RAID10_0"

Member 2 of "RAID10_0"

Task Name:

Occurs one time on -- at ::

Schedule: Occurs every Day(s) on at ::

Start date: -- End date: --

No end date

11. Your entry will appear under the **Tasks List**.

Tasks List

Name	Description
<input type="checkbox"/> test	Verify array "Member 2 of "RAID10_0"" on 2023-11-24 at 13:0:0.

Note: The New Verify Task box only appears if you have normal status arrays. If you have a critical array, the New Rebuild Task will replace the New Verify Task.

2.9. Help



The **Help** displays help related to the WebGUI. The **Help** displays information about the controller connection to the system and controller and driver status.

You can also collect log information from this screen with a 1-click information collection system for troubleshooting.


The log will gather all necessary hardware, software, and storage configuration data and compile it into a single file, which can be transmitted directly to our FAE Team via our Online Support Portal.

2.9.1. Online Help


Online Help redirects you to the official HighPoint website.

2.9.2. Diagnostic View

1. **1-Click Self-Diagnostic Solution:** Diagnostic View provides a **1-click** information collection system for troubleshooting. It will gather all necessary hardware, software, and storage configuration data and compile it into a single file, which can be transmitted directly to our FAE Team via our Online Support Portal.

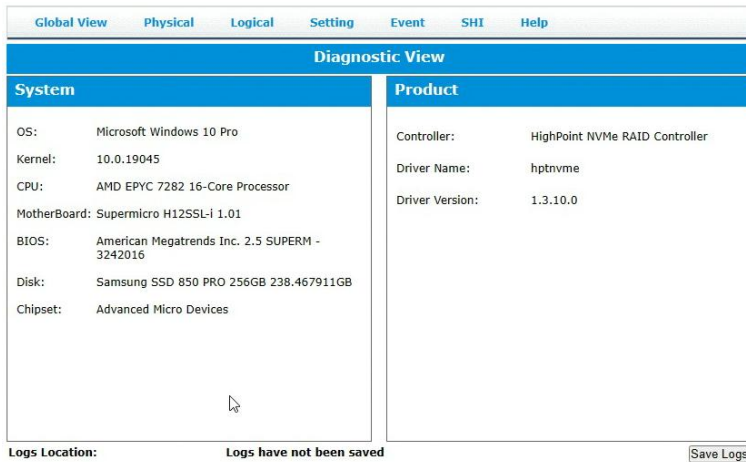

2. You can also click **Help**→**Diagnostic** to enter the diagnostic view.

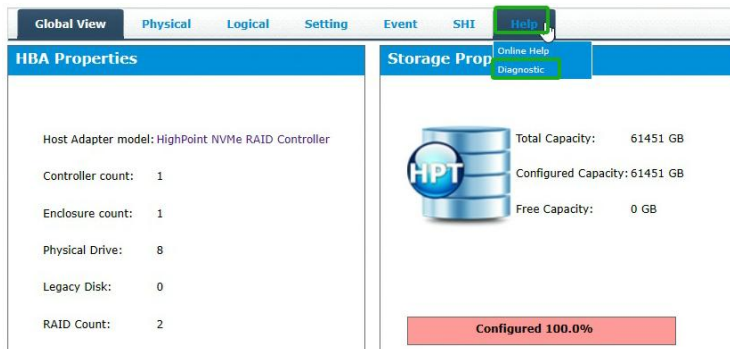

2.9.3. Saving the Log

1. Click the **Save Logs** button to create the diagnostic file.
2. **Logs Location** will display the location of the saving path.

Diagnostic View	
System	Product
OS: Microsoft Windows 10 Pro	Controller: HighPoint NVMe RAID Controller
Kernel: 10.0.19045	Driver Name: hptnvme
CPU: AMD EPYC 7282 16-Core Processor	Driver Version: 1.3.10.0
MotherBoard: Supermicro H12SSL-i 1.01	
BIOS: American Megatrends Inc. 2.5 SUPERM - 3242016	
Disk: Samsung SSD 850 PRO 256GB 238.467911GB	
Chipset: Advanced Micro Devices	

Logs Location: **Logs have been saved in following path:**

C:\Program Files (x86)\HighPoint Technologies, Inc\HighPoint RAID Management\Service\webquiroot\HighPoint_hptnvme_1.3.10.0_2023.11.24_12.53.zip

Save Logs

(Note: In the original image, a green box highlights the path text, and a green '1' is placed over the 'Save Logs' button, and a green '2' is placed over the path text.)

3. CLI (command line interface)

This section describes how to use the CLI.


3.1. Starting the CLI

3.1.1. For Windows Users

- **Method 1:** Run **Command Prompt** as Administrator, enter `hptraidconf`, and press **Enter**.

```
Administrator: Command Prompt
Microsoft Windows [Version 10.0.18363.778]
(c) 2019 Microsoft Corporation. All rights reserved.
C:\Windows\system32>hptraidconf
```

- **Method 2:** Click **Start** to find the **HighPoint RAID Management** folder, and click on **hptraidconf**.

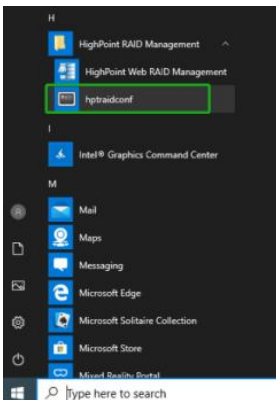

3.1.2. For Linux Users

1. Open the **Terminal** and enter root permissions.
2. Then execute the command **hptraidconf** to enter the CLI.

```
root@t-desktop: /home/t/Desktop
t@t-desktop:~/Desktop$ sudo su
[sudo] password for t:
root@t-desktop: /home/t/Desktop# hptraidconf
```

```
root@t-desktop: /home/t/Desktop
HPT CLI>
```

3.2. Using the CLI

```
help [query|create|delete|OCE/ORLM|rebuild|verify|unplug|switch|lscard  
rescan|init|events|mail|task|set|clear|help|exit|diag|secure]
```

- Use the **query** command to view the SSD7580C NVMe RAID AIC status and disks. For more information, see [query command](#).
- Use the **init** command to initialize the legacy disks. For more information, see [init command](#).
- Use the **create** command to create the RAID array. For more information, see [create command](#).
- Use the **delete** command to delete the RAID array. For more information, see [delete command](#).
- Use the **rebuild** command to rebuild a redundant RAID array when it is critical. For more information, see [rebuild command](#).
- Use the **verify** command to rescan all physical disks attached to the RAID AIC. For more information, see [verify command](#).
- Use the **unplug** command to unplug the disk while the system is working. For more information, see [unplug command](#).
- Use the **lscard** command to list multiple NVMe RAID AICs. For more information, see [lscard command](#).
- Use the **events** command to query, save, or clear the logged events. For more information, see [events command](#).
- Use the **mail** command to instruct the AIC to send an email to your chosen recipients when certain events trigger. For more information, see [mail command](#).
- Use the **task** command to automate tasks in the background. For more information, see [task command](#).
- Use the **set** command to change some HRM settings. For more information, see [set command](#).
- Use the **diag** command to collect the diagnostic information. For more information, see [diag command](#).
- Use the **secure** command to secure the disks and RAID arrays. For more information, see [secure command](#).
- Use the **help** command to find the correct commands. For more information, see [help command](#).
- Use the **clear** command to clear the screen. For more information, see [clear command](#).
- Use the **exit** command to quit the CLI. For more information, see [exit command](#).

Warning: using the Create/Delete commands may destroy data stored in the disks, and this lost data can never be recovered. Please be cautious when executing these commands. The CLI utility will not prompt you

before each command is executed.

3.3. Query Command

```
HPT CLI > query
Query Command
  This command allows you to query devices or arrays' informations.
Syntax:
  query controllers
  query enclosures
  query devices
  query devices {device_id}
  query arrays
  query arrays {array_id}
Note:
  The query devices {device_id} has add S.M.A.R.T information in version 2.1.
```

3.3.1. Syntax

query controllers

query enclosures

query devices

query devices {devices_id}

query arrays

query arrays {array_id}

Table2: Properties for Query Command

The following table lists and describes the properties of the query commands.

cmd	Property Name	Description
query	controllers	This command reports AIC information
query	enclosures	This command reports AIC Product ID information.
query	devices	This command will provide the status of each physical device hosted by the AIC.
query	devices{device_id}	This command presents information for the specified device.
query	arrays	This command lists information about each configured array, such as ID, capacity, RAID type, and status.
query	arrays {arrays_id}	This command will present information of each disk of a specified array.

3.3.2. query controller

query controllers

This command reports AIC information.

Example

HPT CLI> query controllers

```
HPT CLI > query controllers
ID          Channel      Name
1           0            HighPoint NVMe RAID Controller
-----
```

3.3.3. query enclosure

query enclosures

This command reports AIC Product ID information.

Example

HPT CLI> query enclosures

```
HPT CLI > query enclosures
ID   Secure  VendorID  ProductID  NumberOfPYH
-----
1/E1 No      HPT      SSD7580C NVMe Controller  8
```

3.3.4. query device

1. query devices

This command will provide the status of each physical disk hosted by the AIC. It lists disk IDs, secured status, capacity, model numbers, max free capacity, disk status, and array attributes. Each disk's status will be listed as one of the following: LEGACY, SPARE, DISABLED, and RAID.

Example

HPT CLI> query devices

```
HPT CLI > query devices
ID      Secured  Capacity  MaxFree  Flag  Status  ModelNumber
-----
1/E1/1  No       7681.50  0        SINGLE LEGACY  KIOXIA KCDY1RUG7T68
1/E1/2  No       7681.50  0        SINGLE LEGACY  KIOXIA KCDY1RUG7T68
1/E1/3  No       7681.50  0        SINGLE LEGACY  KIOXIA KCDY1RUG7T68
1/E1/4  No       960.20   0        SINGLE LEGACY  Samsung SSD 983 DCT 960GB
1/E1/5  No       7681.50  0        SINGLE LEGACY  Micron_7450_MTFDKCC7T6TFR
1/E1/6  No       7681.50  0        SINGLE LEGACY  Micron_7400_MTFDKCB7T6TDZ
1/E1/7  No       7681.50  0        SINGLE LEGACY  Micron_7450_MTFDKCC7T6TFR
1/E1/8  No       7681.50  0        SINGLE LEGACY  KIOXIA KCDY1RUG7T68
-----
```

Attributes

- **ID**

A disk ID is a string used to represent a disk. It is in the format “AIC/port/ device” for NVMe AICs. e.g. 1/E1/1 represents the disk on AIC 1 port 1.

- **Secured**

Whether the physical disk is secured.

- **Capacity**

The capacity of the disk is GB.

- **MaxFree**

The Maximum sequence free space on the disk can be used by creating the array.

- **Flag**

Shows whether the disk is single or has been created RAID.

- **Status**

This will display the disk status (1 of 4 possible states):

- **LEAGACY:** The disk's status is legacy.
- **DISABLED:** The disk cannot be used. (May be related to disk failure)
- **RAID:** The disk is a member of a RAID array.
- **SPARE:** The disk has been set as a spare disk.

- **ModelNumber**

The disk's model number.

2. query devices {device_id}

This command presents information for the specified device.

Example

HPT CLI> query devices 1/E1/1

```
HPT CLI > query devices 1/E1/1
Mode Number:      KIOXIA KCDY1RUG7T68
Serial Number:    13R0A00GTPBH
Firmware Version: 5101
Capacity(GB):    7681.50      TotalFree(GB): 0
Status:          SINGLE      Flag:          LEGACY
SED Capable:     No          SED Type:      None
Secured:         No          Cryptographic Erase Capable: No
PCIe Width:      x4          PCIe Speed:    Gen 4
Temperature (F): 105
Warning Composite Temperature Threshold (F): 170
Critical Composite Temperature Threshold (F): 185
-----
S.M.A.R.T Attributes
S.M.A.R.T Status OK.
Name                                     Value
-----
Critical Warning                         : 0x0
Composite Temperature (C)                : 41
Available Spare                           : 100%
Available Spare Threshold                 : 8%
Percentage Used                           : 0%
Data Units Read                           : 0x482ceed1
Data Units Written                        : 0x1aee2d58
Host Read Commands                        : 0x164048460
Host Write Commands                       : 0x68bb6318
Controller Busy Time                      : 0x1357
Power Cycles                              : 0x320
Power On Hours                            : 0x22a
Unsafe Shutdowns                          : 0x208
Media and Data Integrity Errors           : 0x0
Number of Error Information Log Entries    : 0x0
Warning Temperature Time                  : 0x50
Critical Composite Temperature Time       : 0x0
Temperature Sensor 1 (C)                  : 0
Temperature Sensor 2 (C)                  : 0
Temperature Sensor 3 (C)                  : 0
Temperature Sensor 4 (C)                  : 0
Temperature Sensor 5 (C)                  : 0
Temperature Sensor 6 (C)                  : 0
Temperature Sensor 7 (C)                  : 0
Temperature Sensor 8 (C)                  : 0
```

Attributes

- **Mode Number**

The disk's model number.

- **Serial Number**

The disk's serial number.

- **Firmware Version**

The disk's Firmware version.

- **Capacity**

The disk's capacity.

- **Status**

The disk's status.

- **Flag**

Shows whether the disk is single or has been created RAID.

- **SED Capable**

Whether the disk supports the SED feature.

- **SED Type**

The SED type of the disk.

- **Secured**

Whether the disk is secured.

- **Cryptographic Erase Capable**

Whether the disk supports the Cryptographic Erase feature.

- **PCIe width**

The disk's PCIe width.

- **PCIe speed**

The disk's PCIe speed.

- **Temperature**

The disk's temperature and setting temperature threshold.

- **S.M.A.R.T Attributes**

S.M.A.R.T Attributes detailed information reported by disk.

3.3.5. query array

1. query arrays

This command lists information about each configured array, such as array ID, secured status, capacity, RAID type, status, and array attributes.

Example

HPT CLI> query arrays

```
HPT CLI > query arrays
```

ID	Secured	Capacity(GB)	Type	Status	Block	Sector	Cache	Name
1	No	7681.01	RAID0	NORMAL	512k	512B	NONE	RAID_0_0

Attributes

- **ID**

The array's ID. A number generally represents an array ID.

- **Secured**

Whether the array is secured.

- **Capacity**

The capacity of the array is GB.

- **Type**

The array's type. (RAID0, RAID1, RAID10)

- **Status**

- **NORMAL:** Array status is normal.
- **CRITICAL:** Array is degraded (no data redundancy).
- **DISABLED:** Array is disabled.
- **REBUILDING:** Array is being rebuilt.
- **VERIFYING:** Array is verifying.
- **INIT(F):** Initializing an array using Foreground mode.
- **INIT(B):** Initializing an array using Background mode.
- **UNINITIALIZED:** Array is not initialized.

- **Block**

The array's block size.

- **Sector**

The array's bytes per sector.

- **Name**

The array's name.

2. query arrays {arrays_id}

This command will present information of each disk of a specified array.

Example

HPT CLI> query arrays 1

```
HPT CLI > query arrays 1
ID: 1 Name: RAID10_0
Type: RAID10 Status: NORMAL
Capacity(GB): 1919.85 BlockSize: 512k
SectorSize: 512B CachePolicy: NONE
Progress: -- Secure: No
```

ID	Secured	Capacity(GB)	Type	Status	Block	Sector	Cache	Name
1-1	No	239.98	RAID1	NORMAL	--	512B	NONE	[RAID10_0]
1-2	No	239.98	RAID1	NORMAL	--	512B	NONE	[RAID10_0]
1-3	No	239.98	RAID1	NORMAL	--	512B	NONE	[RAID10_0]
1-4	No	239.98	RAID1	NORMAL	--	512B	NONE	[RAID10_0]
1-5	No	239.98	RAID1	NORMAL	--	512B	NONE	[RAID10_0]
1-6	No	239.98	RAID1	NORMAL	--	512B	NONE	[RAID10_0]
1-7	No	239.98	RAID1	NORMAL	--	512B	NONE	[RAID10_0]
1-8	No	239.98	RAID1	NORMAL	--	512B	NONE	[RAID10_0]

Attributes

- **ID**

The array's ID. A number generally represents an array ID.

- **Secured**

Whether the array is secured.

- **Capacity**

The capacity of the array is GB.

- **Type**

The array's type. (RAID0, RAID1, RAID10)

- **Status**

- **NORMAL:** Array status is normal.

- **CRITICAL:** Array is degraded (no data redundancy).

- **DISABLED:** Array is disabled.

- **REBUILDING:** Array is being rebuilt.

- **VERIFYING:** Array is verifying.
- **INIT(F):** Initializing an array using Foreground mode.
- **INIT(B):** Initializing an array using Background mode.
- **UNINITIALIZED:** Array is not initialized.

- **Block**

The array's block size.

- **Sector**

The array's bytes per sector.

- **Name**

The array's name

3.4. Init Command

You can use init commands to initialize disks or arrays. A disk must be initialized first before being used to create arrays.

```
HPT CLI > init
```

3.4.1. Syntax

```
init {device_id} | init {array_id} {start|stop}
```

Table3: Properties for Init Command

The following table lists and describes the properties of the init commands.

cmd	Property Name	Description
init	{device_id}	This command initializes a disk for first use or a legacy disk on the AIC.
init	{array_id} {start stop}	This command starts/stops the initialization process of a redundant RAID array (RAID1).

3.4.2. init disk

1. init {device_id}

This command initializes a disk for first use or a legacy disk on the AIC.

Example

HPT CLI>init 1/E1/1

```
HPT CLI > query devices
-----
ID      Secured  Capacity  MaxFree  Flag  Status  ModelNumber
-----
1/E1/1  No       7681.50   0        SINGLE LEGACY  KIOXIA KCDY1RUG7T68
1/E1/2  No       7681.50   0        SINGLE LEGACY  KIOXIA KCDY1RUG7T68
1/E1/3  No       7681.50   0        SINGLE LEGACY  KIOXIA KCDY1RUG7T68
1/E1/4  No       960.20    0        SINGLE LEGACY  Samsung SSD 983 DCT 960GB
1/E1/5  No       7681.50   0        SINGLE LEGACY  Micron_7450_MTFDKCC7T6TFR
1/E1/6  No       7681.50   0        SINGLE LEGACY  Micron_7400_MTFDKCB7T6TDZ
1/E1/7  No       7681.50   0        SINGLE LEGACY  Micron_7450_MTFDKCC7T6TFR
1/E1/8  No       7681.50   0        SINGLE LEGACY  KIOXIA KCDY1RUG7T68
-----

HPT CLI > init 1/E1/1
Init device(1/E1/1) successfully!

HPT CLI > query devices
-----
ID      Secured  Capacity  MaxFree  Flag  Status  ModelNumber
-----
1/E1/1  No       7681.41   7681.41  SINGLE NORMAL  KIOXIA KCDY1RUG7T68
1/E1/2  No       7681.50   0        SINGLE LEGACY  KIOXIA KCDY1RUG7T68
1/E1/3  No       7681.50   0        SINGLE LEGACY  KIOXIA KCDY1RUG7T68
1/E1/4  No       960.20    0        SINGLE LEGACY  Samsung SSD 983 DCT 960GB
1/E1/5  No       7681.50   0        SINGLE LEGACY  Micron_7450_MTFDKCC7T6TFR
1/E1/6  No       7681.50   0        SINGLE LEGACY  Micron_7400_MTFDKCB7T6TDZ
1/E1/7  No       7681.50   0        SINGLE LEGACY  Micron_7450_MTFDKCC7T6TFR
1/E1/8  No       7681.50   0        SINGLE LEGACY  KIOXIA KCDY1RUG7T68
-----
```

After entering the CLI, enter the command: **query devices** to view the current NVMe disk status is **LEGACY**, enter **init 1/E1/1**, NVMe disk status is **NORMAL**.

Note: This command instructs the AIC to initialize the disk on AIC 1 port 1. All data on the disk will be destroyed.

2. init {array_id} {start|stop}

This command starts/stops the initialization process of a redundant RAID array (RAID1).

Example

HPT CLI>init 1 stop HPT CLI>init 1 start

```
HPT CLI > init 1 stop
HPT CLI > init 1 start
```

This command instructs the AIC to stop/start the initialization process on array 1. Take Samsung 970 EVO PLUS as an example; create RAID1 init time is about 10 minutes.

3.5. Create Command

This command allows you to create a new RAID array and add a spare disk.

Note: A legacy disk must be initialized first before being used to create arrays.

```
HPT CLI > create
Create Command
This command allows you to create a new RAID array or add a spare disk.
Syntax:
create {RAID0|RAID1|RAID3|RAID5|RAID6|RAID10|RAID50|JBOD|spare} [create-options]
create-option:
disks=1/2,1/3... or disks=*
Specify the disks used to create array.
name=array name
Specify the name of the array which will be created.
src=source array ID
If src argument is specified, OCE/ORLM will be started.
cp=WB, WT or NONE
Cache Policy option (WB: write back, WT: write through).
init={foreground|background|keepdata|quickinit}
Specifies array initialization option.
foreground:
Zero out all data on the array. The array is not
accessible by the operating system until initialization is completed.
background:
Allow instant access to the array. Parity blocks
will be generated in background.
keepdata:
Setup array information blocks on the drives only.
Use this option for array recovery.
quickinit:
Setup array information blocks and zero out MBR data on the array.
capacity=array capacity
Specify the capacity (xxM,xxG) of the target array.
matrix=n*m
When create RAID50 to specify the matrix options.
n : number of subarray's disk, m: number of subarray.
For example: When create a RAID50 the option matrix
can be matrix=3*2. That means 2 RAID5s each with 3 disks to form a RAID50
bs=size
Specify the block size (16k,32k,64k,128k,256k,512k,1024k)
sector=size
Specify the sector size (512B,1k,2k,4k)
secure={y|n} {force}
Specify if array is secured.
HPT CLI >
```

3.5.1. Syntax

create {RAID0|RAID1|RAID10 spare} [create-options]

Table4: Properties for Create Command

The following table lists and describes the properties of the create command.

cmd	Property Name	Description
create	RAID {RAID0 RAID1 RAID10 spare} [create-options]	This command allows you to create a new RAID array or add a spare disk.

3.5.1.1. Array Creation Profile Options

You can specify one or more create options for this command, separated by a space. The options can be typed in any order.

- **disks**

Specifies member disks that will compose a new array, e.g., disks=1/E1/1,1/E1/2, disks=*. The character * means all available disks.

- **init**

Initialization of a disk sets all data bits to 0, clearing all the data on the disk. It is important to initialize disks as previous data physically stored on the disk may interfere with new data.

- **Keep Old Data:** This option skips the initialization process, and all data on each physical disk of the array will be untouched.
- **Quick Init:** This option grants immediate access to the RAID array by skipping the initialization process, but it will delete all data. This method is recommended for NVMe storage.
- **Foreground:** The array initialization process will be set at high priority. During this time, the array is not accessible, but the initialization process will complete much faster. (Not Recommended)

Foreground initializing the array will completely zero out the data on the disks, meaning the disk will be completely wiped, and every bit on the disk will be set to 0.

- **Background:** The array initialization process will have a lower priority. During this time, the array will be accessible, but the initialization process will take much longer to complete. (Not Recommended)

Background initialization means the array will still be created, and you can still write new data onto the array. But when your array requires rebuilding, residual data left behind may interfere with the process.

Important Note: *The foreground and Background Initialization options were intended for use with hard disk drives and are not recommended for NVMe storage. Using these options with NVMe media will result in TBW degradation and performance loss.*

- **name**

Specifies the name for the array being created. If the option is omitted, the utility will assign a default name for the array.

- **Src**

Specifies an existing array to be expanded/migrated. All data on the source array will be redistributed online to the target array. If this parameter is omitted, a new array is created.

- **capacity**

Specifies the capacity, in size of MB, for the target array. Maximum capacity is default.

- **bs**

Specifies the block size, in KB, for the target array.

- **sector**

Specifies the target array's logical sector size in B/KB. This option is only valid for striped RAID levels.

- **Secured**

Specify if the array is secured.

3.5.2. Create an array

create {RAID0|RAID1|RAID10} [create-options]

This command allows you to create a new RAID array.

Example1

HPT CLI>create RAID0 disks=* capacity=* init=quickinit bs=512k

```
HPT CLI > create RAID0 disks=* capacity=* init=quickinit bs=512k
Create array successfully.

HPT CLI > query arrays 1
ID: 1 Name: RAID0_0 Status: NORMAL
Type: RAID0 Capacity(Gb): 7681.01 BlockSize: 512k
SectorSize: 512B CachePolicy: NONE
Progress: -- Secure: No
ID Secured Capacity MaxFree Flag Status ModelNumber
-----
1/E1/1 No 7681.41 6721.29 NORMAL RAID KIOXIA KCDY1RUG7T68
1/E1/2 No 7681.41 6721.29 NORMAL RAID KIOXIA KCDY1RUG7T68
1/E1/3 No 7681.41 6721.29 NORMAL RAID KIOXIA KCDY1RUG7T68
1/E1/4 No 960.13 0 NORMAL RAID Samsung SSD 983 DCT 960GB
1/E1/5 No 7681.41 6721.29 NORMAL RAID Micron_7450_MTFDKCC7T6TFR
1/E1/6 No 7681.41 6721.29 NORMAL RAID Micron_7400_MTFDKCB7T6TDZ
1/E1/7 No 7681.41 6721.29 NORMAL RAID Micron_7450_MTFDKCC7T6TFR
1/E1/8 No 7681.41 6721.29 NORMAL RAID KIOXIA KCDY1RUG7T68
```

This command instructs the system to create a RAID0 array using the disks attached to AIC 1 ports 1-16, maximum capacity, and Block Size 512KB.

Example2

HPT CLI>create RAID0 disks=* capacity=100000 init=quickinit bs=512k

```
HPT CLI > create RAID0 disks=* capacity=100000 init=quickinit bs=512k
Create array successfully.

HPT CLI > query arrays 1
ID: 1 Name: RAID0_1 Status: NORMAL
Type: RAID0 Capacity(Gb): 100.00 BlockSize: 512k
SectorSize: 512B CachePolicy: NONE
Progress: -- Secure: No
ID Secured Capacity MaxFree Flag Status ModelNumber
-----
1/E1/1 No 7681.41 7668.92 NORMAL RAID KIOXIA KCDY1RUG7T68
1/E1/2 No 7681.41 7668.92 NORMAL RAID KIOXIA KCDY1RUG7T68
1/E1/3 No 7681.41 7668.92 NORMAL RAID KIOXIA KCDY1RUG7T68
1/E1/4 No 960.13 947.63 NORMAL RAID Samsung SSD 983 DCT 960GB
1/E1/5 No 7681.41 7668.92 NORMAL RAID Micron_7450_MTFDKCC7T6TFR
1/E1/6 No 7681.41 7668.92 NORMAL RAID Micron_7400_MTFDKCB7T6TDZ
1/E1/7 No 7681.41 7668.92 NORMAL RAID Micron_7450_MTFDKCC7T6TFR
1/E1/8 No 7681.41 7668.92 NORMAL RAID KIOXIA KCDY1RUG7T68
```

This command instructs the system to create a RAID0 array using the disks attached to AIC 1 ports 1- 16. The capacity is 100GB, and the Block Size is 512KB.

3.5.3. Add Spare Disks

`create spare {device_id}`

This command allows you to add a spare disk.

Example

HPT CLI>create spare disks=1/E1/1

```
HPT CLI > query devices
ID      Secured  Capacity  MaxFree  Flag  Status  ModelNumber
-----
1/E1/1  No       7681.41  7681.41  SINGLE  NORMAL  KIOXIA KCDY1RUG7T68
1/E1/2  No       7681.41  7681.41  SINGLE  NORMAL  KIOXIA KCDY1RUG7T68
1/E1/3  No       7681.41  7681.41  SINGLE  NORMAL  KIOXIA KCDY1RUG7T68
1/E1/4  No       960.13   960.13   SINGLE  NORMAL  Samsung SSD 983 DCT 960GB
1/E1/5  No       7681.41  7681.41  SINGLE  NORMAL  Micron_7450_MTFDKCC7T6TFR
1/E1/6  No       7681.41  7681.41  SINGLE  NORMAL  Micron_7400_MTFDKCB7T6TDZ
1/E1/7  No       7681.41  7681.41  SINGLE  NORMAL  Micron_7450_MTFDKCC7T6TFR
1/E1/8  No       7681.41  7681.41  SINGLE  NORMAL  KIOXIA KCDY1RUG7T68

HPT CLI > create spare disks=1/E1/1
Add spare disk successfully.

HPT CLI > query devices
ID      Secured  Capacity  MaxFree  Flag  Status  ModelNumber
-----
1/E1/1  No       7681.41  7681.41  SINGLE  SPARE   KIOXIA KCDY1RUG7T68
1/E1/2  No       7681.41  7681.41  SINGLE  NORMAL  KIOXIA KCDY1RUG7T68
1/E1/3  No       7681.41  7681.41  SINGLE  NORMAL  KIOXIA KCDY1RUG7T68
1/E1/4  No       960.13   960.13   SINGLE  NORMAL  Samsung SSD 983 DCT 960GB
1/E1/5  No       7681.41  7681.41  SINGLE  NORMAL  Micron_7450_MTFDKCC7T6TFR
1/E1/6  No       7681.41  7681.41  SINGLE  NORMAL  Micron_7400_MTFDKCB7T6TDZ
1/E1/7  No       7681.41  7681.41  SINGLE  NORMAL  Micron_7450_MTFDKCC7T6TFR
1/E1/8  No       7681.41  7681.41  SINGLE  NORMAL  KIOXIA KCDY1RUG7T68
```

This command instructs the system to set the disk on AIC 1 port 1 as a spare disk.

3.6. Delete Command

This command allows you to delete an existing RAID array or remove a spare disk. After deletion, the original array and all data will be lost. All the member disks will be listed as available single disks.

Note: If you want to use a single disk after deleting the RAID, please restart the system after deleting the RAID. When the single disk status shows the Legacy status in CLI, it can be used normally.

```
HPT CLI > delete
Delete Command
  This command allows you to delete an existing RAID array or remove
  a spare disk. After deletion, the original array and all data on it
  will be lost. All the member disks will be listed as available single disks.
Syntax:
  delete {array id | spare id}
```

3.6.1. Syntax

delete {array_or_spare_id}

Table5: Properties for Delete Command

The following table lists and describes the properties of the delete command.

cmd	Property Name	Description
delete	{spare_id}	This command instructs the system to delete the spare disk.
delete	{array_id}	This command instructs the system to delete the array.

3.6.2. Delete an array

delete {array_id}

This command allows you to delete the array.

Example

HPT CLI>delete 1

```
HPT CLI > query arrays
ID      Secured Capacity(GB)  Type      Status  Block  Sector  Cache      Name
-----
1       No                    100.00   RAID0   NORMAL  512k   512B   NONE      RAID0_3
HPT CLI > delete 1
Delete array(1) successfully!
HPT CLI > query arrays
ID      Secured Capacity(GB)  Type      Status  Block  Sector  Cache      Name
-----
```

This command allows you to delete the array whose id is “1”. You can [query the array ID](#) before the deletion.

3.6.3. Delete Spare Disks

`delete {spare_id}`

This command allows you to delete the spare disk.

Example

HPT CLI>delete 1/E1/1

```
HPT CLI > query devices
ID      Secured  Capacity  MaxFree  Flag  Status  ModelNumber
-----
1/E1/1  No       7681.41   7681.41  SINGLE SPARE   KIOXIA_KCDY1RUG7T68
1/E1/2  No       7681.41   7681.41  SINGLE NORMAL KIOXIA_KCDY1RUG7T68
1/E1/3  No       7681.41   7681.41  SINGLE NORMAL KIOXIA_KCDY1RUG7T68
1/E1/4  No       960.13    960.13   SINGLE NORMAL Samsung SSD 983 DCT 960GB
1/E1/5  No       7681.41   7681.41  SINGLE NORMAL Micron_7450_MTFDKCC7T6TFR
1/E1/6  No       7681.41   7681.41  SINGLE NORMAL Micron_7400_MTFDKCB7T6TDZ
1/E1/7  No       7681.41   7681.41  SINGLE NORMAL Micron_7450_MTFDKCC7T6TFR
1/E1/8  No       7681.41   7681.41  SINGLE NORMAL KIOXIA_KCDY1RUG7T68
-----
HPT CLI > delete 1/E1/1
Spare delete '1/E1/1' successfully!

HPT CLI > query devices
ID      Secured  Capacity  MaxFree  Flag  Status  ModelNumber
-----
1/E1/1  No       7681.41   7681.41  SINGLE NORMAL KIOXIA_KCDY1RUG7T68
1/E1/2  No       7681.41   7681.41  SINGLE NORMAL KIOXIA_KCDY1RUG7T68
1/E1/3  No       7681.41   7681.41  SINGLE NORMAL KIOXIA_KCDY1RUG7T68
1/E1/4  No       960.13    960.13   SINGLE NORMAL Samsung SSD 983 DCT 960GB
1/E1/5  No       7681.41   7681.41  SINGLE NORMAL Micron_7450_MTFDKCC7T6TFR
1/E1/6  No       7681.41   7681.41  SINGLE NORMAL Micron_7400_MTFDKCB7T6TDZ
1/E1/7  No       7681.41   7681.41  SINGLE NORMAL Micron_7450_MTFDKCC7T6TFR
1/E1/8  No       7681.41   7681.41  SINGLE NORMAL KIOXIA_KCDY1RUG7T68
-----
```

This command is used to remove the spare disk on AIC 1 port 1.

3.7. Unplug Command

To ensure data security, if you want to unplug an existing RAID array or disks while the system works, use the unplug command first and then unplug the disks.

```
HPT CLI > unplug
Unplug Command
This command allows you to unplug an existing RAID array or device.
After you have unplugged the array or device, you can hot plug it.
Also by running the rescan command you can find it back.
Please refering the rescan command help.
```

3.7.1. Syntax

unplug {array_id or device_id}

Table6: Properties for Unplug Command

The following table lists and describes the properties of the unplug commands.

cmd	Property Name	Description
unplug	{device_id}	This command instructs the system to unplug the disk.
unplug	{array_id}	This command instructs the system to unplug the array.

3.7.2. Unplug disk

unplug {device_id}

This command instructs the system to unplug the disk.

Example

HPT CLI>unplug 1/E1/1

```
HPT CLI > query devices
ID      Secured  Capacity  MaxFree  Flag  Status  ModelNumber
-----
1/E1/1  No       7681.41   7681.41  SINGLE NORMAL KIOXIA_KCDY1RUG7T68
1/E1/2  No       7681.41   7681.41  SINGLE NORMAL KIOXIA_KCDY1RUG7T68
1/E1/3  No       7681.41   7681.41  SINGLE NORMAL KIOXIA_KCDY1RUG7T68
1/E1/4  No       960.13    960.13   SINGLE NORMAL Samsung SSD 983 DCT 960GB
1/E1/5  No       7681.41   7681.41  SINGLE NORMAL Micron_7450_MTFDKCC7T6TFR
1/E1/6  No       7681.41   7681.41  SINGLE NORMAL Micron_7400_MTFDKCC7T6TFR
1/E1/7  No       7681.41   7681.41  SINGLE NORMAL Micron_7450_MTFDKCC7T6TFR
1/E1/8  No       7681.41   7681.41  SINGLE NORMAL KIOXIA_KCDY1RUG7T68

HPT CLI > unplug 1/E1/1
Unplug device(1/E1/1) successfully!

HPT CLI > query devices
ID      Secured  Capacity  MaxFree  Flag  Status  ModelNumber
-----
1/E1/2  No       7681.41   7681.41  SINGLE NORMAL KIOXIA_KCDY1RUG7T68
1/E1/3  No       7681.41   7681.41  SINGLE NORMAL KIOXIA_KCDY1RUG7T68
1/E1/4  No       960.13    960.13   SINGLE NORMAL Samsung SSD 983 DCT 960GB
1/E1/5  No       7681.41   7681.41  SINGLE NORMAL Micron_7450_MTFDKCC7T6TFR
1/E1/6  No       7681.41   7681.41  SINGLE NORMAL Micron_7400_MTFDKCC7T6TFR
1/E1/7  No       7681.41   7681.41  SINGLE NORMAL Micron_7450_MTFDKCC7T6TFR
1/E1/8  No       7681.41   7681.41  SINGLE NORMAL KIOXIA_KCDY1RUG7T68
```

This command allows you to remove a disk from a running system without shutting down.

3.7.3. Unplug array

`unplug {array_id}`

This command instructs the system to unplug the array.

Example

HPT CLI>unplug 1

```
HPT CLI > query arrays
ID      Secured Capacity(GB)  Type      Status  Block  Sector  Cache      Name
-----
1       No                    100.00    RAID0   NORMAL  512k    512B      NONE      RAID0_4

HPT CLI > unplug 1
Unplug array(1) successfully!

HPT CLI > query arrays
ID      Secured Capacity(GB)  Type      Status  Block  Sector  Cache      Name
-----
```

This command instructs the controller to disconnect the array “1”; you can then disconnect the disks safely.

3.8. Rebuild Command

You can use rebuild commands to rebuild a RAID1 array when it is critical or broken.

```
HPT CLI > rebuild
Rebuild Commands
You can use rebuild commands to rebuild a RAID1 RAID5 RAID6,
when it is critical or broken.
Syntax:
rebuild {array_id} {device_id}
rebuild {array_id} {start|stop}
```

3.8.1. Syntax

```
rebuild {array_id} {device_id}
```

```
rebuild {array_id} {start|stop}
```

Table7: Properties for Rebuild Command

The following table lists and describes the properties of the rebuild commands.

cmd	Property Name	Description
rebuild	{device_id} {array_id}	This command allows you to add the specified disk to a broken array and rebuild it.
rebuild	{array_id} {start stop}	This command allows you to start or stop the rebuilding process on the specified array.

3.8.2. Rebuild array

1. rebuild {array_id} {device_id}

This command allows you to add the specified disk to a broken array and rebuild it.

Example

```
HPT CLI> rebuild 1 1/E1/1
```

```
HPT CLI > rebuild 1 1/E1/1
HPT CLI > query arrays
ID   Capacity(GB)  Type   Status  Block  Sector  Cache  Name
-----
1    500.03        RAID1  CRITICAL  --    512B   NONE   RAID1_3
```

This command instructs the AIC to add the disk “1/E1/1” to rebuild the array “1”. Before the rebuild command, you can use the query command to verify the device ID and the array ID information.

2. rebuild {array_id} {start|stop}

This command allows you to start or stop the rebuilding process on the specified array. After you stop a rebuilding process, you can resume it later with the rebuild start command.

Example1

HPT CLI> rebuild 1 start

```
HPT CLI > rebuild 1 start
HPT CLI > query arrays
ID Capacity(GB) Type Status Block Sector Cache Name
-----
1 500.03 RAID1 REBUILDING -- 512B NONE RAID1_3
```

This command starts the rebuilding process on the array “1”.

Example2

HPT CLI> rebuild 1 stop

```
HPT CLI > rebuild 1 stop
HPT CLI > query arrays
ID Capacity(GB) Type Status Block Sector Cache Name
-----
1 500.03 RAID1 CRITICAL -- 512B NONE RAID1_3
```

This command stops the rebuilding process on the array “1”.

3.9. Verify Command

You can use the verify command to rescan all physical disks attached to the RAID AIC.

```
HPT CLI > verify
Verify Command
  This command starts or stops the verifying process on the specified array.
Syntax:
  verify {array_id} {start|stop}
```

3.9.1. Syntax

```
verify {array_id} {start|stop}
```

Table8: Properties for Verify Command

The following table lists and describes the properties of the verify command.

cmd	Property Name	Description
verify	{array_id} {start stop}	This command starts or stops the verifying process on the specified array.

3.9.2. Verify array

```
verify {array_id} {start|stop}
```

This command starts or stops the verification process on the specified array.

Example1

```
HPT CLI> verify 1 start
```

This command starts the verify process on the array “1”.

Example2

```
HPT CLI> verify 1 stop
```

This command stops the verify process on the array “1”.

```
HPT CLI > verify 1 start
HPT CLI > query arrays
ID Capacity(GB) Type Status Block Sector Cache Name
-----
1 500.03 RAID1 VERIFYING -- 512B NONE RAID1_3
HPT CLI > verify 1 stop
HPT CLI > query arrays
ID Capacity(GB) Type Status Block Sector Cache Name
-----
1 500.03 RAID1 NORMAL -- 512B NONE RAID1_3
HPT CLI >
```

3.10. Rescan Command

This command will rescan all physical devices attached to the RAID AIC.

```
HPT CLI > rescan
```

3.10.1.Syntax

rescan

Table9: Properties for Rescan Command

The following table lists and describes the properties of the rescan command.

cmd	Property Name	Description
rescan	N/A	This command rescans all of the physical devices attached to the RAID AIC.

Example

HPT CLI> rescan

```
HPT CLI > rescan  
Rescan successfully.
```

3.11. Lscard Command

The lscard command is used to list multiple RAID AICs.

```
HPT CLI > lscard
```

3.11.1. Syntax

lscard

Table10: Properties for Lscard Command

The following table lists and describes the properties of the lscard command.

cmd	Property Name	Description
lscard	N/A	This command displays the list of multiple RAID AICs.

Example

HPT CLI> lscard

```
HPT CLI > lscard
CARD_ID      NAME                                ACTIVED
-----
0            Controller(1): HighPoint           Active
```


3.12. Events Command

The CLI system will automatically record three types of events: Information (shortened to “Inf”), Warning (shortened to “War”), and Error (shortened to “Err”) on the screen output. Events commands allow you to view and save the logged events.

```
HPT CLI > events
```

3.12.1.Syntax

events

events save {file_name}

Table11: Properties for Event Command

The following table lists and describes the properties of the events command.

cmd	Property Name	Description
events	N/A	This command will display a list of all the logged events.
events	save	This command will save all the logged events as a plain text file.

3.12.2.View events

events

This command will display a list of all the logged events.

Example

HPT CLI> events

```
HPT CLI > events
1 Inf [01/31/2024 01:12:11] User RAID delete RAID 0 (Mirroring) Array 'RAID0_5' Succeed.
2 Inf [01/31/2024 01:12:03] User RAID Creating RAID 0 (Striping) Array 'RAID0_5' Succeed.
3 Inf [01/31/2024 01:08:21] User RAID delete RAID 0 (Mirroring) Array 'RAID0_3' Succeed.
4 Inf [01/31/2024 01:07:17] User RAID Creating RAID 0 (Striping) Array 'RAID0_3' Succeed.
5 Inf [01/31/2024 01:06:53] User RAID delete RAID 0 (Mirroring) Array 'RAID0_2' Succeed.
6 Inf [01/31/2024 01:05:40] User RAID Creating RAID 0 (Striping) Array 'RAID0_2' Succeed.
7 Inf [01/31/2024 01:05:35] User RAID delete RAID 0 (Mirroring) Array 'RAID0_1' Succeed.
8 Inf [01/31/2024 01:05:14] User RAID Creating RAID 0 (Striping) Array 'RAID0_1' Succeed.
9 Inf [01/31/2024 01:05:03] Array 'RAID_0_0' has been deleted successfully.
```

3.12.3. Save events

events save {file_name}

This command will save all the logged events as a plain text file.

Example

HPT CLI> events save C:/raidlog.txt

```
HPT CLI > events save C:/raidlog.txt  
The event log C:/raidlog.txt has been saved.
```

This command will save all the events to **C:/raidlog.txt**.

3.13. Mail Command

The mail command instructs the AIC to send an email to your chosen recipients when certain events trigger.

```
HPT CLI > mail
Mail Commands
  Set a mail recipient to get the e-mail from system.
Syntax:
mail recipient
mail recipient add {recipient_name} {mail_address} [Inf|War|Err]
mail recipient delete {recipient_name}
mail recipient test {recipient_name}
mail server
mail server set {server_address} {port} {ssl} {e|d} {from_address} [username] [password]
mail server set {a|p|s|m|u|t} {value}
```

3.13.1.Syntax

mail recipient

mail recipient add {recipient_name} {mail_address} [Inf|War|Err]

mail recipient delete {recipient_name}

mail recipient test {recipient_name}

mail recipient set {recipient_name} {Inf|War|Err}

mail server

mail server set {server_address} {port} { status } {from_address} [username] [password]

mail server set {a|p|s|m|u|t} {value}

Table12: Properties for Mail Command

The following table lists and describes the properties of the mail commands.

cmd	Property Name	Description
mail	recipient	Use this command to list all of the mail recipients.
mail	recipient add {recipient_name} {mail_address} [Inf War Err]	Use this command to add a new recipient.
mail	recipient delete {recipient_name}	Use this command to delete an existing recipient.
mail	recipient test {recipient_name}	Use this command to send a test email to a specified recipient.
mail	recipient set {recipient_name} {Inf War Err}	Use this command to set the notification type for a recipient.

mail	server	Use this command to display the SMTP server information.
mail	server set {server_address} {port} { status } {from_address} [username] [password]	Use this command to configure mail server settings.
mail	server set {a p s m u t} {value}	Use this command to set your mail server value.

3.13.2.View mail recipient

mail recipient

This command will list all of the mail recipients.

Example

HPT CLI> mail recipient

```
HPT CLI > mail recipient
ID  Name      Mail Address      Notify Types
-----
1   hpt       @highpoint-tech.com  Information Warning Error
```

3.13.3.Add mail recipient

mail recipient add {recipient_name} {mail_address} [Inf|War|Err]

This command will add a new recipient.

Example

HPT CLI> mail recipient add hpt admin@highpoint-tech.com Inf War Err

```
HPT CLI > mail recipient add hpt admin@highpoint-tech.com Inf War Err
HPT CLI > mail recipient
ID  Name      Mail Address      Notify Types
-----
1   hpt       admin@highpoint-tech.com  Information Warning Error
```

This command will set up the RAID system to send mail to admin@highpoint-tech.com for any logged events.

3.13.4.Delete mail recipient

mail recipient delete {recipient_name}

This command will delete an existing mail recipient.

Example

HPT CLI> mail recipient delete hpt

```
HPT CLI > mail recipient delete hpt
HPT CLI > mail recipient
ID   Name      Mail Address      Notify Types
-----
HPT CLI >
```

This command deletes recipient hpt.

3.13.5.Set mail recipient

1. mail recipient test {recipient_name}

This command will send a test email to a specified recipient.

Example

HPT CLI> mail recipient test hpt

```
HPT CLI > mail recipient test hpt
HPT CLI >
```

Mail recipient hpt will receive a test email.

2. mail recipient set {recipient_name} {Inf|War|Err}

This command will set the notification type for a recipient.

Example

HPT CLI> mail recipient set admin Inf War Err

```
HPT CLI > mail recipient set admin War Err
ID   Name      Mail Address      Notify Types
-----
1   admin     [redacted]@highpoint-tech.com.cn  Information Warning Error
```

This command sets the recipient to receive emails with information, warnings, and error messages.

3.13.6.View mail server

mail server

This command will display the mail server information.

Example

HPT CLI> mail server

```
HPT CLI > mail server
ServerAddress      Port    ssl  Status  Mail From      User Name
-----
secure.emailsrvr.com465    1     Enabled  ██████g@highpoint-tech.com yzhang@highpoint-tech.com
```

3.13.7.Add mail server

mail server set {server_address} {port} {ssl} {status} {from_address} [username] [password]

This command will configure mail server settings.

- **server_address**

The SMTP server address.

- **port**

The SMTP port is generally 25.

- **ssl**

'1' is for enable and port needs 465, and '0' is for disabled.

- **status**

Enable Event Notification status, 'e' for enabled or 'd' for disabled.

- **from_address**

The mail from address.

- **Username**

The mail username.

- **password**

The mail password.

Example1

HPT CLI> mail server set secure.emailsrvr.com 465 1 e name@somecompany.com
name@somecompany.com password

```
HPT CLI > mail server set secure.emailsrvr.com 465 1 e [redacted]@highpoint-tech.com [redacted]@highpoint-tech.com  
HPT CLI > mail server  
ServerAddress      Port  ssl  Status  Mail From      User Name  
-----  
secure.emailsrvr.com465  1    Enabled [redacted]@highpoint-tech.com [redacted]@highpoint-tech.com
```

This command adds a mail server.

3.13.8.Set mail server

mail server set {a|p|s|m|u|t} {value}

This command will separate and set your mail server value.

- **a** – The SMTP server address.
- **p** – The SMTP port is generally 25.
- **s** – Enable Event Notification status, **e** for enabled or **d** for disabled.
- **m** – The mail from the address.
- **u** – The mail username.
- **t** – The mail password.

Example1

HPT CLI> mail server set p 465 --- Change the SMTP port

```
HPT CLI > mail server set p 465  
HPT CLI > mail server  
ServerAddress      Port  ssl  Status  Mail From      User Name  
-----  
smtp.163.com       465  0    Enabled [redacted]@highpoint-tech.com [redacted]@highpoint-tech.com
```

Example2

HPT CLI> mail server set s d --- Disable mail notification

```
HPT CLI > mail server set s d  
HPT CLI > mail server  
ServerAddress      Port  ssl  Status  Mail From      User Name  
-----  
smtp.163.com       465  0    Disabled [redacted]@highpoint-tech.com [redacted]@highpoint-tech.com
```

Example3

HPT CLI> mail server set s e --- Enable mail notification

```
HPT CLI > mail server set s e
HPT CLI > mail server
ServerAddress      Port  ssl  Status  Mail From      User Name
-----
smtp.163.com       465  0    Enabled [redacted]@highpoint-tech.com [redacted]@highpoint-tech.com
```


3.14. Task Command

When an array requires regular verification or rebuilding, you can use the task commands to automate this process in the background. You can add new tasks and modify or delete existing tasks.

```
Task Commands
  Set tasks for the server.
Syntax:
  task
  task {rebuild|verify} {array_id} {name=} {once|daily|monthly|weekly}={day}
  {interval}={interval} start=mm/dd/yyyy end=mm/dd/yyyy time=hh:mm:ss
  task delete {task_id}
```

3.14.1. Syntax

task

```
task rebuild {array_id} {name=} {once|daily|monthly|weekly}={day} interval={interval} start=mm/dd/yyyy
end=mm/dd/yyyy time=hh:mm:ss
```

```
task verify {array_id} {name=} {once|daily|monthly|weekly}={day} interval={interval} start=mm/dd/yyyy
end=mm/dd/yyyy time=hh:mm:ss
```

```
task delete {task_id}
```

Table13: Properties for Task Command

The following table lists and describes the properties of the task commands.

cmd	Property Name	Description
task	N/A	This command displays detailed information about all scheduled tasks.
task	rebuild {array_id} {name=} {once daily monthly weekly}={day} interval={interval} start=mm/dd/yyyy end=mm/dd/yyyy time=hh:mm:ss	This command allows you to schedule the frequency as once, daily, weekly, or monthly, and the detailed time range to rebuild a specified array.
task	verify {array_id} {name=} {once daily monthly weekly}={day} interval={interval} start=mm/dd/yyyy end=mm/dd/yyyy time=hh:mm:ss	This command allows you to schedule a verification task.
task	delete {task_id}	This command allows you to delete a scheduled task.

3.14.2.View task

task

This command displays detailed information about all scheduled tasks.

Example

HPT CLI> task

```
HPT CLI > task
ID  Name      Start-Date  End-Date    S-F      Description
1   test      11/24/2023  N/A        E-O      Rebuild raid RAID1_1 (created by )
```

This command displays the current scheduled tasks.

3.14.3.Create a New Rebuild task

task rebuild {array_id} {name=} {once|daily|weekly|monthly}={day} interval={interval} start=mm/dd/yyyy end=mm/dd/yyyy time=hh:mm:ss

This command allows you to schedule the frequency as once, daily, weekly, or monthly, and the detailed time range to rebuild a specified array. The first mm/dd/yyyy specifies the task start date, while the second mm/dd/yyyy specifies the task end date.

Note: When you add a task to rebuild a selected array once, the parameter {day} should be omitted.

Example

HPT CLI> task rebuild 1 name=test once start=11/24/2023 time=20:00:00

```
HPT CLI > task rebuild 1 name=test once start=11/24/2023 time=20:00:00
Add task(test) successfully!
HPT CLI > task
ID  Name      Start-Date  End-Date    S-F      Description
1   test      11/24/2023  N/A        E-O      Rebuild raid RAID1_1 (created by )
```

This command adds a test task schedule to rebuild the array “1” at 20:00:00 on 11/24/2023. The rebuild frequency is set to once.

3.14.4.Create a New Verify Task

task verify {array_id} {name=} {once|daily|weekly|monthly}={day} interval={interval} start=mm/dd/yyyy end=mm/dd/yyyy time=hh:mm:ss

This command allows you to schedule a verification task. The usage of this command is the same as adding a rebuild task schedule.

Note: Verify Task can only be created if the RAID1 array is in a normal status.

Example

HPT CLI> task verify 1 name=test once start=11/24/2023 time=20:00:00

```
HPT CLI > task verify 1 name=test once start=11/24/2023 time=20:00:00
Add task(test) successfully!

HPT CLI > task
ID  Name      Start-Date  End-Date    S-F      Description
-----
1   test      11/24/2023  N/A         E-0      Verify raid RAID1_1 (created by )
```

This command adds a task schedule to verify the array “1” at 20:00:00 on 11/24/2023. The verify frequency is set to once.

3.14.5.Delete a task

task delete {task_id}

This command allows you to delete a scheduled task. You can query the task ID by [task command](#).

Example

HPT CLI> task delete 1

```
HPT CLI > task
ID  Name      Start-Date  End-Date    S-F      Description
-----
1   test      11/24/2023  N/A         E-0      Verify raid RAID1_1 (created by )

HPT CLI > task delete 1
Delete task(test) successfully!

HPT CLI > task
ID  Name      Start-Date  End-Date    S-F      Description
-----
```

This command will delete the task “1”.

3.15. Set Command

You can change the CLI settings by using the setting commands according to your preferred behavior and requirements.

```
HPT CLI > set
-----
                Show the system settable parameters.
-----
[AR] Auto Rebuild           Enable
[CE] Continue Rebuild On Error Enable
[AA] Audible Alarm          Enable
[RP] Rebuild Priority        Medium
[BP] Beeper                 Enable
[FS] Eclosure Fan Speed     Medium
[TT] Temperature threshold  100
[TU] Temperature unit       F
[PS] Password               --
[CL] Collect system logs    Disable
```

3.15.1.Syntax

set [name]={value}

Table14: Properties for Set Command

The following table lists and describes the properties of the set commands.

cmd	Property Name	Description
set	[name]={value}	This command changes the CLI settings according to your preferred behavior and requirements.

3.15.2.set

Show the system settable parameters.

- set AR={y|n}

Set enable or disable to the [Auto Rebuild] parameter.

- set CE={y|n}

Set enable or disable to the [Continue Rebuilding On Error] parameter.

- set RP={0-100}

Change rebuilding priority. If an AIC is not specified, this command will set the global rebuilding priority.

[0-12] Lowest

[13-37] Low

[38-67] Medium

[68-87] High

[>88] Highest

- **set BP={y|n}**

Set enable or disable beeper.

- **set FS={Auto|Off|Low|Medium|High}**

Change Enclosure Fan Speed.

- **set TT={value}, default=149F**

Set the temperature threshold.

- **set TU={C|F}**

Set the temperature unit to Celsius equals or Fahrenheit equals.

- **set PS**

Set or change your password and confirm it.

- **set CL**

Set enable or disable collecting system logs.

3.16. Diag Command

This command allows you to collect the diagnostic information.

3.16.1.Syntax

diag

Table15: Properties for Diag Command

The following table lists and describes the properties of the diag command.

cmd	Property Name	Description
diag	N/A	This command collects the diagnostic information.

3.16.2.diag

Example

- For Linux User

HPT CLI> diag

```
HPT CLI>diag
The diagnostic information has been saved in /usr/share/hpt/HighPoint_hptnvme_v1.6.14.0_2024.02.01.tar.gz
HPT CLI>
```

- For Windows User

HPT CLI> diag

```
HPT CLI > diag
The diagnostic information will be saved in C:\Program Files (x86)\HighPoint Technologies, Inc\HighPoint RAID Management
\Service\webguiroot\HighPoint_hptnvme_1.3.12.0_2024.01.31_16.41.zip.It may take a few minutes to be ready.
HPT CLI >
```

The saving path will be displayed after entering this command.

3.17. Help Command

You will be told that the command is unknown if you input an unknown or error command. You can use help commands to find the correct commands.

```
HPT CLI > HELP
ERROR: Unknown command HELP .
You can input 'help' for more commands.
```

3.17.1.Syntax

help

help {command}

Table16: Properties for Help Command

The following table lists and describes the properties of the help commands.

cmd	Property Name	Description
help	N/A	This command shows generic help about this utility.
help	{command}	This command shows help about a specific command.

3.17.2.help

Show generic help about this utility.

Example

HPT CLI> help

```
HPT CLI > help
help [query|create|delete|OCE/ORLM|rebuild|verify|unplug|switch|lscard
rescan|init|events|mail|task|set|clear|help|exit|diag|secure]
```

3.17.3.help command

Show help about a specific command.

Example

HPT CLI> help delete

```
HPT CLI > help delete
Delete Command
  This command allows you to delete an existing RAID array or remove
  a spare disk. After deletion, the original array and all data on it
  will be lost. All the member disks will be listed as available single disks.
Syntax:
  delete {array id | spare id}
```

This command shows help with the delete command.

3.18. Exit Command

Exit from the interactive mode and close the window.

```
HPT CLI > exit
```

3.18.1.Syntax

exit

Table17: Properties for Exit Command

The following table lists and describes the properties of the exit command.

cmd	Property Name	Description
exit	N/A	This command allows you to exit from the interactive mode and close the window.

3.19. Clear Command

This command is used to clear the screen.

```
HPT CLI > clear
```

3.19.1.Syntax

clear/cls/clr

3.19.1.1. Table18: Properties for Clear Command

The following table lists and describes the properties of the clear command.

cmd	Property Name	Description
clear	N/A	This command allows clearing the screen.

4. UEFI Command Line Utility

This section describes how to use the UEFI Command Line Utility.

4.1. Starting the UEFI Command Line Utility


4.1.1. Prerequisites

1. A PCIe 3.0/4.0/5.0 slot with x16 lanes. The SSD7580C must be installed into a PCIe 3.0/4.0/5.0 slot with x16 lanes.
2. The motherboard needs to be booted into UEFI mode. Confirm that the motherboard boots in UEFI mode.
3. A USB flash drive in FAT32 format.

4.1.2. Step 1 Prepare UEFI Package

1. Unzip the SSD7580C UEFI package to the root dir (/) of a USB flash drive (e.g. FAT32), and insert the USB flash drive into the motherboard.

Example screenshot

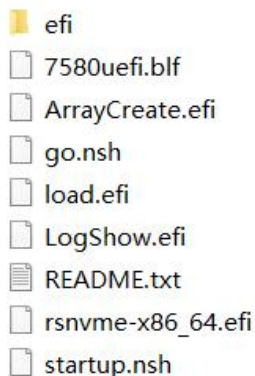

- **README.txt** -- Readme file for SSD7580C UEFI.
- **7580uefi.blf** -- UEFI BLF file for SSD7580C.
- **ArrayCreate.efi** -- EFI utility.
- **bootx64.efi** -- Booting EFI environment.
- **go.nsh** -- Batch file for flash loader.

- **load.efi** -- Flash utility for EFI environment.
- **LogShow.efi** -- EFI file for log.
- **rsnvme-x86_64.efi** -- EFI file for debug.
- **startup.nsh** -- Find USB driver.


Note: the picture is only for reference.

4.1.3. Step 2 Adjust System EFI Settings

1. Insert the SSD7580C into the motherboard, power on the system, and enter the BIOS.
2. Adjust the UEFI settings (Example: SuperMicro X11DPi-NT motherboard):
 - 1) Set **Boot Mode Select** to **UEFI**.



- 2) Set the **Slot** where the SSD7580C is located to **EFI**.

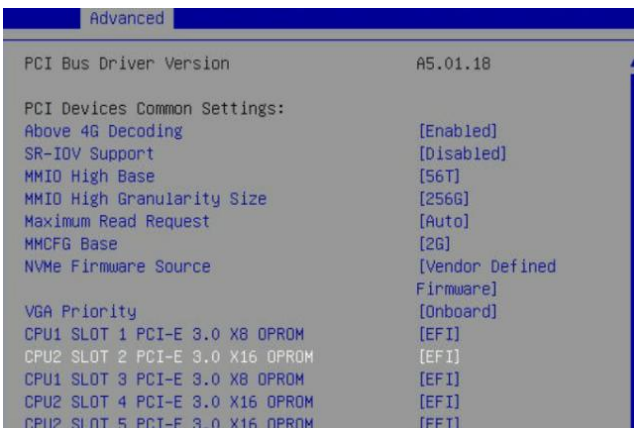

3. Save changes and reboot.

4.1.4. Step 3 Entering the UEFI Command Line Utility

1. Insert the USB flash drive into the motherboard and boot the system.
2. Enter the motherboard's BIOS and select the **UEFI: USB flash drive** in the BIOS startup item.

```
Boot Override
SanDisk
BRCDM MBA Slot 4500 v20.14.2
UEFI: SanDisk, Partition 1
```

3. At the prompt, enter the following command to change the resolution:

mode 100 31

```
FS0:\> mode
Available modes for console output device.
Col   80 Row   25  *
Col   80 Row   50
Col  100 Row   31
Col  240 Row   56
FS0:\> mode 100 31_
```

***Note:** This command is used to adjust the screen resolution; please adjust it according to the actual situation of your motherboard.*

4. Enter the following command to enter the UEFI command line:

ArrayCreate.efi

```
FS0:\> ArrayCreate.efi
Highpoint RAID utility for UEFI (version: 20230322)
Open handles: 1
==== Controller information:
Vendor: HighPoint Technologies, Inc.
Product: SSD7580C NVMe Controller (7580)
```

4.2. Using the UEFI Command Line Utility

```
Supported command: help/info/quit/exit/create/delete
```

- Use the **help** command to find the correct commands. For more information, see [help command](#).
- Use the **info** command to view the SSD7580C NVMe RAID AIC status and disks. For more information, see [info command](#).
- Use the **quit** command to quit the UEFI Command Line. For more information, see [quit command](#).
- Use the **exit** command to exit the UEFI Command Line. For more information, see [exit command](#).
- Use the **create** command to create the RAID array. For more information, see [create command](#).
- Use the **delete** command to delete the RAID array. For more information, see [delete command](#).

4.3. Help Command

```
>>> Please specify command to execute:  
<<< help_
```

You can use the help command to find the correct commands.

4.3.1. Syntax

H/ h/ help

Table19: Properties for help Command

The following table lists and describes the properties of the help commands.

cmd	Property Name	Description
H	N/A	This command helps you to find the correct commands.
h	N/A	
help	N/A	

4.3.2. help

<<<help

Show correct commands.

Example

```
create RAID0 * *  
  create RAID0 array with all disks and with maximum capacity.  
create RAID1 1/1,1/3 10  
  create RAID1 array with disk 1/2 and 1/3 and with 10GB capacity.  
create RAID10 *  
  create RAID10 array with all disk and with maximum capacity.  
create RAID5 * 40  
  create RAID5 array with all disk and with 40GB capacity.  
create RAID5 1/2,1/3,1/1 50  
  create RAID5 array with disk 1/2,1/3 and 1/1 and with 50GB capacity.  
create RAID50,4 1/1,1/2,1/3,1/4,1/5,1/6,1/7,1/8  
  create RAID50 array with disk 1/1,1/2,1/3,1/4,1/5,1/6,1/7,1/8 and with sub member count  
4.  
  
delete ArrayIndex  
  delete 1  
    Delete the first array from Logical device list.  
  delete 2  
    Delete the second array from Logical device list.  
  
info  
  display physical device list and logical device list  
  
Q/q/quit/exit  
  quit the application  
  
H/h/help  
  this help message
```

4.4. Info Command

```
>>> Please specify command to execute:  
<<< info
```

You can use the info command to view the status of the SSD7580C NVMe RAID AIC and disks.

4.4.1. Syntax

info

Table20: Properties for Info Command

The following table lists and describes the properties of the info commands.

cmd	Property Name	Description
info	N/A	This command allows a view of the status of the SSD7580C NVMe RAID AIC and disks.

4.4.2. Physical Device Information

<<<info

Disks hosted by the SSD7580C will appear here.

Example

```
==== Physical device list(count 8):  
1/1 KIDXIA KCDY1RUG7T68-13R0A00TPBH, 7681501MB(MaxFree 0MB), Normal  
1/2 KIDXIA KCDY1RUG7T68-13R0A00GTPBH, 7681501MB(MaxFree 0MB), Normal  
1/3 KIDXIA KCDY1RUG7T68-13R0A00FTPBH, 7681501MB(MaxFree 0MB), Normal  
1/4 KIDXIA KCDY1RUG7T68-13R0A00ATPBH, 7681501MB(MaxFree 0MB), Normal  
1/5 Micron_7450_MTFDKCC7T6TFR-232641B4859A, 7681501MB(MaxFree 0MB), Normal  
1/6 KIDXIA KCDY1RUG7T68-13R0A00CTPBH, 7681501MB(MaxFree 0MB), Normal  
1/7 Micron_7400_MTFDKCB7T6TDZ-2316423C35A4, 7681501MB(MaxFree 0MB), Normal  
1/8 Micron_7450_MTFDKCC7T6TFR-232641B4007D, 7681501MB(MaxFree 0MB), Normal
```

- **Location** – Which AIC and port the disk is located in.
- **Model** – Model number of the disk.
- **Capacity** – Total capacity of the disk.
- **Max Free** – Total capacity that is not configured.
- **Status** – (Normal) Status of the disk.

4.4.3. Logical Device Information

<<<info

Disks and arrays you create and the properties associated with them will appear here.

Example

```
==== Logical device list(count 8):
 1 1/1 KIOXIA KCDY1RUG7T68-13R0A00DTPBH, 7681501MB(MaxFree 0MB), Normal
 2 1/2 KIOXIA KCDY1RUG7T68-13R0A00GTPBH, 7681501MB(MaxFree 0MB), Normal
 3 1/3 KIOXIA KCDY1RUG7T68-13R0A00FTPBH, 7681501MB(MaxFree 0MB), Normal
 4 1/4 KIOXIA KCDY1RUG7T68-13R0A00ATPBH, 7681501MB(MaxFree 0MB), Normal
 5 1/5 Micron_7450_MTFDKCC7T6TFR-232641B4859A, 7681501MB(MaxFree 0MB), Normal
 6 1/6 KIOXIA KCDY1RUG7T68-13R0A00CTPBH, 7681501MB(MaxFree 0MB), Normal
 7 1/7 Micron_7400_MTFDKCB7T6TD2-2316423C35A4, 7681501MB(MaxFree 0MB), Normal
 8 1/8 Micron_7450_MTFDKCC7T6TFR-232641B4007D, 7681501MB(MaxFree 0MB), Normal
-----

==== Logical device list(count 1):
 1 [VD24-8] RAID0_000041A7 (RAID0), 61451318MB (Stripe 512KB), Normal
   1/1 KIOXIA KCDY1RUG7T68
   1/2 KIOXIA KCDY1RUG7T68
   1/3 KIOXIA KCDY1RUG7T68
   1/4 KIOXIA KCDY1RUG7T68
   1/5 Micron_7450_MTFDKCC7T6TFR
   1/6 KIOXIA KCDY1RUG7T68
   1/7 Micron_7400_MTFDKCB7T6TD2
   1/8 Micron_7450_MTFDKCC7T6TFR
```

The disks and arrays you create and the properties associated with them will appear here.

- **Name** – The name of the arrays you create.
- **Type** – The RAID level of the arrays you create.
- **Capacity** – Total capacity of the disk.
- **Stripe** – The block size of the arrays you create.
- **Status** – (Normal, critical, disabled) Status of the disk.
- **Member disk**– The member disk of the arrays.

4.5. Quit Command

```
>>> Please specify command to execute:  
<<< quit_
```

You can use the quit command to quit the application.

4.5.1. Syntax

Q/ q/ quit

Table21: Properties for Quit Command

The following table lists and describes the properties of the quit command.

cmd	Property Name	Description
Q	N/A	This command allows you to quit the application.
q	N/A	
quit	N/A	

4.5.2. quit

<<<quit

Quit the UEFI Command Line Utility.

4.6. Exit Command

```
>>> Please specify command to execute:  
<<< exit_
```

You can use the exit command to exit the application.

4.6.1. Syntax

exit

Table22: Properties for Exit Command

The following table lists and describes the properties of the exit command.

cmd	Property Name	Description
exit	N/A	This command allows you to exit the application.

4.6.2. exit

<<<exit

Exit the UEFI Command Line Utility.

4.7. Create Command

```
>>> Please specify command to execute:  
<<< create_
```

You can use the create command to create the RAID array.

4.7.1. Syntax

```
create ArrayType (RAID0/RAID1/RAID10) MemberDiskList (1/1,1/2|*) Capacity(100|*)
```

Table23: Properties for Create Command

The following table lists and describes the properties of the create command.

cmd	Property Name	Description
create	ArrayType (RAID0/RAID1/RAID10) MemberDiskList (1/1,1/2 *) Capacity(100 *)	This command allows you to create a new RAID array. * Indicates creation of RAID array using all MemberDisks and Capacities.

4.7.2. Create an array

Example1

```
<<<<create RAID0
```

```
>>> Please specify command to execute:  
<<< create RAID0  
Creating array: RAID0_000041A7.  
Array created successfully.  
=====
```

```
==== Physical device list(count 8):  
1/1 KIOXIA KCDY1RUG7T68-13R0A00TPBH, 7681414MB(MaxFree 0MB), Normal  
1/2 KIOXIA KCDY1RUG7T68-13R0A00GTPBH, 7681414MB(MaxFree 0MB), Normal  
1/3 KIOXIA KCDY1RUG7T68-13R0A00FTPBH, 7681414MB(MaxFree 0MB), Normal  
1/4 KIOXIA KCDY1RUG7T68-13R0A00ATPBH, 7681414MB(MaxFree 0MB), Normal  
1/5 Micron_7450_MTFDKCC7T6TFR-232641B4859A, 7681414MB(MaxFree 0MB), Normal  
1/6 KIOXIA KCDY1RUG7T68-13R0A00CTPBH, 7681414MB(MaxFree 0MB), Normal  
1/7 Micron_7400_MTFDKCB7T6TDZ-2316423D35A4, 7681414MB(MaxFree 0MB), Normal  
1/8 Micron_7450_MTFDKCC7T6TFR-232641B4007D, 7681414MB(MaxFree 0MB), Normal
```

```
==== Logical device list(count 1):  
1 [VD24-8] RAID0_000041A7 (RAID0), 61451318MB (Stripe 512KB), Normal  
1/1 KIOXIA KCDY1RUG7T68  
1/2 KIOXIA KCDY1RUG7T68  
1/3 KIOXIA KCDY1RUG7T68  
1/4 KIOXIA KCDY1RUG7T68  
1/5 Micron_7450_MTFDKCC7T6TFR  
1/6 KIOXIA KCDY1RUG7T68  
1/7 Micron_7400_MTFDKCB7T6TDZ  
1/8 Micron_7450_MTFDKCC7T6TFR
```

This command creates a RAID0 array with all disks and maximum capacity.

Example2

<<<create RAID1 1/1,1/3 10

```
>>> Please specify command to execute:
<<< create RAID1 1/1,1/3 10
Creating array: RAID1_10D63AF1.
Array created successfully.
=====

==== Physical device list(count 8):
1/1 KIOXIA KCDY1RUG7T68-13R0A00DTPBH, 7681414MB(MaxFree 7671414MB), Normal
1/2 KIOXIA KCDY1RUG7T68-13R0A00GTPBH, 7681414MB(MaxFree 7681414MB), Normal
1/3 KIOXIA KCDY1RUG7T68-13R0A00FTPBH, 7681414MB(MaxFree 7671414MB), Normal
1/4 KIOXIA KCDY1RUG7T68-13R0A00ATPBH, 7681414MB(MaxFree 7681414MB), Normal
1/5 Micron_7450_MTFDKC7T6TFR-232641B4859A, 7681414MB(MaxFree 7681414MB), Normal
1/6 KIOXIA KCDY1RUG7T68-13R0A00CTPBH, 7681414MB(MaxFree 7681414MB), Normal
1/7 Micron_7400_MTFDKCB7T6TDZ-2316423C35A4, 7681414MB(MaxFree 7681414MB), Normal
1/8 Micron_7450_MTFDKC7T6TFR-232641B4007D, 7681414MB(MaxFree 7681414MB), Normal

==== Logical device list(count 1):
1 [VD24-9] RAID1_10D63AF1 (RAID1), 10000MB (Stripe 512KB), Normal
  1/1 KIOXIA KCDY1RUG7T68
  1/3 KIOXIA KCDY1RUG7T68
=====
```

This command instructs the system to create a RAID1 array with disk 1/1 and 1/3 and with 10GB capacity.

Note: For supported RAID types, please [refer here](#).

4.8. Delete Command

```
>>> Please specify command to execute:  
<<< delete_
```

You can use the delete command to delete the array from the logical device list.

4.8.1. Syntax

delete ArrayID

Table24: Properties for Delete Command

The following table lists and describes the properties of the delete command.

cmd	Property Name	Description
delete	ArrayID	This command allows you to delete the array from the logical device list.

4.8.2. Delete an array

Example

```
<<<<delete 1
```

```
==== Logical device list(count 1):  
1 [VD24-9] RAID1_10063AF1 (RAID1), 10000MB (Stripe 512KB), Normal  
  1/1 KIOXIA KCDY1RUG7T68  
  1/3 KIOXIA KCDY1RUG7T68  
-----  
>>> Please specify command to execute:  
<<< delete 1  
Deleting array: RAID1_10063AF1 idx 0 12  
<<<<<< hpt_delete_array: id 12 options 2  
Array deleted successfully.  
-----  
==== Physical device list(count 8):  
1/1 KIOXIA KCDY1RUG7T68-13R0A00DTPBH, 7681414MB(MaxFree 7681414MB), Normal  
1/2 KIOXIA KCDY1RUG7T68-13R0A00GTPBH, 7681414MB(MaxFree 7681414MB), Normal  
1/3 KIOXIA KCDY1RUG7T68-13R0A00FTPBH, 7681414MB(MaxFree 7681414MB), Normal  
1/4 KIOXIA KCDY1RUG7T68-13R0A00ATPBH, 7681414MB(MaxFree 7681414MB), Normal  
1/5 Micron_7450_MTFDKCC7T6TFR-232641B4859A, 7681414MB(MaxFree 7681414MB), Normal  
1/6 KIOXIA KCDY1RUG7T68-13R0A00CTPBH, 7681414MB(MaxFree 7681414MB), Normal  
1/7 Micron_7400_MTFDKCB7T6TDZ-2316423C35A4, 7681414MB(MaxFree 7681414MB), Normal  
1/8 Micron_7450_MTFDKCC7T6TFR-232641B4007D, 7681414MB(MaxFree 7681414MB), Normal  
==== Logical device list(count 0):  
-----
```

This command allows you to delete the array 1 from the logical device list.

4.9. Flashing the UEFI ROM

You can flash the UEFI ROM in the UEFI interface. This usually involves loading the latest UEFI package onto the motherboard to get the latest feature updates.

1. Enter the motherboard's BIOS and select the **UEFI: USB flash drive** in the BIOS startup item.

```
Boot Override
SanDisk
BRCH MBA Slot 4500 v20.14.2
UEFI: SanDisk, Partition 1
```

2. Enter the following command to flash the SSD7580C: **go.nsh**.

```
Shell> echo -off
Enter go.nsh to flash the factory rom.
FS0:\> go.nsh
```

3. When the message '**Passed**' appears, the flash is successful.

```
FS0:\> load.efi 7580fact.bin /a /f
Load Utility for Flash EPROM v1.1.5
(built at Mar 28 2023 17:27:18)

Set flash size to 256K
Found adapter 0x75801103 at PCI 139:0:0
Offset address 0x0
EPROM Vendor: WINBOND W25X40BV
Erasing .....Succeeded
Flashing ....

Flashing Success (total retry 0)

Verifying ....

Passed !
```

4. Reboot to complete the update process.

5. UEFI HII


▶ HighPoint RAID Management Utility

This section describes how to use the UEFI HII.


5.1. Starting the UEFI HII

5.1.1. Step 1 Adjust System EFI Settings

1. Insert the SSD7749M2 into the motherboard, power on the system, and enter the BIOS.
2. Adjust the UEFI settings (Example: SuperMicro X12DPi-N6 motherboard):
 - 1) Set **Boot Mode Select** to **UEFI**.

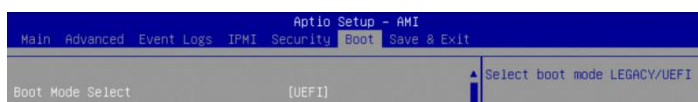


- 2) Set the **Slot** where the SSD7749M2 is located to **EFI**.

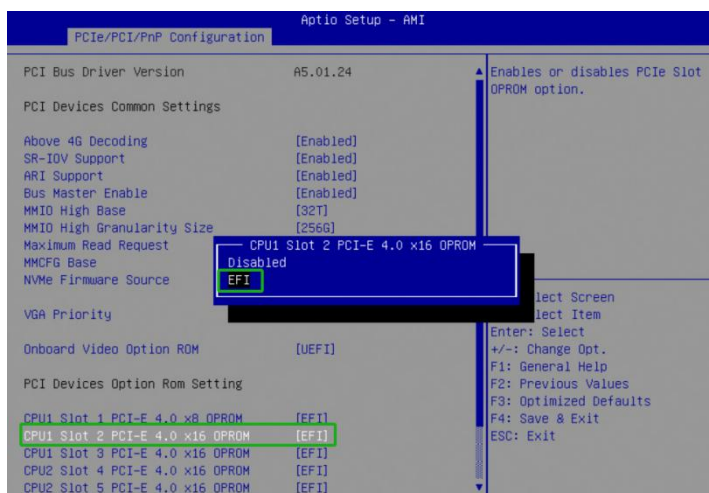

3. Save changes and reboot.

5.1.2. Step 2 Enter the UEFI HII

1. Power up the system.
2. Press **Delete** to enter BIOS.
3. Find **Advanced**→**HighPoint RAID Management Utility** should appear under **Advanced** options.
(Example: SuperMicro X12DPi-N6 motherboard)

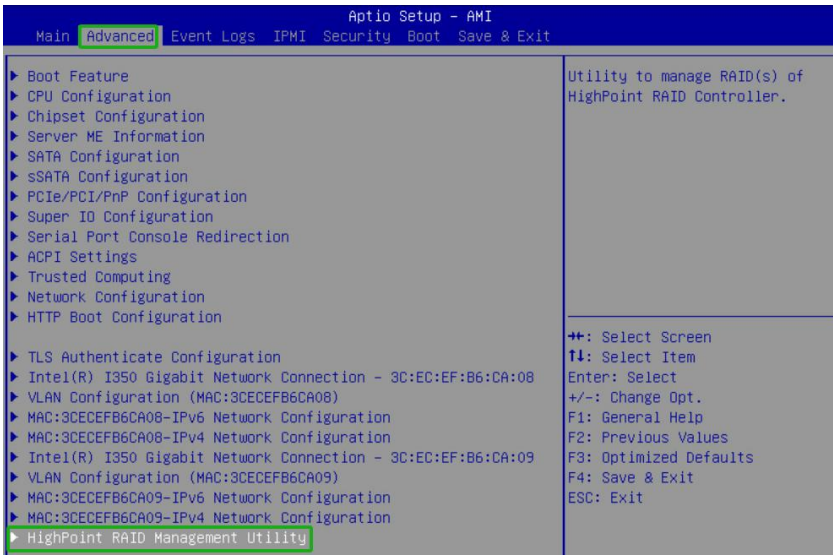

4. Select **HighPoint RAID Management Utility**.

5.2. Using the UEFI HII

```
Advanced
Controller Information
1/E1 SSD7580C NVMe Controller (7580)
Physical Device Information
1/E1/1 KIOXIA KCDY1RUG7T68, Normal
1/E1/2 KIOXIA KCDY1RUG7T68, Normal
1/E1/3 KIOXIA KCDY1RUG7T68, Normal
1/E1/4 KIOXIA KCDY1RUG7T68, Normal
1/E1/5 Micron_7450_MTFDKC07T6TFR, Normal
1/E1/6 KIOXIA KCDY1RUG7T68, Normal
1/E1/7 Micron_7400_MTFDKC07T6TFR, Normal
1/E1/8 Micron_7450_MTFDKC07T6TFR, Normal
Logical Device Information
[VD 0] 1/E1/1 KIOXIA KCDY1RUG7T68 (Single), 768GB Normal
[VD 1] 1/E1/2 KIOXIA KCDY1RUG7T68 (Single), 768GB Normal
[VD 2] 1/E1/3 KIOXIA KCDY1RUG7T68 (Single), 768GB Normal
[VD 3] 1/E1/4 KIOXIA KCDY1RUG7T68 (Single), 768GB Normal
[VD 4] 1/E1/5 Micron_7450_MTFDKC07T6TFR (Single), 768GB Normal
[VD 5] 1/E1/6 KIOXIA KCDY1RUG7T68 (Single), 768GB Normal
[VD 6] 1/E1/7 Micron_7400_MTFDKC07T6TFR (Single), 768GB Normal
[VD 7] 1/E1/8 Micron_7450_MTFDKC07T6TFR (Single), 768GB Normal
Create RAID ...
Delete RAID ...
Utility built on May 8 2023 14:06:50

PCI Express Speed:
Current: 16GT/s
Designed: 16GT/s
PCI Express Width:
Current: x16
Designed: x16
Ver: v2.3.6
Jul 25 2023 13:10:36

+*: Select Screen
F1: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit
```

- The UEFI HII view displays the number of virtual disk and physical disk operations in progress. For more information, see [here](#).
- Select **Create RAID ...** to create RAID configurations. For more information, see [create RAID ...](#).
- Select **Delete RAID ...** to delete RAID configurations. For more information, see [delete RAID ...](#).

5.2.1. Keys


The UEFI HII utilizes the following keys:

- **Arrow keys** – Use these to move between different menu items.
- **Enter** – Open the selected toolbar command/execute the selected command.
- **N or Esc** – Return to the previous menu, cancel the selected operation, or exit the BIOS Utility.

5.3. Information


The UEFI HII view allows you to view the Controller Information, Physical Device Information, and Logical Device Information.

5.3.1. Controller Information

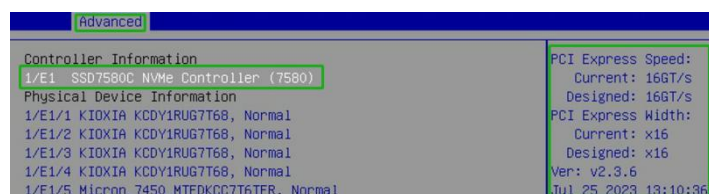

- **Model** — The model name of the controller connected.
- **Location** — Controller location (example: 1/E1).
- **PCI Express Speed** — Rate of current bandwidth and rate of designed bandwidth.
- **PCI Express Width** — PCIe width occupied by the current controller and PCIe width occupied by the designed controller.
- **Version** — UEFI HII version of the controller.

5.3.2. Physical Device Information

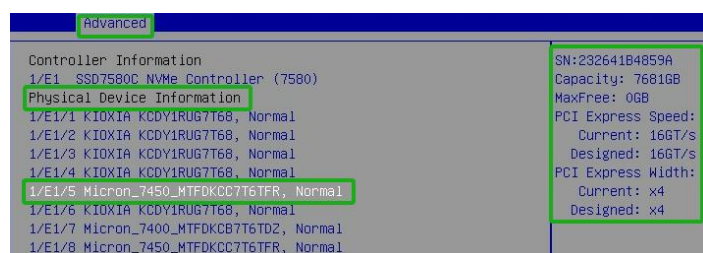


The disks hosted by the AIC will appear here.

- **Location** – Which AIC and port the disk is located in.
- **Model** – Model number of the disk connected.
- **Status** – (Normal) Status of the disk.
- **SN** – Serial number of the physical disk.
- **Capacity** – Total capacity of the disk.
- **Max Free** – Total capacity that is not configured.
- **PCI Express Speed** — Rate of current bandwidth and rate of designed rate.

- **PCI Express Width** — PCIe width occupied by the current disk and PCIe width occupied by the designed disk.


5.3.3. Logical Device Information

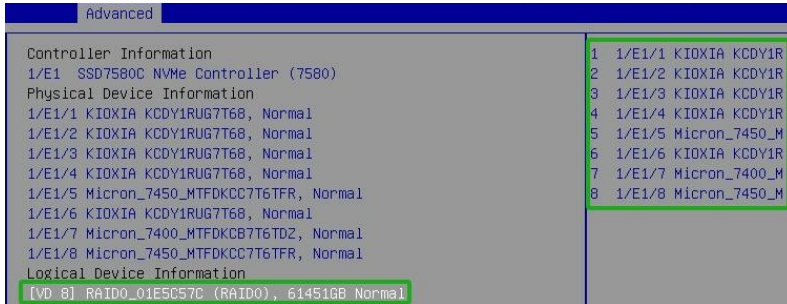

The disks and arrays you create and the properties associated with them will appear here.

- **Name** – The name of the arrays you create.
- **Type** – The RAID level of the arrays you create.
- **Capacity** – Total capacity of the disk.
- **Status** –(Normal, critical, disabled) Status of the disk.
- **Member disk**– The member disk of the arrays.

5.4. Create RAID

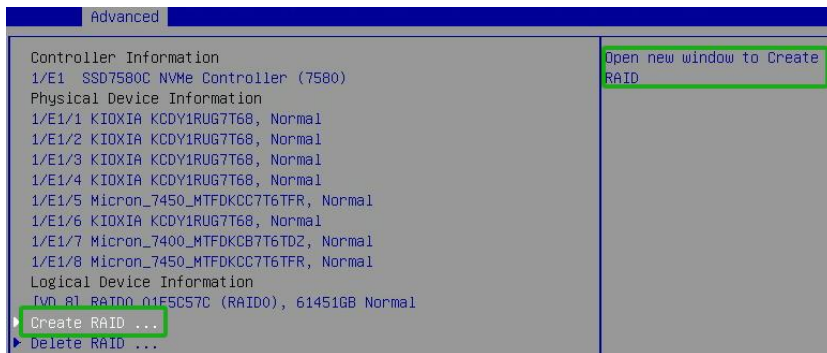


A device list will appear in the Create menu and display all available disks.

5.4.1. Create an array


1. Select **Create RAID...** from the HighPint RAID Management Utility.
2. On the **Create** menu. A disk list will appear and display all available disks.



3. Select the **RAID** type from the dropdown list. Use the up and down keys of the keyboard or the mouse to select the RAID type and press **Enter** key.

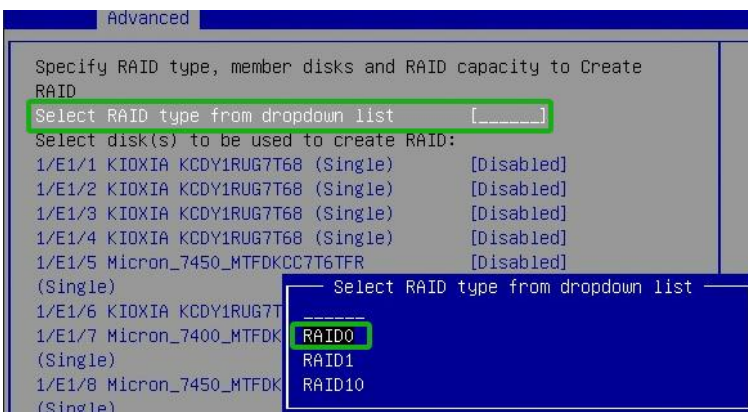


- Select disks to be used to create a RAID array. Select the disk that needs to create a RAID array, and the status of the disk changes from **Disabled** to **Enabled**, which means that the disk has been selected.

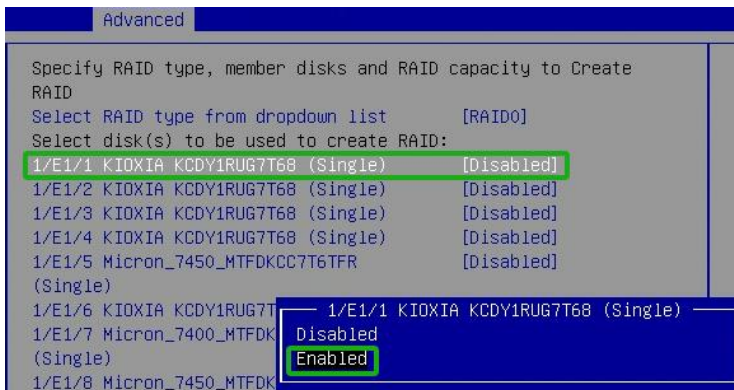


Note: Disks don't need to be initialized before they can be used to create arrays.


- After selecting all the disks, you can decide how much storage capacity will be assigned to the array. If you wish to reserve disk space for additional arrays/single disks, use the keyboard to input the amount of space (in GB) you wish to set aside for this particular array.

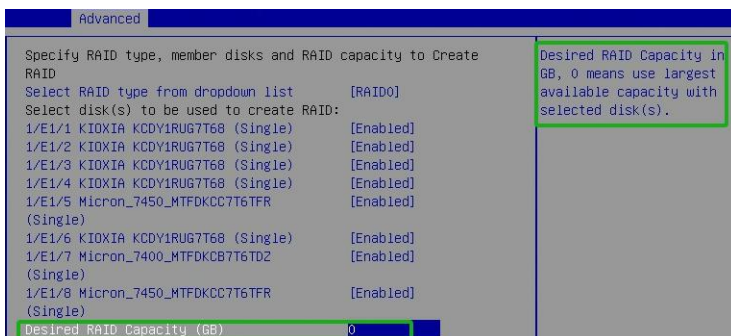


- Select and **press to create RAID** to complete the RAID Array creation. A pop-up window prompt: **Are you sure to create RAID0 with following disk(s).** Press **Enter** key to confirm.

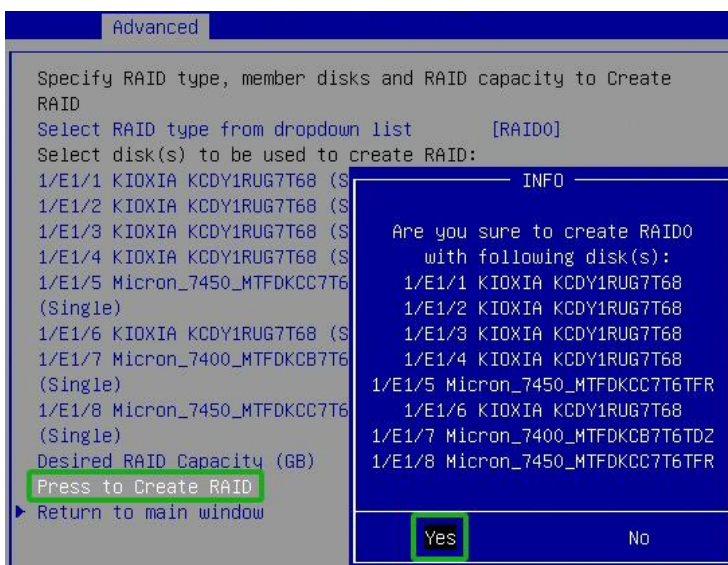


- A pop-up window will state that **RAID*** creation succeeded**. Press any key to continue. Press **Enter** key to confirm the operation again.

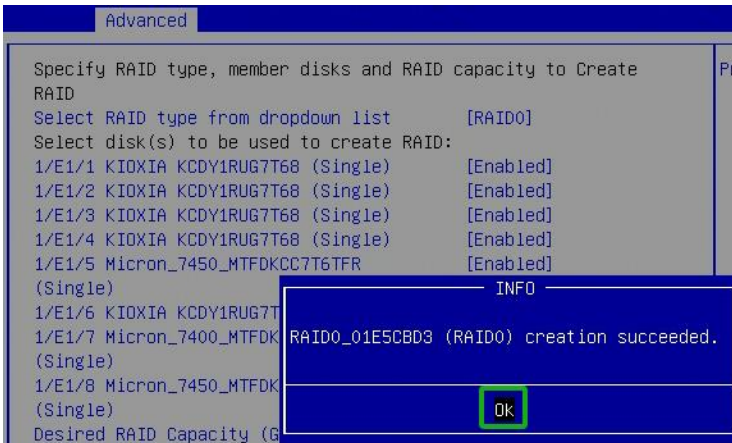

- The array you create and the properties associated with them will appear under the Logical Device Information.

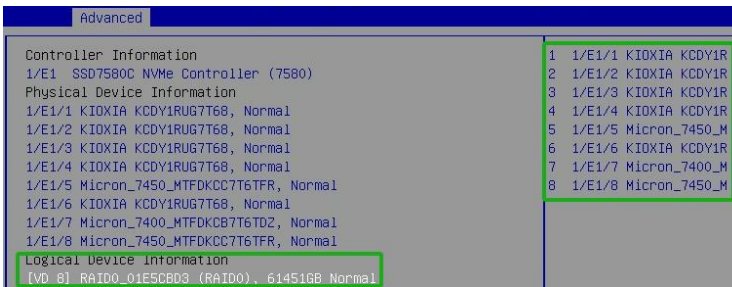

5.5. Delete RAID

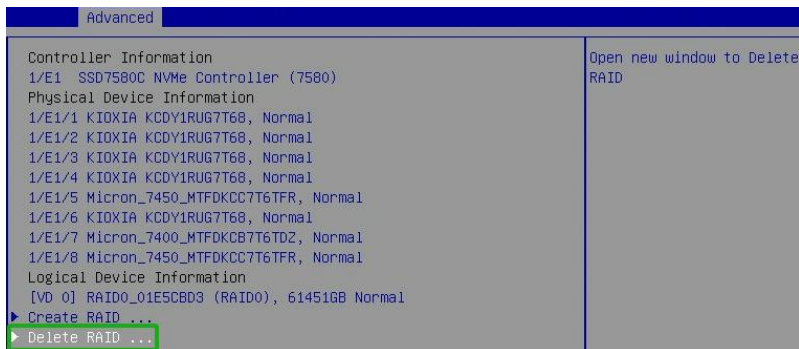

The Delete menu will display a list of available RAID arrays.

5.5.1. Delete an array


1. Select **Delete RAID...** from the HighPint RAID Management Utility.
2. Select the array you wish to delete and press the **Enter** key.



3. The utility will display a warning message. Press **Enter** key to delete the array.



4. Press **Enter** key to confirm the operation again.

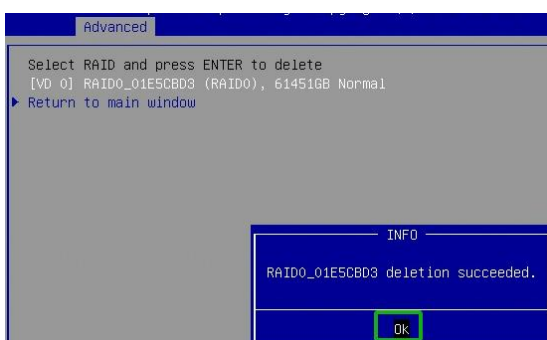

6. SafeStorage

6.1. Overview


HighPoint's SafeStorage solution was developed to work in conjunction with industry-standard SED (Self-encrypted drive) technology supported by OPAL v2.0 compliant M.2 and U.2/U.3 NVMe media and is based on the OPAL SSC TCG (Trusted Computing Group) specifications. It is designed to protect data assets when physical disks are misplaced or stolen by preventing unauthorized access to stored data.

SafeStorage can be applied to single-disk and RAID configurations and is activated via a service known as Disk Security, which can be administered via our software management.

Note: *SafeStorage can only be used with storage media that has SED (self-encrypting drive) capability.*

Important Security Warning: *Enabling password protection for the WebGUI and CLI is highly recommended. By default, this security feature is disabled; administrators are not required to enter a name or password when starting the software. Any user accessing the target platform can enable or disable Disk Security if this feature is not enabled.*

6.2. Workflow

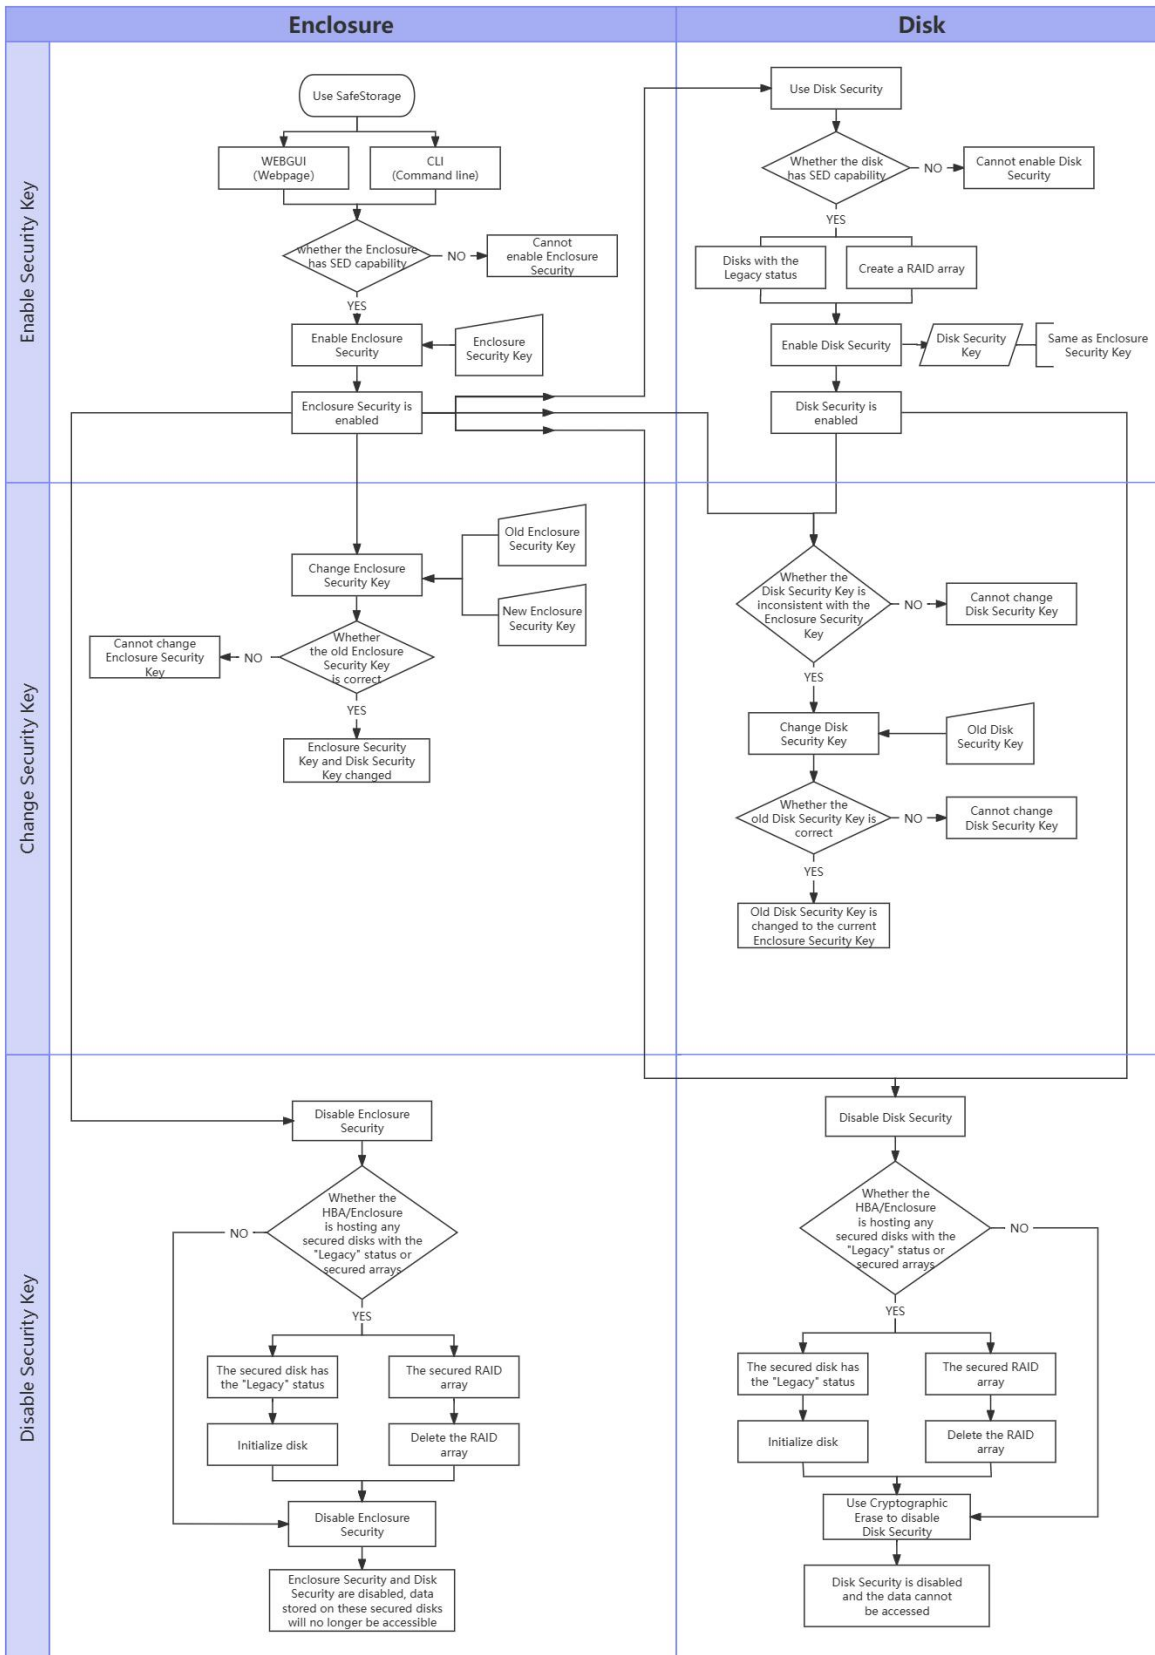

6.2.1. Enable Enclosure Security

To use SafeStorage, you must first enable the Enclosure Security option using the HighPoint RAID Management utility (WebGUI or CLI) and create an Enclosure Security Key.

Note: *The Enclosure Security Key you create will also serve as the Disk Security Key, which will be written to the disk/array.*

Warning: *Be sure to make a record of your Enclosure Security key. If the Security Key is lost or forgotten, you will lose access to any encrypted data stored on the disk or RAID array.*

6.2.2. Enable Disk Security

SafeStorage can only be used with storage media that has SED (self-encrypting drive) capability.

Once Enclosure Security has been enabled, you can use the disk/array's SED capabilities. As mentioned, the Disk Enclosure Key is automatically generated when the Enclosure Key is created and will be written to the disk. These keys are identical.

There are two methods to enable Disk Security.

- Method 1: Enabling Disk Security for disks with the Legacy status.
- Method 2: Enabling Disk Security when creating a RAID array.

6.2.3. Change Enclosure Security key

If you want to change the Enclosure Security key, you must provide the old Enclosure Security key. If you don't know the old Enclosure Security key, you won't be able to change Enclosure Security key.

When the Enclosure Security key is changed to the new key, the Disk Security key is also changed to the same new key and written to the secured disk.

6.2.4. Change Disk Security key

If the Enclosure Security Key and Disk Security Key do not match, you cannot access data stored on the disk or array.

This ensures that the disk or array will remain inaccessible when removed from the system.

The administrator must input the original “old” Enclosure Security Key to access data.

To explain, there are two situations in which the Enclosure Security Key and Disk Security Key will not match:

- Situation 1: The disk is from another Enclosure.
- Situation 2: The disk/array was not present when the Enclosure Security Key was changed.

6.2.5. Disable Disk Security

If you do not want to encrypt the disks, you can use Cryptographic Erase to disable Disk Security.

Warning: *Cryptographic erase will delete the Security (Encryption) key from the target disk/ array members. Data stored on these devices will no longer be accessible.*

6.2.6. Disable Enclosure Security

If you do not want to use the SafeStorage, we provide options to disable Enclosure Security.

The Enclosure Security can only be disabled if the target AIC/ enclosure does not host any secured disks with the “Legacy” status or secured arrays.

Disable Enclosure Security will perform a Cryptographic Erase operation to disable Disk Security for all secured disks on the Enclosure.

Warning: *After disabling Enclosure Security, data stored on these secured disks will no longer be accessible.*

6.3. Using SafeStorage with the WebGUI


6.3.1. Enable Enclosure Security

1. Click the **Physical** tab, then click the appropriate “Enclosure” on the left-hand side of the interface.

Note: “Enclosure X” refers to each SSD series RAID AIC or RocketStor enclosure currently installed into the system.

2. Next, create a password under **Secure Setting**. The password must be between 8 and 32 characters in length. Enter the password a second time for the “**Confirm**” field.
3. After setting the password, click **Enable Security** to enable the Secure settings.

Example 1 (before enable Enclosure Security setting):

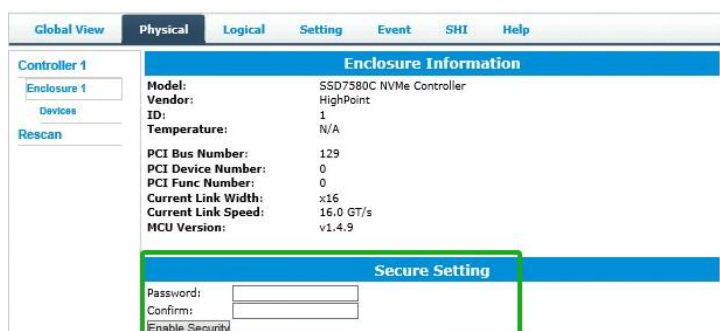

The screenshot shows the web GUI interface with the **Physical** tab selected. On the left, there is a sidebar with **Controller 1** and **Enclosure 1** selected. The main content area is titled **Enclosure Information** and displays the following details:

Model:	SSD7580C NVMe Controller
Vendor:	HighPoint
ID:	1
Temperature:	N/A
PCI Bus Number:	129
PCI Device Number:	0
PCI Func Number:	0
Current Link Width:	x16
Current Link Speed:	16.0 GT/s
MCU Version:	v1.4.9

Below the information is the **Secure Setting** section, which is highlighted with a green box. It contains the following fields:

- Password:** [Text input field]
- Confirm:** [Text input field]
- Enable Security** [Button]

Example 2 (after enable Enclosure Security setting):



The screenshot shows the web GUI interface with the **Physical** tab selected. On the left, there is a sidebar with **Controller 1** and **Enclosure 1** selected. The main content area is titled **Enclosure Information** and displays the following details:

Model:	SSD7580C NVMe Controller
Vendor:	HighPoint
ID:	1
Temperature:	N/A
PCI Bus Number:	129
PCI Device Number:	0
PCI Func Number:	0
Current Link Width:	x16
Current Link Speed:	16.0 GT/s
MCU Version:	v1.4.9

Below the information is the **Secure Setting** section, which is highlighted with a green box. It contains the following fields:

- Disable Security** [Button]
- Old Password:** [Text input field]
- New Password:** [Text input field]
- Confirm:** [Text input field]
- Change Security** [Button]

Warning: If you forget the security key, you will lose access to your data.

6.3.2. Enable Disk Security

6.3.2.1. Prerequisites

1. Confirm if your disk supports SED functions. SafeStorage will only work with SED capable storage media.

Example 1 (The device supports SED functions; **SED Capable** is **Yes**):

Physical Devices Information			
Device 1 E1 1 Model	Samsung SSD 980 PRO 1TB	Capacity	1.00 TB
Revision	5B2QGXA7	PCIe Width	x2
Location	1/E1/1	PCIe Speed	Gen 4
Max Free	760.14 GB		
Status	Normal		
Serial Num	S5GXNX1W506237F		
Interface	NVME	Type	SSD
SED Capable	Yes	SED Type	OPAL
Secured	No	Cryptographic Erase Capable	No

Example 2 (The device does not support SED functions; **SED Capable** is **No**):

Physical Devices Information			
Device 1 E1 1 Model	Samsung SSD 980 PRO 1TB	Capacity	1.00 TB
Device 1 E1 2 Model	KXG80ZN84T09 KIOXIA	Capacity	4.10 TB
Revision	APGA4102	PCIe Width	x2
Location	1/E1/2	PCIe Speed	Gen 4
Max Free	3.86 TB		
Status	Normal		
Serial Num	4122X2BFA00WU26		
Interface	NVME	Type	SSD
SED Capable	No	SED Type	None
Secured	No	Cryptographic Erase Capable	No

2. Disk security can only be enabled only if you have enabled Enclosure Security.

6.3.2.2. Enabling Disk Security

There are two methods to enable Disk Security.

● **Method 1: Enabling Disk Security for disks with the Legacy status**

1. Click the **Logical** tab and check the **Logical Device** section of the page.
2. Click the **Maintenance** option displayed on the right-hand side of each disk.
3. Click **Secure** to enable Disk Security.



4. Repeat steps 1) through 3) for the remaining disks.

Example 1 (before Disk Security has been enabled):



Example 2 (after Disk Security has been enabled):



● **Method 2: Enabling Disk Security when creating a RAID array**

Note: This feature is enabled when the array is created. Disk Security cannot be added to an existing array.

1. Click the **Logical** tab.

2. Check the box before the Secure option when creating a RAID array.

Create Array

Array Type: RAID 0

Array Name: Default

Secure:

Initialization Method: Quick Init

Cache Policy: (empty)

Block Size: 512K

Select All

Location	Model	Capacity	Max Free
<input checked="" type="checkbox"/> 1/E1/1	Samsung SSD 980 PRO 1TB	1.00 TB	1.00 TB

Example 1 (before Disk Security has been enabled):

Name	Type	Secured	Capacity	BlockSize	SectorSize	OS Name	Status
Device_1_E1_1	Hard Disk	No	1.00 TB			HPT DISK 0_0	Legacy Maintenance
Device_1_E1_2	Hard Disk	No	1.00 TB			HPT DISK 0_1	Legacy Maintenance

Location	Model	Secured	Capacity	Max Free
1/E1/1	Samsung SSD 980 PRO 1TB	No	1.00 TB	0.00 GB
1/E1/2	Samsung SSD 980 PRO 1TB	No	1.00 TB	0.00 GB


Example 2 (after Disk Security has been enabled):

Name	Type	Secured	Capacity	BlockSize	SectorSize	OS Name	Status
RAID_0_0	RAID 0	Yes	2.00 TB	512k	512B	HPT DISK 0_2	Normal Maintenance

Location	Model	Secured	Capacity	Max Free
1/E1/1	Samsung SSD 980 PRO 1TB	Yes	1.00 TB	0.00 GB
1/E1/2	Samsung SSD 980 PRO 1TB	Yes	1.00 TB	0.00 GB

6.3.3. Change Enclosure Security key

1. Click the **Physical** tab, and click the target **Enclosure** entry on the left side of the interface.
2. Enter the current password under the “**Old Password**” field.
3. Enter a new password under the “**New Password**” field (must contain 8 to 32 characters).
4. After entering a new password, click **Change Security**.

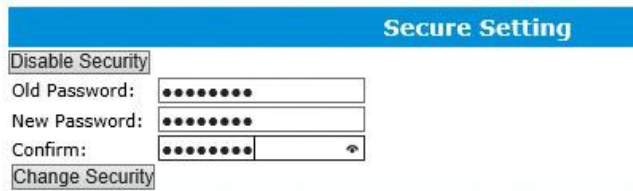

The screenshot shows a dialog box titled "Secure Setting". At the top left is a button labeled "Disable Security". Below it are three password input fields: "Old Password:", "New Password:", and "Confirm:". Each field contains a series of dots representing masked characters. At the bottom left is a button labeled "Change Security".

5. Confirm the change by clicking “**OK**” when the pop-up window is displayed.

localhost:7402 says

Change security succeeded.

OK

Note: Changing the *Enclosure Security key* will automatically change the *Disk Security Key*.


6.3.4. Change Disk Security key

Note: When the Enclosure Security Key and Disk Security Key do not match, the ability to change the Disk Security Key will be displayed. The secured disk is now in the **Yes (Locked)** state.

1. Click the **Physical** tab.
2. Under the **Physical Devices** section, click the name of each disk in blue text to view the Secured setting. **Yes (Locked)**.

Note: Security: Yes (Locked) indicates that the security of the disk is enabled, but the unlock action failed because the disk's key does not match the key on the controller. This status will prevent access to data stored on the disk.

3. Click **Yes (Locked)**, a new pop-up window providing a **Change Key** option will be displayed.
4. Enter the disk's **old password** and click **Change Key** to unlock the Disk Security key. The current Enclosure key is automatically written to the disk.

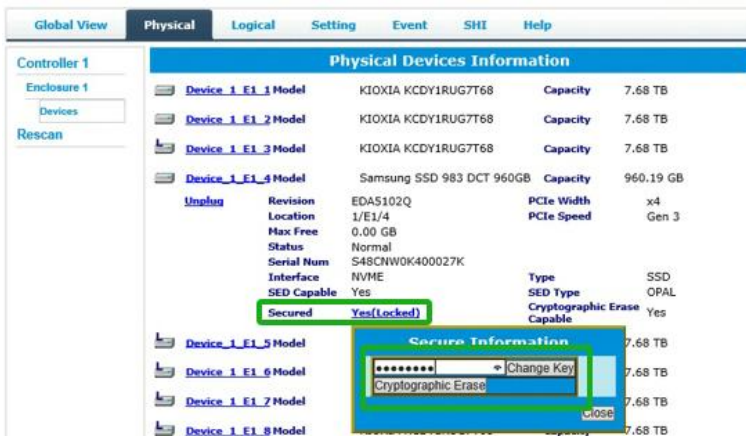

Note: There is a limit to the number of times you can change the disk key. If you do not enter the correct disk key **five times**, this function will be locked, and you will need to reboot your system to change the disk key again.


5. Reboot the operating system.
6. After rebooting the operating system, the secure attribute of the disk should change from **Yes (Locked)** to **Yes**, and the disk password is now consistent with the enclosure's password.

6.3.5. Disable Disk Security

We use **Cryptographic Erase** to **disable Disk Security**.

The **Cryptographic Erase** replaces the encryption Key inside each disk, making it impossible to decrypt data stored on these devices. When executed, data is rendered inaccessible and considered cryptographically erased. The disks can then be reset to an unowned state and reused once a new Disk Security key is generated.

Note: Disk Security cannot be disabled if the secured disk has the “Legacy” status. If the disk (or disks) has the “Legacy” status, you can remove this by using the “Init” function (initialize).

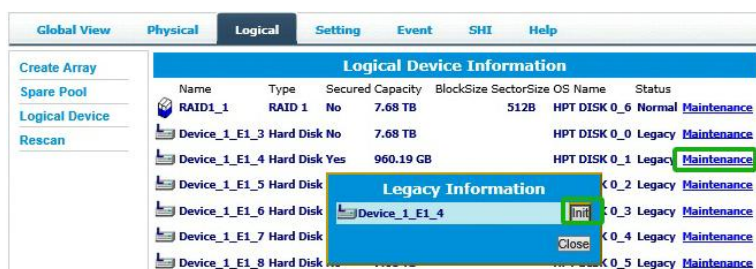

1. Under the **Physical Devices** section of the Physical tab, check the **Secured** status of the target disk. If enabled, this will be displayed as **Yes** or **Yes (Locked)**;
2. Click the Secured status (blue text); a pop-up window will be displayed, providing a **Cryptographic Erase** button.
3. Click the secure attribute of the **Cryptographic Erase** disk from **Yes/Yes (Locked)** to **No**.

Example 1 (click “Yes”, popup window, then click “Cryptographic Erase”):



Example 2 (click “Yes (Locked)”, popup window, then click “Cryptographic Erase”):

The screenshot shows a server management interface with a 'Physical' tab selected. The main area displays 'Physical Devices Information' for Controller 1. A list of devices is shown, including KIOXIA and Samsung SSDs. A 'Secure Information' popup window is overlaid on the device list, containing a 'Cryptographic Erase' button and a 'Close' button. The 'Secure Information' window also has a 'Change Key' button.


Physical Devices Information			
Device_1_E1_1 Model	KIOXIA KCDY1RUG7T68	Capacity	7.68 TB
Device_1_E1_2 Model	KIOXIA KCDY1RUG7T68	Capacity	7.68 TB
Device_1_E1_3 Model	KIOXIA KCDY1RUG7T68	Capacity	7.68 TB
Device_1_E1_4 Model	Samsung SSD 983 DCT 960GB	Capacity	960.19 GB
Unplug	Revision: EDAS102Q	PCIe Width	x4
	Location: 1/E1/4	PCIe Speed	Gen 3
	Max Free: 0.00 GB		
	Status: Normal		
	Serial Num: S48CNW0K400027K		
	Interface: NVME	Type	SSD
	SED Capable: Yes	SED Type	OPAL
	Secured: Yes(Locked)	Cryptographic Erase Capable	Yes
Device_1_E1_5 Model			7.68 TB
Device_1_E1_6 Model			7.68 TB
Device_1_E1_7 Model			7.68 TB
Device_1_E1_8 Model			7.68 TB

6.3.6. Disable Enclosure Security

Note: This setting can only be disabled if the target AIC/ enclosure does not host secured disks with the “Legacy” status or secured arrays.

1. Click the **Physical** tab, then click the target Enclosure entry on the left side of the interface.
2. Under **Secure Setting**, click **Disable Security**.

Example

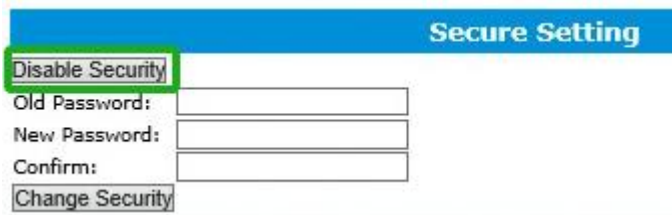

The screenshot shows a web interface with a blue header bar labeled "Secure Setting". Below the header, there is a list of options: "Disable Security", "Old Password:", "New Password:", "Confirm:", and "Change Security". The "Disable Security" option is highlighted with a green border. To the right of "Old Password:", "New Password:", and "Confirm:" are three empty text input fields.

6.4. Using SafeStorage with the CLI

The CLI (command line interface) is a powerful, text-only management interface designed for advanced users and professional administrators.

6.4.1. Secure command reference

```
HPT CLI > help secure
secure Command
  This command is used to set device security.
Syntax:
  secure {enclosure id} enable key={password}      Enable device security on the enclosure.
  secure {enclosure id} disable                    Disable device security on the enclosure.
  secure {enclosure id} change oldkey={old password} key={new password} Change all devices' security key on the enclosure.
  secure {device id} legacy                        Secure legacy device.
  secure {device id} changekey key={old password} Change the device's security key to be consistent with all other devices' key on the enclosure.
  secure {device id} secureerase {force}          Erase the device's security configuration and securely erases data.
```

6.4.2. Enable Enclosure Security

6.4.2.1. Syntax

secure {enclosure id} enable key={password}

The command is used to enable Enclosure Security.

Example

HPT CLI>secure 1/E1 enable key=00000000

```
HPT CLI > query enclosures
ID Secure VendorID ProductID NumberOfPYH
-----
1/E1 No HPT SSD7580C NVMe Controller 8
HPT CLI > secure 1/E1 enable key=00000000
Enable security successfully.
HPT CLI > query enclosures
ID Secure VendorID ProductID NumberOfPYH
-----
1/E1 Yes HPT SSD7580C NVMe Controller 8
```

The command is used to enable enclosure security and set key=00000000.

Note: You can check if enable Enclosure Security is in effect with the command: **query enclosures**. The secure status of enable Enclosure Security is **Yes**, and the secure status of disable Enclosure Security is **No**.

6.4.3. Enable Disk Security

6.4.3.1. Prerequisites

1. Confirm if your disk supports SED functions. SafeStorage will only work with SED capable storage media.

Example 1 (The device supports SED functions; **SED Capable** is **Yes**):

```
HPT CLI > query devices 1/E1/4
Mode Number:      Samsung SSD 983 DCT 960GB
Serial Number:    S48CNW0K400027K
Firmware Version: EDA5102Q
Capacity(GB):    960.13          TotalFree(GB): 960.13
Status:          SINGLE          Flag:           NORMAL
SED Capable:     Yes             SED Type:       OPAL
Secured:         No              Cryptographic Erase Capable: No
PCIe Width:      x4              PCIe Speed:     Gen 3
Temperature (F): 98
Warning Composite Temperature Threshold (F): 188
Critical Composite Temperature Threshold (F): 190
-----
S.M.A.R.T Attributes
S.M.A.R.T Status OK.
Name                                     Value
```

Example 2 (The device does not support SED functions; **SED Capable** is **No**):

```
HPT CLI > query devices 1/E1/1
Mode Number:      KIOXIA KCDY1RUG7T68
Serial Number:    13R0A00GTPBH
Firmware Version: 5101
Capacity(GB):    7681.41          TotalFree(GB): 0
Status:          RAID            Flag:           NORMAL
SED Capable:     No             SED Type:       None
Secured:         No              Cryptographic Erase Capable: No
PCIe Width:      x4              PCIe Speed:     Gen 4
Temperature (F): 104
Warning Composite Temperature Threshold (F): 170
Critical Composite Temperature Threshold (F): 185
-----
S.M.A.R.T Attributes
S.M.A.R.T Status OK.
Name                                     Value
```

2. Disk security can only be enabled only if you have enabled Enclosure Security.

6.4.3.2. Enabling Disk Security

There are two methods to enable Disk Security:

- **Method 1:** Enabling Disk Security for disks with the Legacy status.
- **Method 2:** Enabling Disk Security when creating a RAID array.

6.4.3.3.Syntax

- **Method 1:** Enabling Disk Security for disks with the Legacy status.

secure {device id} legacy

The command is used to enable Disk Security for disks with the Legacy status.

Example

HPT CLI>secure 1/E1/1 legacy

```
HPT CLI > query devices
ID      Secured  Capacity  MaxFree  Flag  Status
-----
1/E1/1  No       1000.20   0        SINGLE LEGACY
1/E1/2  No       1000.20   0        SINGLE LEGACY

HPT CLI > secure 1/E1/1 legacy
Secure legacy device(1/E1/1) successfully

HPT CLI > query devices
ID      Secured  Capacity  MaxFree  Flag  Status
-----
1/E1/1  Yes       1000.20   0        SINGLE LEGACY
1/E1/2  No       1000.20   0        SINGLE LEGACY
```

The command is used to enable disk security for disk 1/E1/1 with the Legacy status.

- **Method 2:** Enabling Disk Security when creating a RAID array.

create RAID* disks=* init=* secure=y

The command is used to enable Disk Security when creating a RAID array.

Example

HPT CLI>create RAID0 disks=* init=quickinit secure=y

```
HPT CLI > query arrays
ID      Secured Capacity(GB)  Type  Status  Block  Sector  Cache  Name
-----
1       Yes       1000.25  RAID0  NORMAL  128k   512B   NONE  RAID0_0

HPT CLI > create RAID0 disks=* init=quickinit secure=y
Create array successfully.

HPT CLI > query arrays
ID      Secured Capacity(GB)  Type  Status  Block  Sector  Cache  Name
-----
1       Yes       1000.25  RAID0  NORMAL  128k   512B   NONE  RAID0_0
```

The command is used to enable disk security for RAID0.

Note: You can check if enable Disk Security is in effect with the command: **query arrays**. The secured status of enable Disk Security is **Yes**, and the secured status of disable Disk Security is **No**.

6.4.4. Change Enclosure Security key

6.4.4.1. Syntax

secure {enclosure id} change oldkey={old password} key={new password}

The command is used to change Enclosure Security key.

Example

HPT CLI>secure 1/E1 change oldkey=0000000 key=1111111

```
HPT CLI > secure 1/E1 change oldkey=0000000 key=1111111  
Change security successfully.
```

The command is used to change enclosure security for enclosure 1/E1 and set new key=1111111.

6.4.5. Change Disk Security key

6.4.5.1. Syntax

secure {devices-id} changekey key={old password}

The command is used to Change the Disk Security key to be consistent with the Enclosure Security key.

Example

HPT CLI>secure 1/E1/2 changekey key=00000000

```
HPT CLI > query devices
ID      Secured      Capacity      MaxFree      Flag      St
-----
1/E1/1  Yes           1920.25      1820.25     RAID     NO
1/E1/2  Yes(locked)   1920.38      0           SINGLE   NO
1/E1/3  Yes           1920.25      1800.25     RAID     NO
1/E1/4  Yes           1920.25      1900.25     RAID     NO
```

```
HPT CLI > secure 1/E1/2 changekey key=00000000
Change key successfully.Please restart to take effect.
```

```
HPT CLI > query devices
ID      Secured      Capacity      MaxFree      Flag      S
-----
1/E1/1  Yes           1920.25      1920.25     SINGLE   N
1/E1/2  Yes           1920.25      1920.25     SINGLE   N
1/E1/3  Yes           1920.25      1920.25     SINGLE   N
1/E1/4  Yes           1920.25      1920.25     SINGLE   N
```

The command is used to change disk security for disk 1/E1/2 and set new key=00000000.

Notes:

You can check if change Disk Security key is in effect with the command: **query devices**. The secured status of successfully change Disk Security key is **Yes**, and the secured status of not successfully change Disk Security is **Yes(locked)**.

There is a limit to the number of times you can change the disk key. If you do not enter the correct disk key **five times**, this function will be locked, and you will need to reboot your system to change the disk key again.

6.4.6. Disable Disk Security

6.4.6.1. Syntax

`secure {devices-id} secureerase force`

The command is used to erase the Disk Security configuration and securely erase data.

Note: Disk Security cannot be disabled if the disks have the “Legacy” status. If the disk (or disks) has the “Legacy” status, you can remove this by using the “init” function (initialize).

Example

HPT CLI>init 1/E1/1

```
HPT CLI > init 1/E1/1
Init device(1/E1/1) successfully!
```

HPT CLI>secure 1/E1/1 secureerase force

```
HPT CLI > query devices
ID      Secured  Capacity  MaxFree  Flag  Status  Mod
-----
1/E1/1  Yes      1920.25   1920.25  SINGLE  NORMAL  SAN
1/E1/2  Yes      1920.25   1920.25  SINGLE  NORMAL  SAN
1/E1/3  Yes      1920.25   1920.25  SINGLE  NORMAL  SAN
1/E1/4  Yes      1920.25   1920.25  SINGLE  NORMAL  SAN
1/E1/5  Yes      1920.38   0         SINGLE  LEGACY   SAN
1/E1/6  Yes      1920.38   0         SINGLE  LEGACY   SAN
1/E1/7  Yes      1920.38   0         SINGLE  LEGACY   SAN
1/E1/8  Yes      1920.38   0         SINGLE  LEGACY   SAN
-----
HPT CLI > secure 1/E1/1 secureerase force
secureerase device(1/E1/1) successfully.
HPT CLI > query devices
ID      Secured  Capacity  MaxFree  Flag  Status  Mod
-----
1/E1/1  No       1920.25   1920.25  SINGLE  NORMAL  SAN
1/E1/2  Yes      1920.25   1920.25  SINGLE  NORMAL  SAN
1/E1/3  Yes      1920.25   1920.25  SINGLE  NORMAL  SAN
```

The command is used to disable disk security for disk 1/E1/1 with legacy status.

Note: You can check if disable Disk Security is in effect with the command: **query devices**. The secured status of enable Disk Security is **Yes**, and the secured status of disable Disk Security is **No**.

6.4.7. Disable Enclosure Security

Note: This setting can only be disabled if the target AIC/ enclosure does not host secured disks with the “Legacy” status or secured arrays.

6.4.7.1. Syntax

`secure {enclosure id} disable`

The command is used to disable Enclosure Security.

Example

HPT CLI>secure 1/E1 disable

```
HPT CLI > query enclosures
ID Secure VendorID ProductID NumberOfPYH
-----
1/E1 Yes HPT SSD7749M NVMe Controller 8
HPT CLI > secure 1/E1 disable
Disable security successfully.
HPT CLI > query enclosures
ID Secure VendorID ProductID NumberOfPYH
-----
1/E1 No HPT SSD7749M NVMe Controller 8
```

The command is used to disable enclosure security for enclosure 1/E1.

Note: You can check if disable Enclosure Security is in effect with the command: **query enclosures**. The secure status of enable Enclosure Security is **Yes**, and the secure status of disable Enclosure Security is **No**.

7. Glossary

This glossary defines the terms that are used in this document.

Glossary	Description
Array	RAID (Redundant Array of Independent Drives) array is a system that combines multiple disks to improve data storage performance and redundancy. The RAID array can provide data redundancy backup, improve read/write speed, increase storage capacity, and other functions.
Background	Background initialization means the array will still be created, and you can still write new data onto the array. But when your array requires rebuilding, residual data left behind may interfere with the process.
BIOS	BIOS is an acronym for Basic Input/Output System, which is a type of firmware that is solidified on a computer's motherboard and is used to initialize hardware devices and boot the operating system. The BIOS connects the communication between computer hardware and the operating system and provides basic input/output functions.
Cache	A cache refers to a cache area in a computer system that stores data temporarily. When a computer accesses data on a disk, that data is temporarily stored in the disk cache to speed up subsequent accesses.
Capacity	A property that indicates the amount of storage space on a disk or virtual disk.
Controller	A chip that controls the transfer of data between the microprocessor and memory or between the microprocessor and a peripheral device.
Diagnostic	A diagnostic view will appear when the driver or HPT card is not in effect. You can see the system information and HPT Product information in this view.
Disk	A disk generally refers to a storage device used to store files and data. This includes solid-state disks (SSDs), which are both used to store data and allow computers to read and write data.
Foreground	Foreground initializing the array will completely zero out the data on the disks, meaning the disk will be completely wiped, and every bit on the disk will be set to 0.
Firmware	Firmware is a class of software in embedded systems that is typically stored in the device's non-volatile memory and is responsible for controlling the device's

	hardware operations. It provides the basic operating system for the device and is usually preinstalled on the device.
HBA	A Host Bus Adapter is a hardware device used to connect a computer host to a storage device. It acts as an interface between the host computer and the storage device, enabling them to communicate directly. It provides high-speed data transfer, which improves the performance and reliability of the storage device.
Host interface	The host interface is through which a computer system or device communicates with other devices outside the system. The host interface can transfer data, receive commands, control devices, and perform other operations, allowing different devices to interact and communicate with each other.
Initialization	The process of making a redundant virtual disk consistent.
Legacy Disk	The newly inserted disk is configured as a legacy disk.
Link Speed	Connection speed of the channel
Link Width	Connection width of the channel
Mirroring	The process of providing complete data redundancy with two disks by maintaining an exact copy of one disk's data on the second disk.
N/A	N/A means nothing is entered in the CLI (command line interface)
Offline	A disk or storage device has been marked by the system as offline, which means that the computer cannot access the data and files on that disk.
PCI Location	The Location of the controller in the system.
Rebuild	The regeneration of all data to a replacement disk in a redundant virtual disk after a disk failure. A disk rebuild normally occurs without interrupting normal operations on the affected virtual disk, though some performance degradation of the disk subsystem can occur.
Rebuild Priority	The priority of rebuilding data onto a new disk after a disk in a storage configuration has failed.
SAS	Serial-Attached SCSI. SAS is a serial, point-to-point, enterprise-level device interface. The SAS interface provides improved performance, simplified cabling, smaller connectors, lower pin count, and lower power requirements.
SATA	Serial Advanced Technology Attachment. A physical storage interface standard. SATA is a serial link that provides point-to-point connections between devices.

SHI	Storage Health Inspector is used to assess and monitor the health of a storage system and ensure its proper functioning and security.
SMTP	Simple Mail Transfer Protocol is the standard protocol for sending and receiving e-mail online. The SMTP protocol transfers e-mail from the sender to the receiver's mail server and allows communication between mail servers.
Temperature	The degree of heat present in the supercapacitors, which is measured in Celsius
Vendor ID	A controller property indicating the vendor-assigned ID number of the controller
Virtual disk	A storage unit created by a RAID controller from one or more disks. Although a virtual disk can be created from several disks, it is seen by the operating system as a single disk. Depending on the RAID level used, the virtual disk can retain redundant data if there is a disk failure.

8. Revision History

8.1. Version 1.00, January 11, 2024

Initial version.

8.2. Version 1.01, February 20, 2024

The following changes were made:

- Updated the format of document titles.
- Updated section: [2.7.2.Download the Event Log.](#)
- Updated section: [4.1.3.Step 2 Adjust System EFI Settings.](#)
- Updated section: [4.1.4.Step 3 Enter the UEFI Command Line Utility.](#)
- Updated section: [4.9.Flashing the UEFI ROM.](#)
- Updated section: [Table23: Properties for Create Command, add * Interpretation.](#)
- Add section: [5.1.1.Step 1 Adjust System EFI Settings.](#)
- Add section: [5.1.2.Step 2 Enter the UEFI HII.](#)
- Updated section: [5.4.1.Create an array.](#)
- Updated section: [5.5.1.Delete an array.](#)
- Add section: [6.3.2.1.Prerequisites.](#)
- Updated section: [6.3.2.2.Enabling Disk Security.](#)
- Updated section: [6.3.5.Disable Disk Security.](#)
- Add section: [6.3.3.1.Prerequisites.](#)

9. Documentation Legal Notice

Copyright

Copyright © 2024 HighPoint Technologies, Inc. This document contains materials protected by International Copyright Laws. All rights reserved. No part of this manual may be reproduced, transmitted, or transcribed in any form and for any purpose without the express written permission of HighPoint Technologies, Inc.

Trademarks

Companies and products mentioned in this manual are for identification purposes only. Product names or brand names appearing in this manual may or may not be registered trademarks or copyrights of their respective owners. Please back up your important data before using HighPoint's products and use them at your own risk. In no event shall HighPoint be liable for any loss of profits or direct, indirect, special, incidental, or consequential damages arising from any defect or error in HighPoint's products or manuals. Information in this manual is subject to change without notice and does not represent a commitment on the part of HighPoint.

Notice

A reasonable effort has been made to ensure that the information in this manual is accurate. HighPoint assumes no liability for technical inaccuracies, typographical, or other errors.

FCC Part 15 Class B Radio Frequency Interference statement

This equipment has been tested and found to comply with the limits for a Class B digital device under part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used by the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. Suppose this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. In that case, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.

- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment under FCC rules.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

European Union Compliance Statement

This Information Technologies Equipment has been tested and found to comply with the following European directives:

- European Standard EN55022 (1998) Class B
- European Standard EN55024 (1998)