


Rocket 1638E (R1638E)

2x CDFP Connector PCIe 5.0 x16 External Adapter

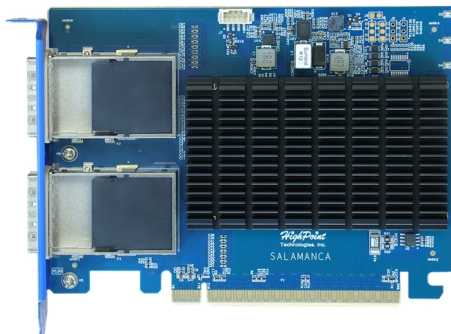

Quick Installation Guide

V1.00

System Requirements

PC Requirements

- System with a free PCIe 5.0 x16 slot

Operating System


- Microsoft Windows
- Linux

R1638E Kit Content

- 1x R1638E External Adapter
- 1x Quick Installation Guide

R1638E Hardware

Front View

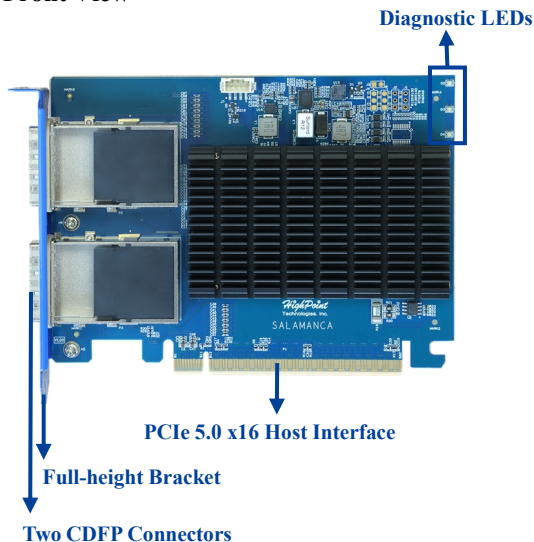


Note: Please refer to the detailed description of LED colors and their status in the R1638E External Adapter User Guide on the official website.


Hardware Installation

The R1638E provides two CDFP connectors compatible with HighPoint's certified cable accessory and Enclosure. (see the [Optional Certified Accessories](#) for more information). The following steps show how to connect the Enclosure directly to the R1638E.

1. Use a wired ESD wrist strap that is properly grounded.
2. Unpack and remove the R1638E and check it for damage. If it appears damaged, please get in touch with HighPoint Technical Support.
3. Shut down the system and disconnect the AC power cord.
4. Press down gently but firmly to seat the R1638E correctly in the available slot.

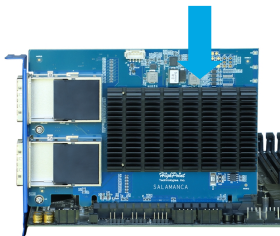

5. Connect the CDFP cables to the R1638E's CDFP ports.

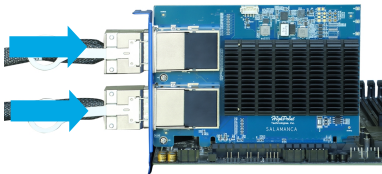

6. Connect the CDFP cables to the Enclosure's CDFP ports and the UL power cords to the Enclosure for AC power connection.



7. Power up the Enclosures, then power up the motherboard.
8. Turn on the power to the system.

Note: When powering off the system, the Enclosure must be powered off at the same time.

Optional Certified Accessories

CDFP-CDFP-1M Gen5 (Cooplink) Cable



CDFP Connector to CDFP Connector cable. Each cable supports one Enclosure.

Length: 1M (100cm)/39.37"

RS8631D Enclosure



The Enclosure is designed specifically for Gen5 (PCIe 5.0) GPU (Graphics Processing Unit).

Enclosure Dimensions:

286mm(H)*155mm(W)*474mm(D)

Resources

Various guides are available for the R1638E External Adapter.

For Documentation and more information about this product, please visit the following website:

<https://www.highpoint-tech.com/rocket-1638e-pcie-gen5-sw-itch-adapter>

Certified Accessories:

<https://www.highpoint-tech.com/nvme-accessories>

Customer Support

If you encounter any problems while utilizing the R1638E or have questions about this or any other HighPoint Technologies, Inc. product, please contact our Customer Support Department.

Web Support:

<https://www.highpoint-tech.com/support-and-services>

HighPoint Technologies, Inc. websites:

<https://www.highpoint-tech.com>