




SSD7540

8x M.2 Port to PCIe 4.0x16 NVMe RAID Controller

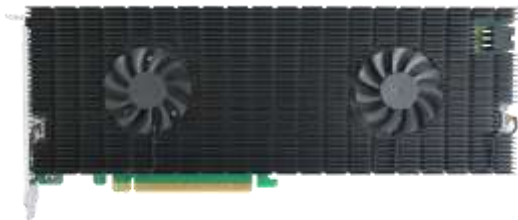

Quick Installation Guide

V1.09

System Requirements

PC Requirements


- System with a free PCIe4.0 (or 3.0) x16 slot
- Windows 11, 10 / Server 2022, 2019, 2016/ Microsoft Hyper-V
- RHEL/Debian/Ubuntu/Fedora/Proxmox/Rocky Linux
(Linux kernel 3.10 and later)
- macOS 10.13.6 ~ macOS 13.x

SSD7540 Kit Content

- SSD7540 Controller Card
- Quick Installation Guide

SSD7540 Hardware

Front View

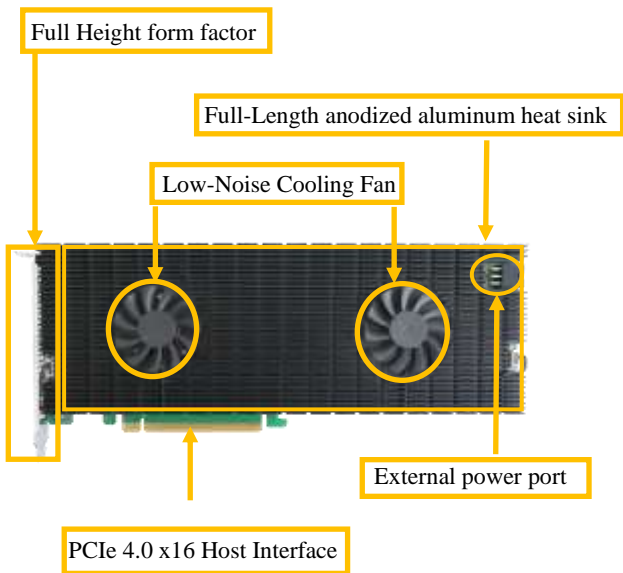


Hardware Installation

Step 1. On the rear of the SSD7540, remove the six screws that secure the unit's heat sink to the PCB.



Step 2. Carefully remove the fan's power cable from the right-side of the heatsink as shown below, then carefully flip the heatsink to the left (like turning a page from a book).

Note: Take care when moving the heatsink to prevent damaging the left fan's power cable.

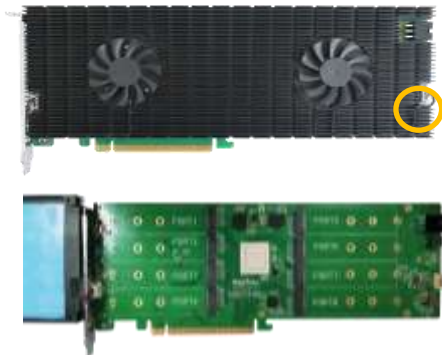

Step 3. After removing the casing, carefully turn it over to view the thermal pad. The blue films must be removed from the pad before reinstalling the panel. These films protect the pad from damage and foreign objects prior to installation, however, they will also prevent the thermal pad from conducting the heat away from the NVMe SSD's if we don't remove it.




Step 4. These 8 screws are used to install the NVMe SSD's.



Step 5. Please remove these screws from each of the M.2 slots.




Step 6. Gently insert the SSD into the slot.

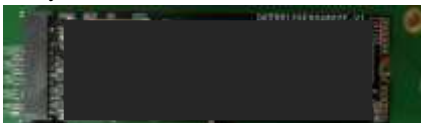


Note: Please make sure all disks are clean before you insert them into the slot to avoid unexpected situations.

Step 7. Refasten the screw to secure the SSD.

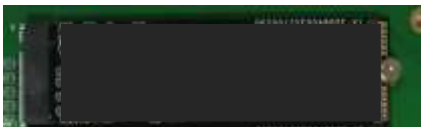

Repeat Steps 5 to 7 to install the remaining SSDs.


The following example shows eight Gen4 SSDs installed into Ports 1-8:

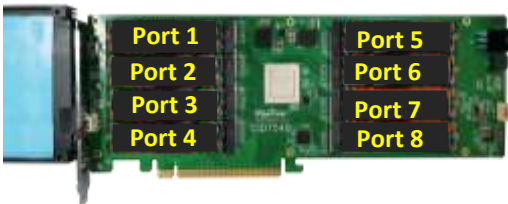

Step 8. After installing all SSDs, carefully flip the heatsink to the right.

Note: Make sure the SSDs are carefully, but securely installed into each M.2 port. Loose connections can cause a variety of stability and performance issues, and may ultimately result in data loss.

Step 9. Carefully reinsert in the power supply cable of the cooling fan that was removed in step 2.

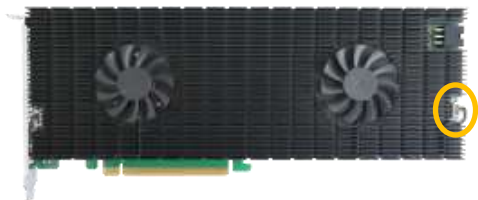

Step 10. On the rear of the SSD7540, refasten the 6 screws that were removed in step 1.



Note: Make sure the aluminum cover is properly aligned with the controller board (PCB), and that it makes full contact with the

thermal pad, before refastening it to the SSD7540. If the cover is improperly installed, the fan and thermal pad will be unable to sufficiently cool the NVMe SSD's and controller componentry, which may result in damage to the SSD's or controller hardware, performance loss, unstable I/O, and the loss of data.


Step 11. Power up the SSD external power supply

Note: *If the external power supply is not powered on, the SSDs may drop offline or remain undetected, which could lead to data loss.*



SSD7540 relies on two power sources to support eight SSDs; power supplied through the PCIe bus, and power from the system's PSU via an external 6 pin PCIe power cable. If the external cable is not connected, there will be insufficient power to support all 8 SSD's; this may cause the SSDs to drop offline.

Note: The SSD7540 does not require the external power cord when used with Mac Pro 2019.

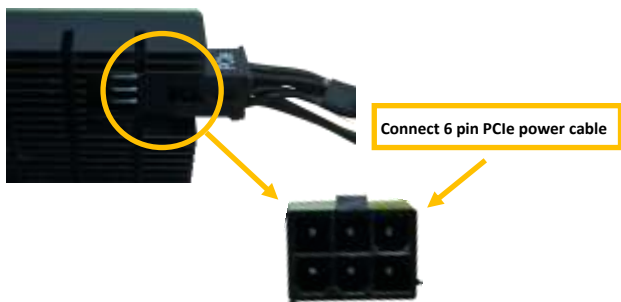

Note: Please be sure to connect NVMe before using the product to reduce the occurrence of unnecessary errors!

Note: Install the driver in the system first and then install the board !

Resources

A variety of manuals, guides and FAQ's are available for the SSD7540 RAID controller.

In addition, we recommend visiting the Software Downloads webpage for the latest drivers, management interfaces, and installation guides.

For Software Downloads, Documentation and more information about this product, please visit the following website:

<https://www.highpoint-tech.com/nvme1/ssd7540>

FAQ & Troubleshooting:

[FAQ - HighPoint Technologies, Inc. \(helpjuice.com\)](https://www.highpoint-tech.com/helpjuice.com)

Customer Support

If you encounter any problems while utilizing the SSD7540, or have any questions about this or any other HighPoint Technologies, Inc. product, feel free to contact our Customer Support Department.

Web Support:

<https://www.highpoint-tech.com/support-and-services>

HighPoint Technologies, Inc. websites:

<https://www.highpoint-tech.com>

© Copyright 2023 HighPoint Technologies, Inc. All rights reserved.