

HighPoint NVMe G5 Data RAID Installation Guide (Linux)

V1.16- Aug 16th 2023

Copyright 2023 HighPoint Technologies, Inc.

All rights reserved

Contents

Overview	3
Prerequisites for a Data-RAID Configuration	5
UEFI BIOS Settings	6
Driver Installation	7
Installing the Open-Source Driver	7
Updating the Driver	10
Uninstalling the Driver	12
HighPoint RAID Management (WebGUI) Installation	13
Uninstalling the HighPoint RAID Management Software (WEBGUI & CLI)	14
Troubleshooting	15
WebGUI	15
Controller and Drive Detection Issues	21
Appendix	22
How to collect Log information in WEBGUI	22
How to collect Log information CLI	23

Overview

This guide includes important hardware/software requirements, installation & upgrade procedures, and troubleshooting tips for using NVMe products with a Linux operating system.

The following is a list of supported NVMe products.

Supported Controller	SSD7540
	SSD7505
	SSD7502
	SSD7140A
	SSD7204
	SSD7202
	SSD7104
	SSD7104F
	SSD7101A-1
	SSD7105
	SSD7749M
	SSD7749E
	SSD7580B
	SSD7580A
	SSD7184
	SSD7180
	SSD7120
	RocketAIC 7505HW Series
	RocketAIC 7540HW Series
	RocketAIC 7749EW Series
	RocketAIC 7502HW Series
	RocketAIC 7140AW Series
	RocketAIC 7105HW Series
Supported Enclosure	SSD6540
	SSD6540M
	SSD6444
	SSD6780A

Prerequisites

This section describes the base hardware and software requirements for the NVMe products.

UEFI BIOS settings

This section describes how to configure your motherboard UEFI settings for use with NVMe products.

Driver Installation

This section covers driver installation, driver upgrade and driver uninstallation procedures for NVMe products. in a Linux environment.

Management Software Installation

This section explains how to download and install the HighPoint RAID Management Software Suite for Linux distributions. The download includes both the Web RAID Management Interface (WebGUI), and the CLI (Command Line Interface).

Troubleshooting

Please consult this section if you encounter any difficulties installing or using NVMe products. It includes solutions and description for commonly reported technical issues.

Appendix

This section describes how to collect troubleshooting information for support cases you have submitted via our Online Support Portal.

Prerequisites for a Data-RAID Configuration

In order to configure a non-bootable NVMe RAID array, you will need the following:

1. An NVMe SSD must be installed. At least one NVMe SSD must be installed into or connected to the NVMe products.

Note: The RocketAIC 7505HW series, RocketAIC 7540HW series, RocketAIC 7749EW series, RocketAIC 7502HW series, RocketAIC 7140AW series and RocketAIC 7105HW series NVMe drives already include pre-configured SSDs.

- 2. A PCIe 5.0 or PCIe 4.0 slot or PCIe3.0 with x8 or x16 lanes. The NVMe products must be installed into a PCIe 5.0 or PCIe 4.0 slot or PCIe3.0 with x8 or x16 lanes.
- 3. Your motherboard must have a UEFI BIOS with option ROM settings for third-part devices (such as the NVMe products, optical drives and USB flash drives). If this is not configured correctly, the system will fail to load the NVMe products. Please check the NVMe products's compatibility lists for recommended motherboards.
- **4. Secure Boot must be disabled.** HighPoint Linux Driver capability has not been signed and certified. If Secure Boot is enabled, the motherboard will not recognize the NVMe products, and you will be unable to proceed with installation.
- 5. Make sure any non-HighPoint drivers are uninstalled for any SSD's hosted by the NVMe products. Drivers provided by 3rd party software and manufacturer may prevent the NVMe products from functioning properly.

Warnings:

- 1) Failing to remove the NVMe products and SSDs when uninstalling the driver may result in data loss.
- 2) Always make sure the HighPoint Linux driver is installed before moving NVMe products & RAID array to another Linux system.

Linux distributions will always load the default NVMe support after the HighPoint Linux driver has been uninstalled, or if it detects the present of a card when no driver has been loaded – this driver will only recognize the NVMe SSDs as separate disks.

If the SSDs are recognized separately, any data they contain may be lost – including RAID configuration data.

UEFI BIOS Settings


The following is a list of supported UEFI NVMe products.

Supported Controller	SSD7105
	SSD7202
	SSD7502
	SSD7505
	SSD7540
	SSD7580A
	SSD7580B
	SSD7749M
	SSD7749E
Supported Enclosure	SSD6780A

Note: Products that do not support UEFI can skip this section.

Different motherboards will provide different UEFI-related BIOS settings. Please consult your motherboard's user manual for more information. This section provides examples using a SuperMicro H12SSL-i motherboard.

- 1. Boot the system and access the motherboard BIOS menu.
- 2. Under "Advanced->PCIe/PCI/PnP Configuration->, change "CPU Slot x PCI-E OPROM" to "EFI". "x" represents the PCIE slot assignment. For this example, the SSD7505 is installed into "CPU Slot 1".

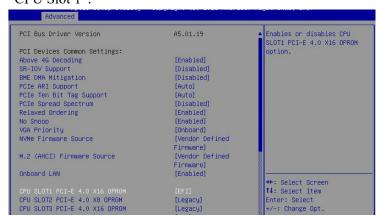

3. Set "Secure Boot" to "Disabled".



Driver Installation

Installing the Open-Source Driver

- 1. Power on the system and boot the Linux distribution.
- 2. Open a system terminal with root privileges, and verify that **NVMe product** is detected by using the following command:

lspci -tvv

Example screenshot

Note: the picture is only for reference, please make the object as the standard.

Additionally, you can verify that the NVMe drives are detected by using the following command:

fdisk -l

Example screenshot

```
Disk /dev/nvme1n1: 931.53 GiB, 1000204886016 bytes, 1953525168 sectors
Disk model: Sabrent Rocket 4.0 1TB
Units: sectors of 1 * 512 = 512 bytes
Sector size (logical/physical): 512 bytes / 512 bytes
I/O size (minimum/optimal): 512 bytes / 512 bytes
Disk /dev/nvme3n1: 1.84 TiB, 2000398934016 bytes, 3907029168 sectors
Disk model: Seagate FireCuda 520 SSD ZP2000GM30002
Units: sectors of 1 * 512 = 512 bytes
Sector size (logical/physical): 512 bytes / 512 bytes
I/O size (minimum/optimal): 512 bytes / 512 bytes
Disklabel type: gpt
Disk identifier: 54C26E76-64FE-4A0A-9047-76A424A679E0
                   Start
                             End Sectors Size Type
/dev/nvme3n1p1 34 32767
                                   32734 16M Microsoft reserved
Disk /dev/nvme0n1: 953.89 GiB, 1024209543168 bytes, 2000409264 sectors
Disk model: KXG60ZNV1T02 TOSHIBA
Units: sectors of 1 * 512 = 512 bytes
Sector size (logical/physical): 512 bytes / 512 bytes
I/O size (minimum/optimal): 512 bytes / 512 bytes
Disk /dev/nvme2n1: 223.58 GiB, 240057409536 bytes, 468862128 sectors
Disk model: WDC WDS240G2G0C-00AJM0
Units: sectors of 1 * 512 = 512 bytes
Sector size (logical/physical): 512 bytes / 512 bytes
I/O size (minimum/optimal): 512 bytes / 512 bytes
```

Note: the picture is only for reference, please make the object as the standard.

3. Download the appropriate driver from the Software Downloads web page.

4. Using the system terminal with root privileges, browse to the directory where the driver download is located, and enter the following commands to extract the Linux Open-source Driver software package:

```
tar zxvf HighPoint_NVMe_G5_Linux_Src_vx.x.xx_xx_xx_xx.tar.gz
```

```
root@testlu-Super-Server:/home/testlu/Documents# tar zxvf HighPoint_NVMe_G5_Linux_Src_v1.5.1_2023_02_21.tar.gz hptnvme_g5_linux_src_v1.5.1_2023_02_21.bin README
```

Note: The driver revision shown in the screenshots may not correspond with current software releases. Please make sure to download the latest driver updates from the product's Software Updates page.

5. Install the open-source Driver using the following command.

```
sh hptnvme_g5_linux_src_vx.x.xx_xx_xx_xx.bin or ./hptnvme_g5_linux_src_vx.x.xx_xx_xx_xx.bin
```

- After driver installation is complete, the system will prompt you to restart to make the driver take effect.
 Manually restart the system.
- 7. After the distribution has rebooted, open the system terminal with root privileges and check the driver status using the following command:

dmesg | grep hptnvme

The following screenshot shows driver v1.5.1.

Additionally, you can check the NVMe drive using the following command:

fdisk -l

```
Disk /dev /hptblock0n0p: 953 B9 GiB, 1024209543168 bytes, 2000409264 sectors Units: sectors of 1 * 512 = 512 bytes

Sector size (logical/physical): 512 bytes / 512 bytes

Disk /dev /hptblock0n1p: 931 53 GiB, 1000204886016 bytes, 1953525168 sectors

Units: sectors of 1 * 512 = 512 bytes

Sector size (logical/physical): 512 bytes / 512 bytes

I/O size (minimum/optimal): 512 bytes / 512 bytes

Disk /dev /hptblock0n2p: 223 58 GiB, 240057409536 bytes, 468862128 sectors

Units: sectors of 1 * 512 = 512 bytes

Sector size (logical/physical): 512 bytes

Jose /dev /hptblock0n3p: 1.84 TiB, 2000398934016 bytes, 3907029168 sectors

Units: sectors of 1 * 512 = 512 bytes

Disk /dev /hptblock0n3p: 1.84 TiB, 2000398934016 bytes, 3907029168 sectors

Units: sectors of 1 * 512 = 512 bytes

Sector size (logical/physical): 512 bytes / 512 bytes

Jose (minimum/optimal): 512 bytes / 512 bytes

Disk identifier: 54C26E76-64FE-4A0A-9047-76A424A679E0
```

Updating the Driver

As of May 2022, current open-source driver releases include our Auto-Compile feature – auto compile checks the kernel version each time the system is booted to ensure compatibility. If a new kernel is detected, Auto Compile will check our online database for required updates and automatically compile a new driver.

The latest open-source driver is available from the Software Downloads web pages. If you want to manually update using this download, please follow the procedure below.

1. Prerequisites

- a. Ensure that NVMe product is installed into the motherboard.
- b. Open the system terminal with root privileges to check the current driver version by using the following command: **dmesg** | **grep hptnvme**.

The screenshot below shows driver version v1.2.13 is installed:

2. Updating the driver

- a. Open the directory where the latest driver version is located and open the system terminal with root privileges. Execute the following commands to complete the installation. The illustrated driver version is v1.5.1.
- b. Extract the Linux Opensource Driver software package using the following command:

```
tar zxvf HighPoint_NVMe_G5_Linux_Src_vx.xxx_xx_xx_xx.tar.gz
```

```
root@testlu-Super-Server:/home/testlu/Documents# tar zxvf HighPoint_NVMe_G5_Linux_Src_v1.5.1_2023_02_21.tar.gz
hptnvme_g5_linux_src_v1.5.1_2023_02_21.bin
README
```

c. Make sure the system has an active internet connection. To manually install the latest Open-source Driver, open the system terminal with root privileges and enter the following command:

./hptnvme_g5_linux_src_vx.x.xx_xx_xx_xx.bin

```
root@testlu-Super-Server:/home/testlu/Documents# [./hptnvme_g5_linux_src_v1.5.1_2023_62_21.bin  
Verifying archive integrity... All good.

Verifying archive integrity... All good.

Checking and installing required toolchain and utility ...

Checking and installing required toolchain and utility ...

Found program gac (/usr/bin/gac)

Found program gac (/usr/bin/gac)

Found program wget (/usr/bin/get)

Found program wget (/usr/bin/get)

Found program wget (/usr/bin/get)

Found program wget (/usr/bin/get)

Found file 'etc/default/grub'

Fourcing file 'etc/default/grub'

Found linux inage: /boot/vnlinuz-5.15.0-71-generic

Found linux inage: /boot/vnlinuz-5.15.0-71-generic

Found intrd inage: /boot/vnlintrd.ing-5.15.0-40-generic

Found intrd inage: /boot/vnlintrd.ing-5.15.0-40-generic

Found intrd inage: /boot/vnlintrd.ing-5.15.0-40-generic

Found intrd inage: /boot/wnlinuz-5.15.0-40-generic

Found intrd inage: /boot/wnlinuz-5.15.0-71-generic

Found intrd inage: /boot/wnlinuz-5.15.0-71-generic

F
```

d. After the driver installation is complete, the system will prompt you to restart to allow the new driver to take effect. Please manually restart the system.

Note: for more information about this procedure, please consult the readme file included with each *Openn-source download*.

e. Once the distribution has rebooted, open the system terminal with root privileges and check the current driver version using the following command.

dmesg | grep hptnvme.

The screenshot below shows driver v1.5.1 is installed:

- f. Open the WebGUI to make sure it can connect to the NVMe product and recognize the NVMe SSD's/RAID array.
- g. As shown below, the new driver has been successfully installed and loaded at bootup the WebGUI can connect to the NVMe product and recognize the SSD's and RAID array.



Uninstalling the Driver

1. Prerequisites

a. Power off the system and remove the NVMe product from the motherboard.

Note: failing to remove the NVMe product and SSDs when uninstalling the driver may result in data loss. The Linux distribution will load the default NVMe support after the HighPoint Linux driver has been uninstalled – this driver will only recognize the NVMe SSD's as separate disks.

2. To uninstall the driver:

b. Open the system terminal with root privileges. Enter the following commands to uninstall the driver:

hptuninhptnvme

c. Press 'Y' to confirm.

```
[root@localhost Downloads]# hptuninhptnvme
Are you sure to uninstall the driver hptnvme from system? (Y/n): y
Removed symlink /etc/systemd/system/default.target.wants/hptdrv-monitor.service.
Removed symlink /etc/systemd/system/sysinit.target.wants/systemd-hptdrv.service.
All files installed have been deleted from the system.
[root@localhost Downloads]# []
```

- d. After uninstalling the driver, manually reboot the system.
- e. After the distribution has rebooted, open the system terminal with root privileges. And enter the following command to check the driver status:

lsmod | grep hptnvme

```
Before uninstalling:
        [root@localhost test]# lsmod | grep hptnvme hptnvme 235401 0

After uninstalling:
        [root@localhost test]# lsmod | grep hptnvme [root@localhost test]# ]
```

f. If the system does not display information about "hptnvme", the driver has been successfully uninstalled.

HighPoint RAID Management (WebGUI) Installation

The HighPoint RAID Management software is used to configure and monitor the SSDs hosted by the NVMe product.

Download the HighPoint RAID Management software package from the HighPoint website.

1. Using the system terminal with root privileges, browse to the directory where the software download, and enter the following commands to extract the management software package:

tar zxvf RAID_Manage_Linux_v3.x.x.x_x_x_x.tgz

```
root@testlu-Super-Server:/home/testlu/Desktop# tar zxvf RAID_Manage_Linux_v3.1.12_22_11_01.tgz
HPT_CLI_Guide.pdf
README.txt
RAID_Manage_Linux_v3.1.12_22_11_01.bin
```

Note: The driver revision shown in the screenshots may not correspond with current software releases. Please make sure to download the latest driver updates from the product's Software Updates page.

2. Install the HighPoint RAID management software (WebGUI & CLI) using the following command: ./ RAID Manage Linux v2.x.x x x x.bin

```
root@testlu-Super-Server:/home/testlu/Desktop# ./RAID_Manage_Linux_v3.1.12_22_11_01.bin
```

- 3. After the software is installed, open the WebGUI to make sure it can connect to the NVMe product.
- 4. You can also check the NVMe product using the CLI (command line interface). Using the system terminal, enter the following command:

hptraidconf

For more information about the CLI, please download the guide: Link.

HPT CLI>query devices Capacity MaxFree Flag Status ModelNumber 1/E1/1 250.06 SINGLE LEGACY Samsung SSD 960 EVO 250GB Samsung SSD 960 EVO 250GB 1/E1/2 250.06 SINGLE LEGACY Samsung SSD 960 EV0 250GB LEGACY 1/E1/4 250.06 SINGLE LEGACY Samsung SSD 960 EVO 250GB

If the WebGUI/CLI can connect to the NVMe product and recognized the NVMe SSD's, the driver has been installed and is functioning normally.

Example screenshot

[root@localhost test]# hptraidconf



Uninstalling the HighPoint RAID Management Software (WEBGUI & CLI)

Open the system terminal with root privileges. Enter the following commands to uninstall the RAID Management:

dpkg -r hptsvr (or rpm -e hptsvr-https)

```
root@testlu-Super-Server:/home/testlu/Desktop#|dpkg -r hptsvr|
(Reading database ... 183888 files and directories currently installed.)
Removing hptsvr (3.1.12) ...
```

Enter the following command to check if the RAID Management has been removed successfully:

hptraidconf

after uninstall:

root@testlu-Super-Server:/home/testlu/Desktop# hptraidconf bash: /usr/bin/hptraidconf: No such file or directory

Troubleshooting

WebGUI

1. The WebGUI fails to install

If you use an Ubuntu system, the system may prompt you about the lack of a **readline5** package when installing the WebGUI – this will interrupt the installation process.

```
root@test-PRIME-Z390-A:/home/test/Downloads# sh RAID_Manage_Linux_v2.3.14_17_07_26.bin
Install .....
Package readline lib not found! will be installed!
Install param error!
Clean .....
```

Solution:


a. With root permissions enabled, you can use the following command to load readline5 at using a terminal, and will be allowed to install the WebGUI:

apt-get install libreadline5

b. Once complete, restart the WebGUI installation procedure.

2. The WebGUI cannot connect to the NVMe product

If you are unable to access the NVMe product using the WebGUI:

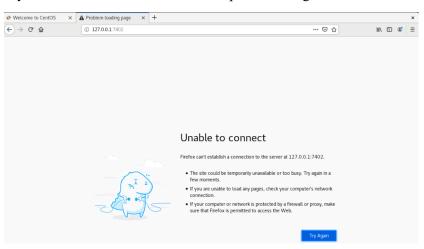

a. WebGUI service did not start successfully.

Solution:

Start the WebGUI by opening the system terminal with root privileges and entering the following command: **hptsvr**

b. The driver cannot be compiled.

```
[root@localhost test]# hptsvr
proc file invalid, dwControllerId=0
Driver is not loaded.
[root@localhost test]#
```

Solution:

- 01. Make sure at least one NVMe SSD's has been installed into the NVMe product.
- 02. Make sure motherboard can recognize the NVMe product and display NVMe information during the BIOS post.
- 03. If you use a CentOS system, open the system terminal with root privileges and enter the following command to install "elfutils-libelf-devel":

yum install elfutils-libelf-devel

Once complete, install the HighPoint NVMe Linux driver once more.

04. If you use an Ubuntu/Debian system, open the system terminal with root privileges and enter the following command to install "libelf-dev":

yum install libelf-dev

Once complete, install the HighPoint NVMe Linux driver once more.

3. Fail to compile gcc, make and other driver files.

For Ubuntu

When installing the driver, due to various factors, driver files such as **gcc** and **make** cannot be compiled, thus interrupting the driver installation process:

```
root@test:/home/test# ./rsnune_linux_src_u1.2.18.1_2020_03_18.bin
Verifying archive integrity... All good.
Uncompressing RocketNVME RAID Controller Linux Open Source package installer.....
Checking and installing required toolchain and utility ...
Installing program nake ... (failed)
Installing program gcc ... (failed)
Found program perl (/usr/bin/perl)
Found program uget (/usr/bin/wget)
```

This problem can be caused by:

a. The system is not connected to a network (internet connection)

Solution:

- Double check the system's internet connection
- Once confirmed, reinstall the driver.

b. System process is occupied/busy

Solution:

Open the system terminal with root privileges and enter the following command:

apt-get update

This will prompt the system to release the process and update the download source. **Install the driver again** after the system process has been released.

For Redhat

When installing the driver, due to various factors, driver files such as **gcc** and **make** cannot be compiled, thus interrupting the driver installation process:

```
dumpkernels:kernel installed
kernel-3.10.0-1160.el7.x86_64
dumpkernels:kernel-devel installed
kernel-devel-3.10.0-1160.el7.x86_64
dumpkernels:repo list kernel-devel
dumpkernels:end
installlib_centos elfutils-libelf-devel
There are no enabled repos.
Run "vum repolist all" to see the repos vou have.
To enable Red Hat Subscription Management repositories:
    subscription-manager repos --enable <repo>
To enable custom repositories:
    yum-config-manager --enable <repo>
compile:some build tools are missing.
/var/lock/subsys/hptdrv-monitor:
```

Solution:

a. Go to the Red Hat website and register an account:

```
Register for | Red Hat IDP
```

b. Open the system terminal with root privileges.

Enter the following command to log in:

subscription-manager register --username=*** --password=*** --auto-attach

```
[root@localhost Documents]# subscription-manager register --username=hptzy7 --pa hptzy4015 --au Registering to: subscription.rhsm.redhat.com:443/subscription
Registering to: subscription.rhsm.redhat.com:443/subscription
The system has been registered with ID: 963725aa-d99d-48bc-bb7c-301lc4eef91f
The registered system name is: localhost.localdomain
```

Reinstall the driver

```
[root@localhost Documents]# ./hptnvme g5 linux_src_v1.4.1_2022_03_04.bin
Verifying archive integrity... All good.
Uncompressing HighPoint NVMe RAID Controller Linux Open Source package installer.....
Checking and installing required toolchain and utility ...
Installing program make ... done
Installing program gcc ... done
```

For Debian

When installing the driver, due to various factors, driver files such as **gcc** and **make** cannot be compiled, thus interrupting the driver installation process:

```
root@debian:/home/test/Documents# ./hptnvme_g5_linux_src_v1.4.4_2022_06_13.bin

Verifying archive integrity... All good.
Uncompressing HighPoint NWMe RAID Controller Linux Open Source package installer...
Checking and installing required toolchain
Installing program make ... (failed)
Installing program gcc ... (failed)
Installing program gcc ... (failed)
Found program poer (/usr/bin/vgct)
Old price aspm=off inomevoff intel iommu=off and iommu=off
new pcie aspm=off ionomevoff intel iommu=off and iommu=off
spychronizing state of hydry-monitor service with SysV service script with /lib/systemd/systemd-sysv-install.
Executing: /lib/systemd/systemd-sysv-install enable hydry-monitor
update-rc.d. warning: enable action will have no effect on runlevel 1
Toolchain to built the driver is incomplete, please install the missing package to build the driver.
Exit.
```

This problem can be caused by: The system is not connected to a network (internet connection)

Solution:

- a. Double check the system's internet connection
- b. Once confirmed, reinstall the driver.

If the following occurs after the network connection and reinstall driver:

```
root@debian:/home/test/Documents# dhclient
root@debian:/home/test/Documents# ./hptnvme_g5_linux_src_v1.4.4_2022_06_13.bin
Verifying archive integrity... All good.
Uncompressing HighPoint NVMe RAID Controller Linux Open Source package installer.......
Checking and installing required toolchain and utility ...
Installing program make ...
Media change: please insert the disc labeled
   'Debian GNU/Linux 11.5.0 _Bullseye_ - Official amd64 DVD Binary-1 20220910-10:40'
in the drive '/media/cdrom/' and press [Enter]
```

This problem can be caused by a lack of dependency packages:

Solution:

- a. To install using the CD-ROM: insert the CD-ROM back and press Enter
- b. Use USB startup disk to install:

01. The system needs to be resourced

For details, please refer to the official website file:

https://www.debian.org/doc/manuals/debian-faq/uptodate.en.html

Solution(Here is the process of changing the source of Debian 11.5):

Open the system terminal with root privileges and enter the following command:

nano /etc/apt/sources.list

Replace the contents of the file with the following illustration

deb-src https://mirrors.tuna.tsinghua.edu.cn/debian/ bullseye main contrib non-free deb https://mirrors.tuna.tsinghua.edu.cn/debian/ bullseye-updates main contrib non-free deb-src https://mirrors.tuna.tsinghua.edu.cn/debian/ bullseye-updates main contrib non-free deb-src https://mirrors.tuna.tsinghua.edu.cn/debian/ bullseye-updates main contrib non-free deb https://mirrors.tuna.tsinghua.edu.cn/debian/ bullseye-backports main contrib non-free deb-src https://mirrors.tuna.tsinghua.edu.cn/debian/ bullseye-backports main contrib non-free deb https://mirrors.tuna.tsinghua.edu.cn/debian/ bullseye-security main contrib non-free deb-src https://www.debian.org/mirror/list for more information.

02. apt-get update

```
rost@test:/home/test/Documents# nano /etc/apt/sources.list
rost@test:/home/test/Documents# apt-get update
etcl. https://mairors.trom.tsinghua.edu.cn/debian bullseye-updates InRelease [116 k8]
det: https://mairors.tuna.tsinghua.edu.cn/debian bullseye-beckports InRelease [44.1 k8]
det: https://mairors.tuna.tsinghua.edu.cn/debian bullseye-beckports InRelease [49.0 k8]
det: https://mairors.tuna.tsinghua.edu.cn/debian bullseye-beckports InRelease [48.1 k8]
det: https://mirrors.tuna.tsinghua.edu.cn/debian bullseye/mairors.tuna.tsinghua.edu.cn/debian bullseye/mairors.tuna.tsinghua.edu.cn/debian bullseye/mairors.ources [8,633 k8]
det: https://mirrors.tuna.tsinghua.edu.cn/debian bullseye/main Sources [8,633 k8]
det: https://mirrors.tuna.tsinghua.edu.cn/debian bullseye/main and64 Packages [8,184 k8]
det: https://mirrors.tuna.tsinghua.edu.cn/debian bullseye/main and64 Packages [8,184 k8]
det: https://mirrors.tuna.tsinghua.edu.cn/debian bullseye/main and64 Pb: 11 Metadata [4,049 k8]
det: https://mirrors.tuna.tsinghua.edu.cn/debian bullseye/main and64 Pb: 11 Metadata [4,049 k8]
det: https://mirrors.tuna.tsinghua.edu.cn/debian bullseye/main bullseye/main [6,239 k8]
det: https://mirrors.tuna.tsinghua.edu.cn/debian bullseye/main bullseye/main [6,239 k8]
det: https://mirrors.tuna.tsinghua.edu.cn/debian bullseye/main bullseye/main [6,239 k8]
det: https://mirrors.tuna.tsinghua.edu.cn/debian bullseye/main bullseye/main [6,23] k8]
det: https://mirrors.tuna.tsinghua.edu.cn/debian bullseye/contrib and64 DEP-11 Metadata [4,048]
det: https://mirrors.tuna.tsinghua.edu.cn/debian bullseye/contrib pb: 11 dax48 Icons [47,718 k8]
det: https://mirrors.tuna.tsinghua.edu.cn/debian bullseye/contrib DEP-11 dax48 Icons [47,718 k8]
det: https://mirrors.tuna.tsinghua.edu.cn/debian bullseye/contrib DEP-11 dax48 Icons [47,7 k8]
det: https://mirrors.tuna.tsinghua.edu.cn/debian bullseye/contrib DEP-11 dax48 Icons [47,7 k8]
det: https://mirrors.tuna.tsinghua.edu.cn/debian bullseye-obeckports/mirasinsoneres [6,24 k8]
det: https://mirrors.tuna.tsinghua.edu
```

03. Reinstall the driver.

For Proxmox

When installing the driver, due to various factors, driver files such as **gcc** and **make** cannot be compiled, thus interrupting the driver installation process:

This problem can be caused by:

a. The system is not connected to a network (internet connection)

Solution:

- 01. Double check the system's internet connection
- 02. Once confirmed, reinstall the driver.

b. System process is occupied/busy

Solution:

Open the system terminal with root privileges and enter the following command:

apt-get update

This will prompt the system to release the process and update the download source. Install the driver again after the system process has been released.

If you are using a completely new system, the following error occurs when installing the driver or

apt-get update:

This problem can be caused by:

01. The system needs to be resourced

This article is a proxmox7.2 feeding.

The previous version of the source can refer to the official website:

https://pve.proxmox.com/wiki/Downloads#Update a running Proxmox Virtual Environment 7 .x to latest 7.2

• Open the system terminal with root privileges and enter the following command to delete the source that comes with it

rm /etc/apt/sources.list.d/pve-enterprise.list

• Add a domestic source:

echo 'deb http://mirrors.ustc.edu.cn/proxmox/debian/pve bullseye pve-no-subscription' >> /etc/apt/sources.list.d/pve-no-subscription.list

• Edit the source file: /etc/apt/sources.list

nano/etc/apt/sources.list

• Replace the contents of the file with the following illustration

```
# debian aliyun source
deb https://mirrors.aliyun.com/debian bullseye main contrib
deb https://mirrors.aliyun.com/debian bullseye-updates main contrib
# security updates
deb https://mirrors.aliyun.com/debian-security bullseye-security main contrib
```

Note: You can replace https://mirrors.aliyun.com/debian with the name of a faster Debian mirror near you. See the mirror list at https://www.debian.org/mirror/list for more information.

02. apt-get update

```
Foot@test:/etc# apt-get update
Get:1 http://mirors.ustc.edu.cn/proxmox/debian/pve builseye InRelease [2,661 B]
Get:2 https://mirors.ustc.edu.cn/proxmox/debian/pve builseye InRelease [16 kB]
Get:3 http:://mirors.aliyun.com/debian builseye InRelease [16 kB]
Get:4 https://mirors.aliyun.com/debian builseye-updates InRelease [44.1 kB]
Get:5 https://mirors.aliyun.com/debian builseye-updates InRelease [44.1 kB]
Get:6 https://mirors.aliyun.com/debian builseye-main amd64 Packages [8,184 kB]
Get:6 https://mirors.aliyun.com/debian builseye/main amd64 Packages [8,184 kB]
Get:7 https://mirors.aliyun.com/debian builseye/main Translation-en [6,299 kB]
Get:8 https://mirors.aliyun.com/debian builseye/contrib amd64 Packages [5,06 kB]
Get:8 https://mirors.aliyun.com/debian builseye/contrib Translation-en [46,9 kB]
Get:10 https://mirors.aliyun.com/debian builseye-updates/main amd64 Packages [6,344 B]
Get:10 https://mirors.aliyun.com/debian builseye-updates/main Translation-en [5,890 B]
Get:12 https://mirors.aliyun.com/debian-security builseye-security/main amd64 Packages [189 kB]
Get:13 https://mirors.aliyun.com/debian-security builseye-security/main amd64 Packages [189 kB]
Get:13 https://mirors.aliyun.com/debian-security builseye-security/main amd64 Packages [189 kB]
Get:13 https://mirors.aliyun.com/debian-security builseye-security/main Translation-en [119 kB]
Fetched 15.4 MB in 19s (814 kB/s)
```

- 03. Reinstall the driver.
- **4.** If you experience any other WebGUI or CLI related problems, please submit a support ticket using our Online Support Portal, which includes a description of the problem in as much detail as possible, and upload the following:

Please click the following Appendix for more information about locating and collecting these logs.

Controller and Drive Detection Issues

If the system is unable to detect the NVMe product or SSD's, make sure to remove all NVMe devices from the system that is not related to the NVMe product during the troubleshooting process. The presence of other NVMe devices may interfere with the detection of the NVMe product.

If you experience any other controller related problems, please submit a support ticket using our Online Support Portal, which includes a description of the problem in as much detail as possible.

Please check the <u>Appendix</u> – providing system logs, screenshots and other information about your system will enable our Support Department resolve your support issue as quickly and efficiently as possible.


Appendix

When submitting s support ticket via our Online Support Portal, the following information will help out Support Department diagnose and resolve your issue as quickly and efficiently as possible. For information collection methods, please refer to the following steps and video links


How to collect Log information in WEBGUI

We have provided a detailed video on log collection methods: link

1. **1-Click Self-Diagnostic Solution**: Diagnostic View provides a "1-click" information collection system for troubleshooting. It will gather all necessary hardware, software and storage configuration data and compile it into a single file, which can be transmitted directly to our FAE Team via our Online Support Portal;

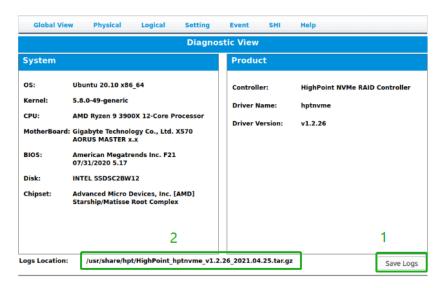


2. You can also click 'Help'→'Diagnostic' to enter the diagnostic view.

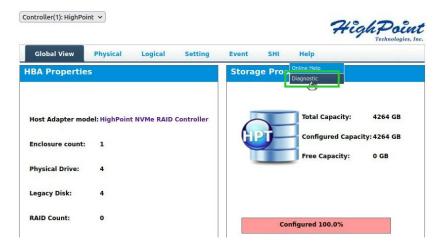

3. Click the "Save Logs" button to create the diagnostic file.

Note: this process may take several minutes to complete.

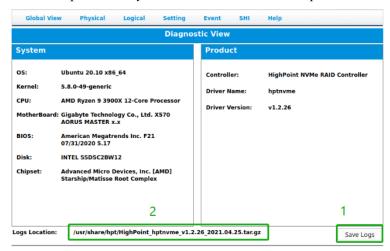

How to collect Log information CLI

- 1. Execute the command 'hptraidconf' to enter the CLI;
- 2. Execute the command 'diag' in CLI, your log information will be collected.

```
HPT CLI>diag

The diagnostic information has been saved in /usr/share/hpt/HighPoint_2021.04.07.
tar.gz

HPT CLI>
```

Please submit the log file to our Support Department using our online services: Link.